


CC1 = Mod

CC75 = X
CC76 = Y

CC74 = Freq.
CC71 = Res.

CC77 = X
CC78 = Y

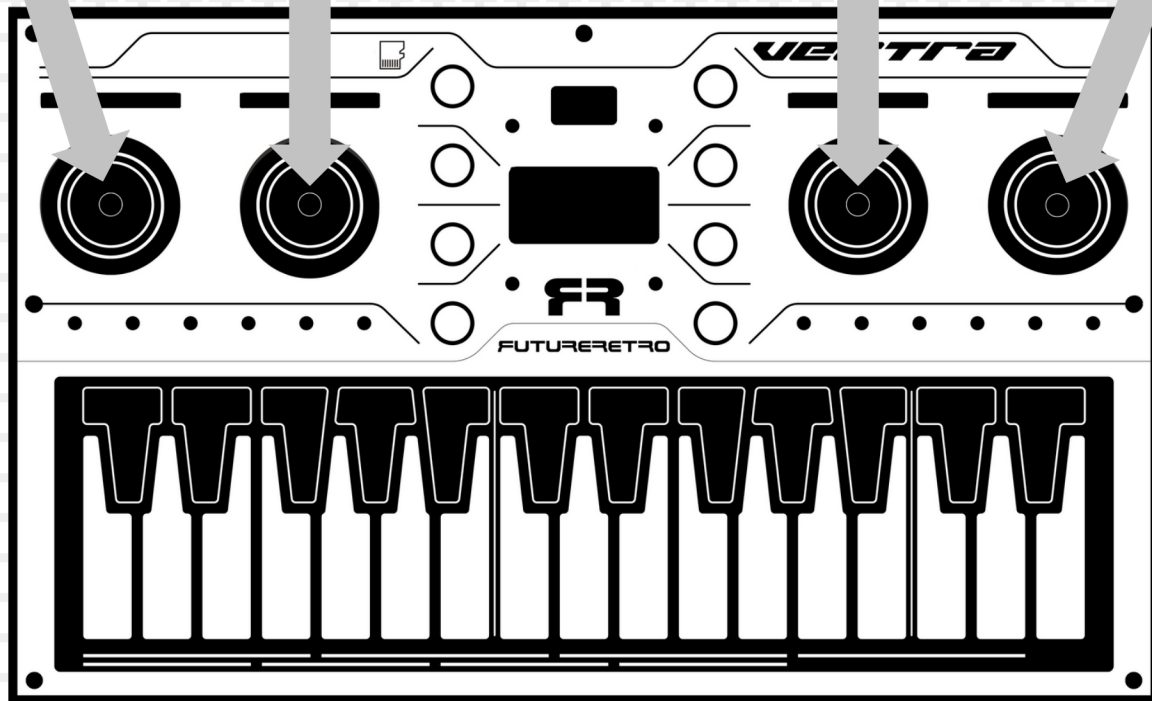

CC15 = Scale Select

CC16 = Sequence Direction

CC17 = Sequence Length

CC18 = Xpose

CC19 = Xscale

CC20 = Range

CC80 = Randomize Pitch

CC81 = Randomize Velocity

CC82 = Randomize Gates

CC83 = Randomize All

Play and Edit page

encoder 1: push to randomize pitch

encoder 2: push to randomize velocity

encoder 3: push to randomize rhythm


encoder 4: push to randomize all

encoder 5: push to start sequencer or reset to step one in external sync mode (encoder 5 works the same on all pages now, including main page)

encoder 6: push to select direction with keyboard

encoder 7: push to select length with keyboard (a few select directions on black keys)

encoder 8: push to select time signature

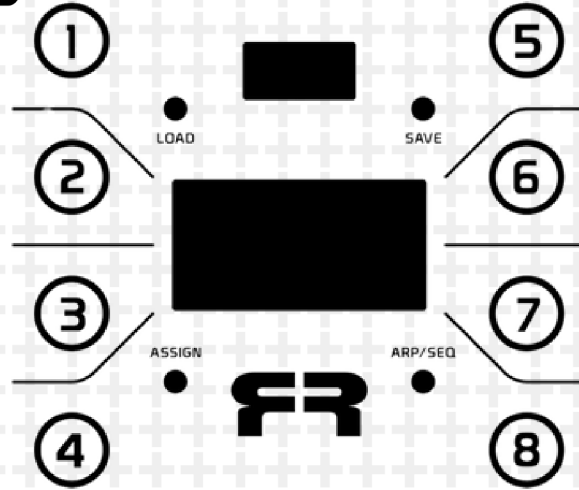

Sequencer page

encoder 1: push to select musical scale with keyboard

encoder 2: push to select semitone transpose with keyboard

encoder 3: push to select scale transpose with keyboard

encoder 4: push to select sequencer range with keyboard

encoder 5: push to start/stop sequencer (internal sync mode) or reset to step 1 (external sync mode)

encoder 6: push to select internal or external sync or turn to change bpm

encoder 7: push to select length with keyboard (a few select directions on black keys)

encoder 8: rotate to set swing