

# GUÍA DE INICIO RÁPIDO

Modelo: C00 | V1,0



## Básico



- Puerto de carga tipo C
- Conector de módulo
- Lente Emisora Láser
- Lente receptora
- Indicador de carga

- Pantalla táctil
- Botón Principal / De Medida
- Botón ON / OFF / Sleep



## Menú Principal



- Estado
- Función de interruptor
- Desliza hacia la izquierda/derecha para Funciones del interruptor
- Deslizador de página



- Menú Secundario
- Desliza hacia arriba de nuevo al menú principal

## Medida Láser



**Medida Láser**  
Mide la distancia entre dos puntos  
Max Min láser



**Número grande**  
Mide la distancia con un número mayor, diseñado para circunstancias al aire libre



**Láser Bilateral**  
Proporcionar longitud máxima, mínima y promedio




**Láser bilateral**  
Mide la distancia en ambas direcciones \*Requiere módulo bilateral 03, no incluido en la edición estándar

- Unidad
- Longitud
- Modo de Alineación
- Enviar



- Medir/Pausar/Claro
- Dormir

\*Necesita conectarse con la APLICACIÓN MEAZOR

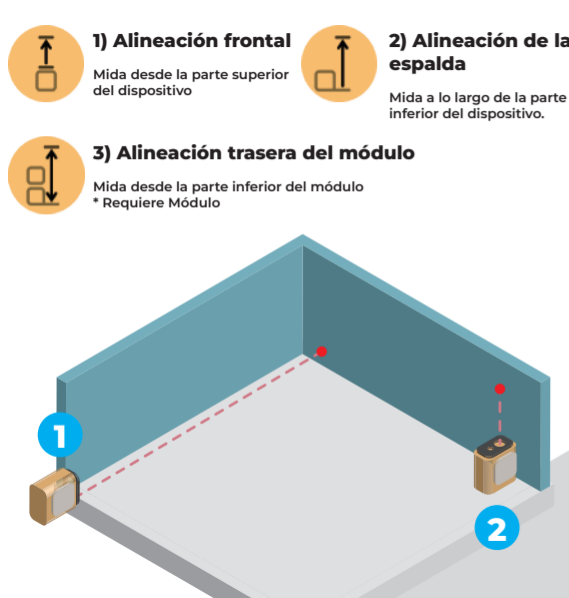

**1) Alineación frontal**  
Mida desde la parte superior del dispositivo

**2) Alineación de la espalda**  
Mida a lo largo de la parte inferior del dispositivo.

**3) Alineación trasera del módulo**  
Mida desde la parte inferior del módulo  
\* Requiere Módulo



**Pro-Láser**

**Modo de área**  
Mida la longitud de los lados A y B. El dispositivo calculará automáticamente el área del rectángulo superior

**Modo de volumen**  
Medir la altura (H) y luego medir la longitud de los lados A y B. El dispositivo sumará el volumen total del espacio

**Continúa el Área del Muro**  
Comience midiendo la altura (H). Luego, mida las longitudes de los lados A, B, C, D, etc. El dispositivo resumirá las áreas totales de todas las paredes verticales.




**Altura pitagórica**  
Mida la longitud horizontal A y la longitud inclinada C. Calcule la altura h1

**Altura Pitagórica Indirecta**  
Mida la longitud inclinada B y la longitud inclinada C. Calcule la altura h2

**Longitud Pitagórica**  
Mida la longitud vertical h1 y la longitud inclinada C. Calcule la longitud horizontal A


**Modo de ángulo**  
TPara calcular el ángulo  $\alpha$  de cualquier forma triangular, mida el borde adyacente A, C, luego Mida el tercer lado h1.

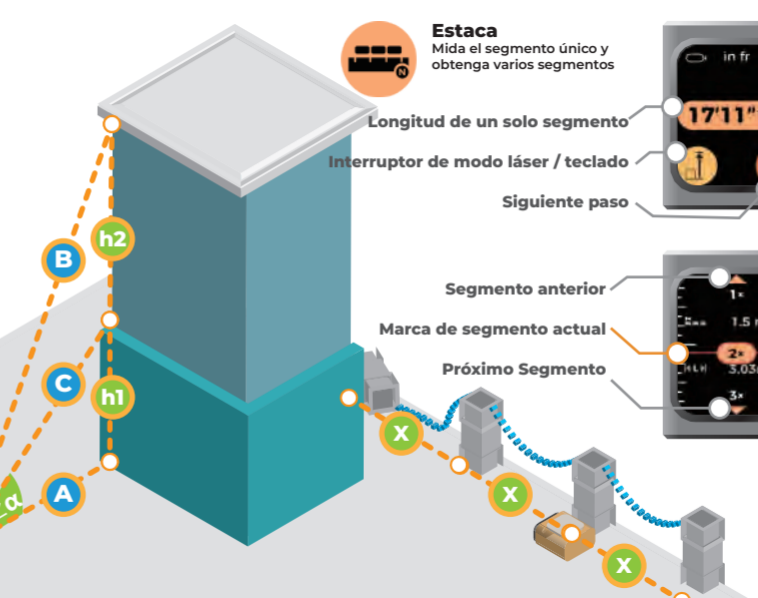

**Estaca**  
Mida el segmento único y obtenga varios segmentos

Longitud de un solo segmento  
Interruptor de modo láser / teclado  
Siguiendo paso

Segmento anterior  
Marca de segmento actual  
Próximo Segmento

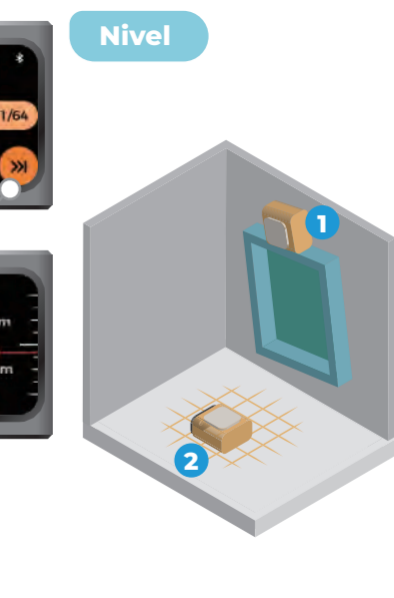

**Nivel**



**1) Nivel de eje único**  
Coloque el dispositivo con un lado hacia arriba. El producto entrará en modo de nivel de eje único.

**2) Nivel de doble eje**  
Coloque el dispositivo con la pantalla hacia arriba, el producto cambiará al modo de nivel de doble eje.

## MEAZOR APP



Available on the  
App Store

ANDROID APP ON  
Google Play

## Especificaciones técnicas

<b>Batería</b>	900 mAh, entrada: 5V-1A
<b>Materiales</b>	Plástico ABS, Plástico PC
<b>Pantalla</b>	Pantalla LCD IPS de 1,89" con Vidrio templado
<b>Resolución</b>	240ppi
<b>Precisión</b>	1/16 pulg. (2 mm) * En Circunstancias Ideales
<b>Rango</b>	164ft (50m)

**APLICACIÓN** Conexión Bluetooth Con APLICACIÓN **MEAZOR**

## Warrenty

### Warranty period

HOZO Design. CO. - One-year Limited Consumer Warranty covers your product against manufacturing defects for one year from the date you bought your product.

### How to send it for repair

If the product needs to be repaired, please contact the distributor and send the product accordingly, and provide a valid **batch number** with proof of purchase.



batch number

Support Email: [customersupport@hozodesign.com](mailto:customersupport@hozodesign.com)  
Online Form: [hozodesign.com/pages/support-center](https://hozodesign.com/pages/support-center)

### Special cases

The following cases are not covered by the warranty policy during the warranty period and will be repaired at extra cost.

- 1) Damage caused by improper use, maintenance, or storage by the user.
- 2) Dismantling of parts under unauthorized circumstances.
- 3) No proof of purchase.
- 4) The serial number does not correspond to the product sent for repair or has been altered
- 5) Damage to the body caused by force majeure
- 6) Normal wear and tear of the parts, which need to be replaced
- 7) Damage caused by abnormalities in the temperature/humidity of use or storage
- 8) Damage to the battery caused by not charging in accordance with the instructions
- 9) Any damage caused by not following the instructions.

## INSTRUCCIONES DE USUARIO EN LÍNEA

Acceso a detallados manuales de instrucciones multilingües, preguntas frecuentes y video de instrucciones en: inglés | japonés | alemán | español | italiano | francés



### Derechos de autor

Las especificaciones de los productos anteriores están sujetas a cambios sin previo aviso. Todos los derechos de interpretación están reservados por HOZO DESIGN CO. Todas las marcas registradas, imágenes, datos técnicos y derechos de propiedad intelectual son propiedad de HOZO DESIGN CO., Limitada y están sujetas a una infracción de derechos de autor.



## Basic

### Rear Measuring Button

Trigger Auto-Align from the position of the Rear Button

### Locking Buckle

Press buckles on both sides to unlock the module

### Drawing Mode Switch



Allows the Joystick to draw lines in any direction

Limits the Joystick to draw lines at 90/45 degrees

### 2×AA Battery Console

### Front Measuring Button

### Drawing Joystick

### Undo Button

\* Long Press to clear the drawing board

### Battery life Indicator

Indicates the battery life of 2xAA Batteries, not for the battery in the main module.

### Contour Enclosure

### Auto Leveling

### Current Measurement

### Swipe to Enter Drawing Panel

### Send Drawing to App

### Auto Align

\*Tap to switch to manual alignment

### Measurement Display

Blue: Current measuring data

Orange: Locked data

### Drawing Contour

### Drawing Direction

Swipe to enter Control Panel

## Tech Specs

### Battery

Adapt with 2×AA Batteries (Not Included)

### Power

Input: 5V--1A, Output:5V--1A

### Materials

ABS Plastic, PC Plastic, Aluminum Alloy

### Joystick

360 deg with 1deg resolution


# QUICKSTART GUIDE

Model : C-M01 | V1.0



### Smart Room

Point the laser at a wall to measure it. Then, use the joystick to pick the wall's direction. Do this for each wall to measure the whole room.

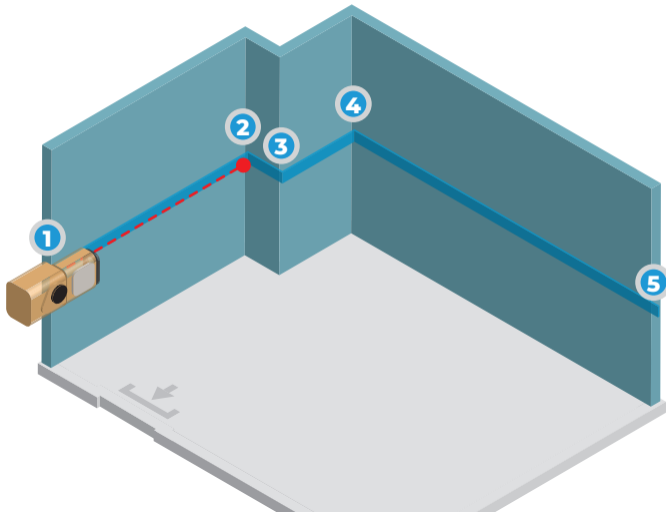

### 1) Measure a Wall

Place the product at the starting point (1), aim it towards the endpoint (2), and press the Measure button to lock the distance. Then, press the Measure button again to draw the first line on the drawing panel.



### 2) Choose Direction for the Next Wall

Use the joystick to point in the direction of the next wall. Repeat the measuring process to draw walls 2, 3, 4, and 5 in order. Make sure each new wall is next to the previous one.



### Auto-Leveling

This feature calculates the horizontal distance between walls, minimizing potential errors during measurement. Example: When measuring wall AB with an obstruction at point B, measure to point Ab' instead. The device will then calculate the actual horizontal length of AB.




### Auto-Leveling unavailable

Auto-leveling may be disabled if the device is excessively tilted (beyond 30°).



### Auto-Leveling Off

The auto-leveling feature can be manually turned off as per user preference.

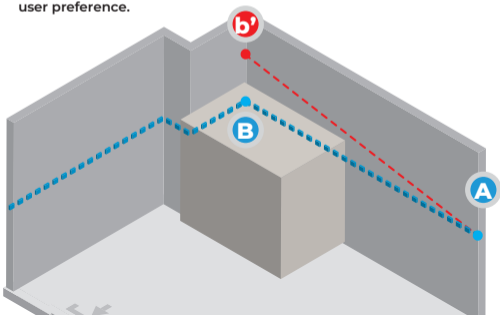

### Auto Alignment

The device automatically selects the starting point based on how the measuring is triggered.


### Front button Trigger

Activating the front measuring button aligns the device from the bottom of the module.



### Rear button Trigger

Using the rear measuring button aligns the device from the gap between the main unit and the module.

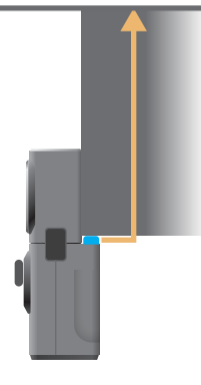


### Contour Enclosure

Connect the starting point of the first wall to the endpoint of the last wall. This creates a closed contour, which can be sent to the app for easier area calculation.

### Contour Enclosure OFF



### Contour Enclosure ON

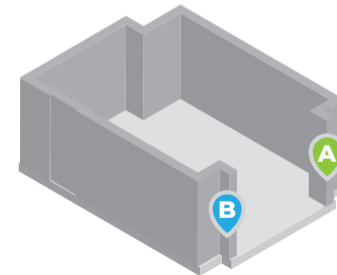



## Basic

### Locking Buckle

\* Press buckles on both side to unlock module

### Cross Laser ON/OFF

### Back/Clear Button

### Receiver Lens

### Physical Bubble Level

### Laser Emitter Lens

### Cross Laser Line Emitter

# QUICKSTART GUIDE

Model : C-M03 | V1.0

## Tech Spec

<b>Power</b>	input:5V-1A
<b>Materials</b>	ABS Plastic, PC Plastic, Aluminum Alloy
<b>Accuracy</b>	±1/8in (± 3mm)* In Ideal Circumstances
<b>Range</b>	Max 330ft(100m) with dual side
<b>Cross Laser</b>	520nm(Green Beam) 90° expanded angle





### Bilateral Laser Measuring

Enables measurement from both ends of the device to swiftly determine the distance between two walls.




### 1) Dual Align

Engage the laser from both ends of the device for measurement




### 2) Tripod Align

Utilize the device's tripod hole for aligned measurements.

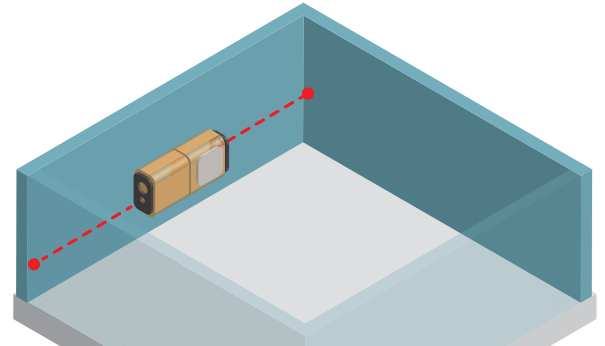

### Auto-Leveling

The product automatically calculates the horizontal distance between walls, reducing the likelihood of measurement errors.

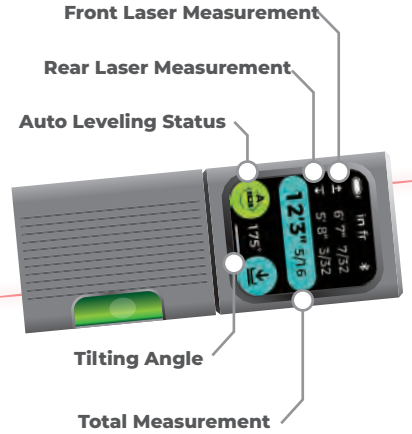

### Auto-Leveling ON

When measuring wall AB, if you measure line a'b', the device will automatically calculate the horizontal length of AB.




### Auto-Leveling unavailable

Auto-leveling becomes inactive if the device is tilted at a large angle (exceeding 30°).



### Auto-Leveling Off

The Auto-Leveling feature can be manually deactivated as needed.

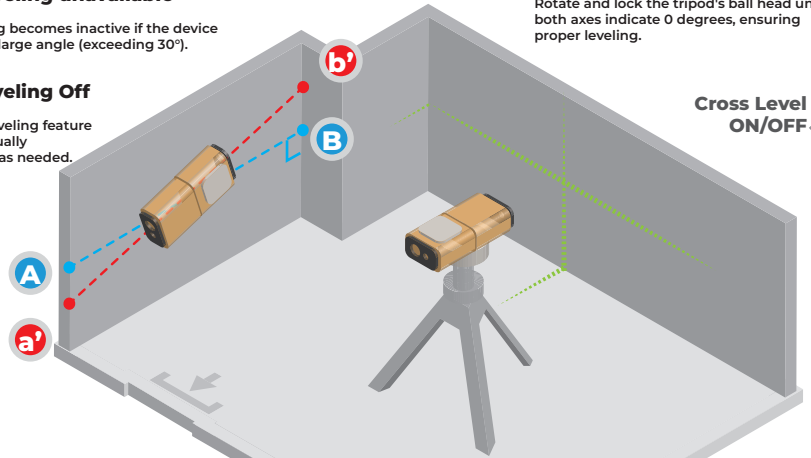

### Cross-Laser Leveling

Press the Green Cross button located on the side of the module to activate the cross-line feature.

### Adjusting for Level

Rotate and lock the tripod's ball head until both axes indicate 0 degrees, ensuring proper leveling.





# QUICKSTART GUIDE

Model : C-M05 | V1.0



## Basic

**Locking Buckle**  
\* Press buckles on both side to unlock module

**Laser Measure ON/OFF**

**Back/Clear Button**

**Rolling Ruler ON/OFF**  
Tap or hold the button to start measuring.  
Tap again or release to stop measuring.

**Cross Laser Line Emitter**

## Tech Spec

<b>Power</b>	input:5V-1A
<b>Materials</b>	ABS Plastic, PC Plastic, Aluminum Alloy
<b>Accuracy</b>	±1/32in (± 1mm)* or ±0.2% In Ideal Circumstances
<b>Range</b>	Max 330ft(100m) with 0.5mm resolution
<b>Cross Laser</b>	635nm(Red Beam)
<b>Scales</b>	93 built-in scales in 8 modes +Customized Scales



## 41 Built-in Metric Scales

Arch	ENG I	ENG II	MAP
$\sqrt{1}$			
$\sqrt{2}$	$\sqrt{125}$	$\sqrt{1000}$	$\sqrt{100k}$
$\sqrt{3}$	$\sqrt{150}$	$\sqrt{1250}$	$\sqrt{125k}$
$\sqrt{4}$	$\sqrt{200}$	$\sqrt{1500}$	$\sqrt{200k}$
$\sqrt{5}$	$\sqrt{250}$	$\sqrt{1625}$	$\sqrt{250k}$
$\sqrt{10}$	$\sqrt{300}$	$\sqrt{2000}$	$\sqrt{500k}$
$\sqrt{20}$	$\sqrt{400}$	$\sqrt{2500}$	$\sqrt{1000k}$
$\sqrt{25}$	$\sqrt{500}$	$\sqrt{5000}$	$\sqrt{2000k}$
$\sqrt{30}$		$\sqrt{6000}$	$\sqrt{2500k}$
$\sqrt{40}$		$\sqrt{10k}$	
$\sqrt{50}$		$\sqrt{12.5k}$	
$\sqrt{72}$		$\sqrt{20k}$	
$\sqrt{75}$		$\sqrt{25k}$	
$\sqrt{100}$		$\sqrt{50k}$	



### Rolling Ruler

Roll the ruler across the object's edge while using the laser line for guidance. Utilize the perpendicular laser line to determine the start/end points.

### Point-to-Point Align

Measure from the start to the end point, both centered on the rolling wheel.

### Point-to-Side Align

Start measuring from the center of the rolling wheel, ending with the left side of the device. An additional width of 1.69 inches (43 mm) will be included in the measurement.

### Scale Ruler

Choose from 93 standard scales. Use the rolling ruler to measure along a line on a printed scaled drawing, aided by the laser line.

### Customized Scale Ruler

For Drawings with Non-Standard Scales Use this feature when drawings are off-scale or in non-standard scales. The device will calculate the measuring scales based on inputted lengths.

#### Step 1: Measuring Drawing Length

Measure the length on the drawing using the rolling ruler or input the length manually via the keypad.

Select either the rolling ruler or keypad for inputting the length.


#### Step 2: Measuring Actual Length

Measure the actual length of the object corresponding to the drawing using the laser measure or input the length manually via the keypad.

Choose either the laser measure or keypad for inputting the length.

## 52 Built-in US Standard Scales

Arch	ENG I	ENG II	MAP
T = T			
6" = T	T' = 10'	T' = 300'	T' = 1Mi
4" = T	T' = 20'	T' = 333'	T' = 15 Mi
3" = T	T' = 30'	T' = 46.6'	T' = 2 Mi
2" = T	T' = 40'	T' = 500'	T' = 3 Mi
1 1/2" = T	T' = 50'	T' = 583.3'	T' = 4 Mi
T' = T	T' = 60'	T' = 600'	T' = 5 Mi
3/4" = T	T' = 70'	T' = 625'	T' = 6 Mi
1/2" = T	T' = 80'	T' = 666'	T' = 10 Mi
3/8" = T	T' = 83.3'	T' = 750'	T' = 20 Mi
1/4" = T	T' = 90'	T' = 1000'	T' = 24 Mi
3/16" = T	T' = 100'	T' = 1200'	T' = 25 Mi
1/8" = T	T' = 166.6'	T' = 2000'	
3/32" = T	T' = 200'	T' = 3000'	
1/16" = T	T' = 250'		

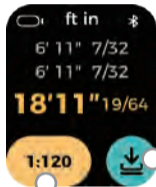

Sending Measurements to the App

Select Scale



Press Measure button to confirm scale

Switching Scale Modes  
Swipe left or right to toggle between Metric and Imperial modes.



## Smart Planner

Get smarter on floorplanning




### Flexibility to adapt

To capture floorplan with any angle and any structure.



8 Directions & 360°

### One-Tap Button



## Bilateral Laser +

Fastest Results + Versatile Demands



### Bilateral Laser

Bilateral Laser

328 ft  
100M

Precision

$\pm 1/8$  in  
 $\pm 3$ mm



### Advanced Auto-Calibration



## Scale Roller

From curves to lines, measure on any scale




### Object Measurement




### Clear to See




93 Built-in scales

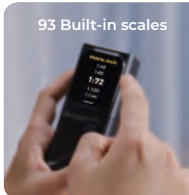

Customized scales

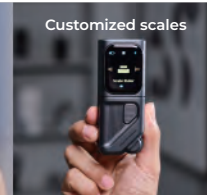

Object measurement

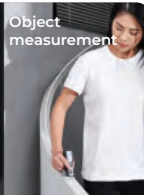

### M-Green Line



### Precision with Cross-line Projection

