


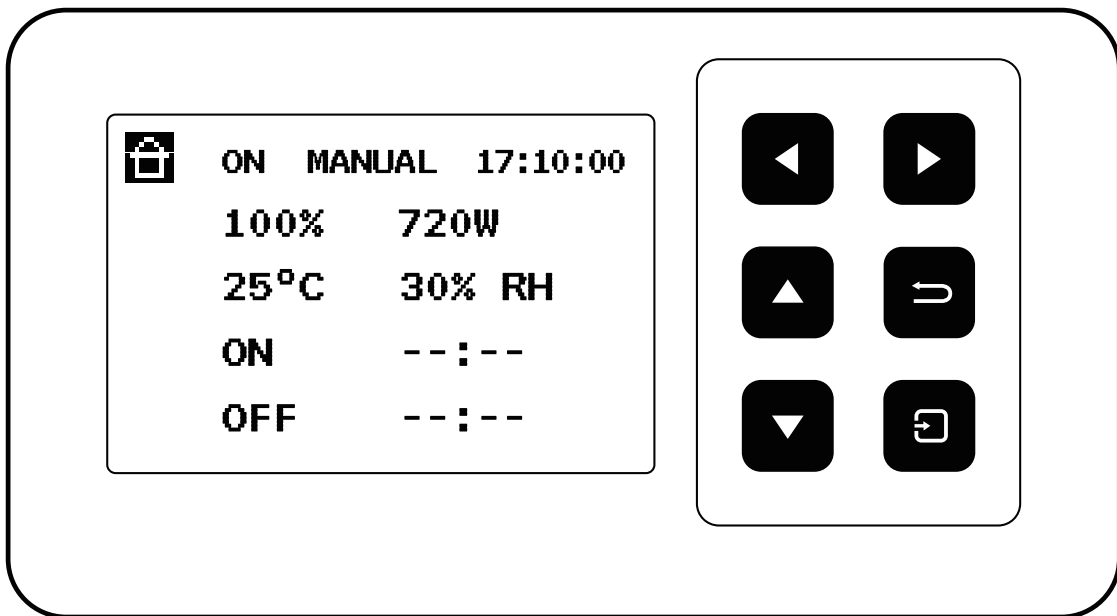

A D J U S T A - W A T T L I N K **30**

L I N K I N G C O N T R O L L E R



INSTRUCTIONS

Simultaneously
controls up to

30 BALLASTS




2 YEAR


WARRANTY

Packing Accessories


- A** LED Controller x1
- B** 0-10V Cable x1
- C** PWM Cable x1
- D** Power Adaptor x1
- E** Temperature & Humidity Sensor x1
- F** AC Power Cable x1
- G** Screws x2
- H** Screw Anchor x2

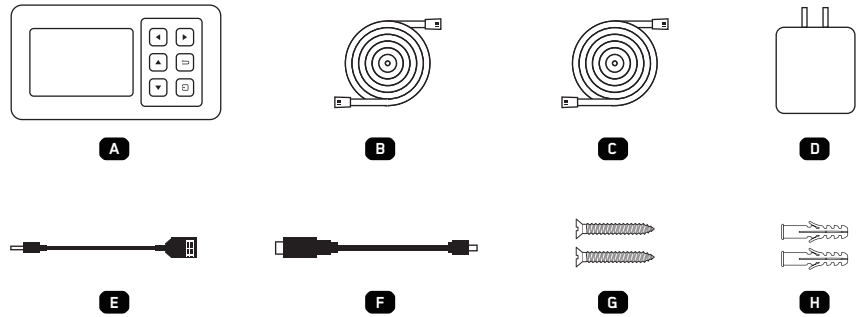

Specifications:

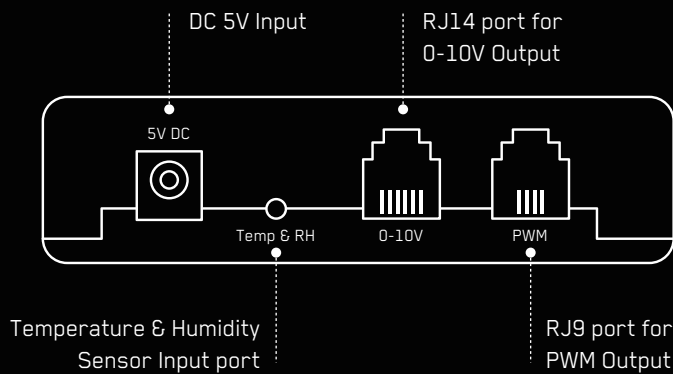


Input Power:	5v / 2A
Out Signal:	0-10v / 50mA
Ambient Temperature:	0-40°C
Max Linked Quantity:	30 Ballasts
Daisy Chain Ports:	0-10V (or) PWM
Housing Material:	ABS Plastic
Weight:	310g
Dimensions:	145mm x 80mm x 28mm 5.7" x 3.1" x 1.1"

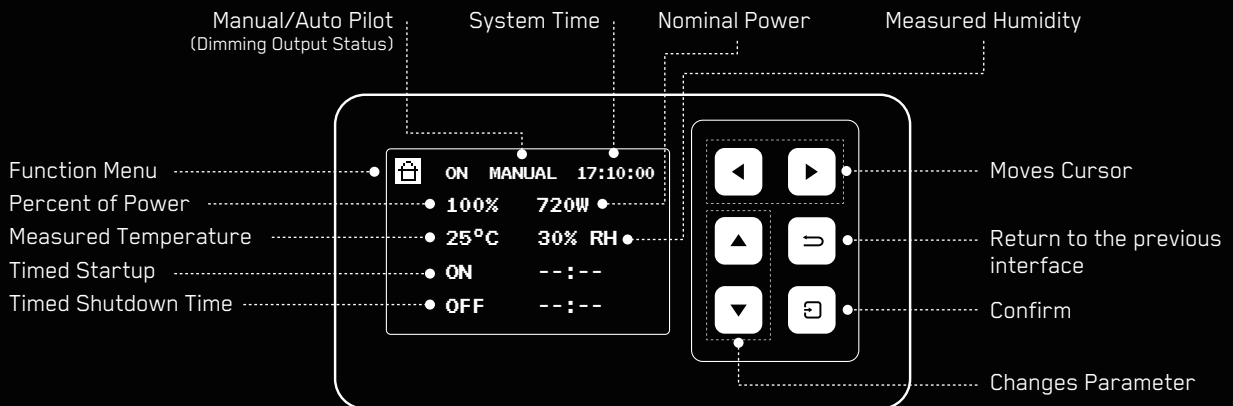


PWM Control System


Built-in PWM Control Feature, through out main controller, simultaneous control up to 30 ballasts.

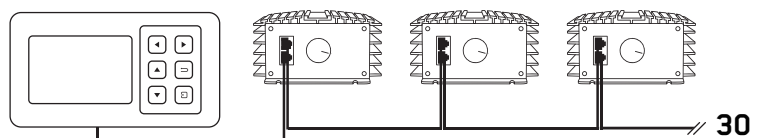


Product Installation

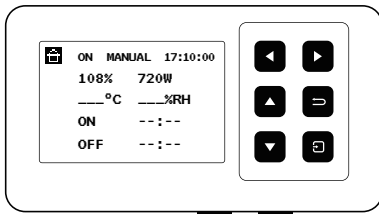


Move cursor to the Function Menu icon and press **ENTER**

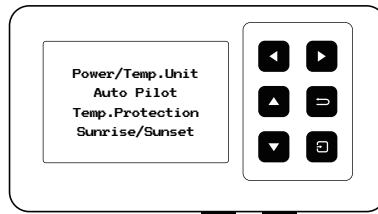

Move the cursor in the function menu to select the function you want to set

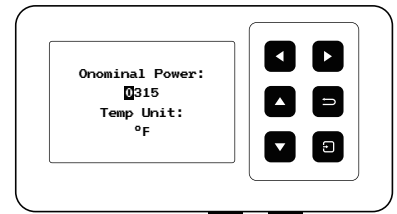

Power/Temp.Unit Setting
Move cursor to the "Power/Temp.Unit" and press **ENTER** Setting Nominal Power and Temperature Unit.

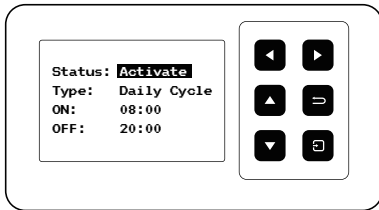


Auto Pilot Setting
Move cursor to the "Auto Pilot" and press **ENTER** Program timer settings:

2.1. Daily Cycle:

Turn ON at hh:mm
Turn OFF at hh:mm

2.2. Custom Cycle:

xx:xx hours to OFF
xx:xx hours to ON

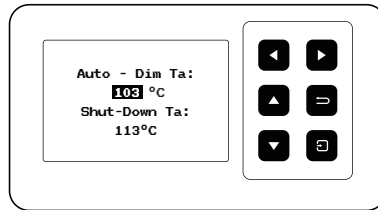


Temp.Protection Setting
Move cursor to the "Temp.Protection" and press **ENTER** Setting the protection conditions based on ambient temperature.

NOTE:

It will automatic DIMMING DOWN to 50% when ambient temperature higher than the set Auto-Dim Ta level.

It will automatic SHUTTING OFF when ambient temperature higher than the set shut-down Ta level.

It will automatic recover if ambient temperature dropped greater 5 degree than set level.

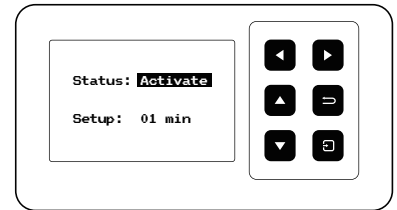

Sunrise/Sunset Setting
Move cursor to the "Sunrise/Sunset" and press **ENTER**

Activating or Disabling the Sunrise/Sunset, and setting the Ramp Time.


How to Connect:

Attach the controller to a vertical surface with provided screws and screw anchors.

Note: Keep the controller away from heat. The distance between the two mount holes is 6.7cm.

Connection of temperature humidity sensors:



Find a suitable place for the temperature sensor and the controller. Hang the sensor between the plants on average canopy height and preferably not against the wall. Do not position it in direct airflow and kept away from direct heat. Connect "TEMP&RH" port showed in page 2 with temperature and humidity sensor.

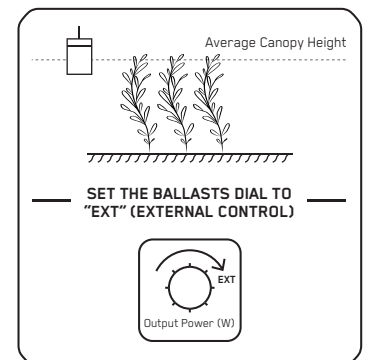

Connection of led fixture:

Make sure the rotary knobs are all set to "EXT"(external control). Connect one end of the cable to "0-10V" port or "PWM" port showed in page 2 and the other end to the first connected fixture. Use the supplied interconnect cables to daisy chain up 30 LED fixture (depends on quantity of driver or ballast). Plug all ballasts power cords and the controller power supply directly into mains.

LINK 30
LINKING CONTROLLER

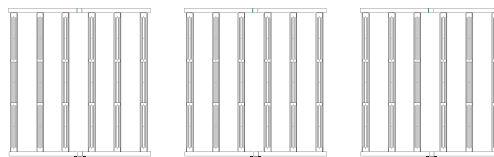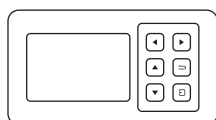

Up to 30 LED fixtures



Safety Recommendations

Please carefully read recommendations and warnings before installing and using the controller! The installation and use of the controller is the responsibility of the end user. Incorrect installation can cause damage to the product. The warranty shall become void if the product and/or electronic components are damaged due to incorrect installation.

WARNING

1. Always adhere to the local building and electrical codes (local rules and regulations) when installing or using the controller with light fixtures.
2. Do not use the product when either the controller or its power cable are damaged. Modifications to the cables can lead to unwanted electromagnetic effects which may damage the product.
3. Protect power cables from being pinched, walked on, or otherwise damaged
4. Do not use the controller near flammable, explosive or reactive substances.
5. Keep the controller in a cool and dry environment, away from dust, heat and moisture.
6. Make sure all RJ and power cords are safely routed away from heat, moisture, mechanical movement, or anything that may damage cords.
7. The controller is designed to work with GG Rj14 data cords. Using other brand or non-RJ14 data cords could cause malfunctions and may void the warranty.

CAUTION

1. Do not use abrasives, acids, or solvents to clean the controller. Use a soft, dry cloth to clean the controller.
2. Do not open and/or disassemble the controller as it contains no serviceable parts inside. Opening and/or modifying the controller can be dangerous and will void the warranty.
3. The product may not be exposed to moisture, condensing humidity, contamination, or dust.

Distributed in the UK & Europe by

FDP WHOLESALE

+44 (0) 1392-848399 | www.fdpwholesale.co.uk

MANUFACTURED BY:
SOLDIGITAL
WWW.SOLDIGITAL.CO.UK

Designed in UK, Assembled in China


ADJUSTA-WATT


SOLDIGITAL



BALLASTS



LEDS



CONTROL



ADD-ONS

SHINE BRIGHTER, GROW SMARTER