



**AVISO!**

Su ventilador de techo y luz de montaje deberían cumplir con los siguientes requisitos:


1. No instale este ventilador con un control de estado sólido de velocidad.

Se produce daño permanente al receptor y hace que la función del ventilador fracase.

**PRECAUCIÓN:** El ángulo de techo no puede exceder más de 30 Grados, para poder montar el controlador. Modelos MR36T

Este producto esta protegido por la Federal de los Estados Unidos y/o del Estado de Derecho, incluyendo patentes, marcas y/o leyes de derecho de

Diseño del manual y todos los elementos del diseño de manual están protegidos por EE.UU. y / o federales del Estado de Derecho, incluyendo patentes, marcas y / o derechos de autor.

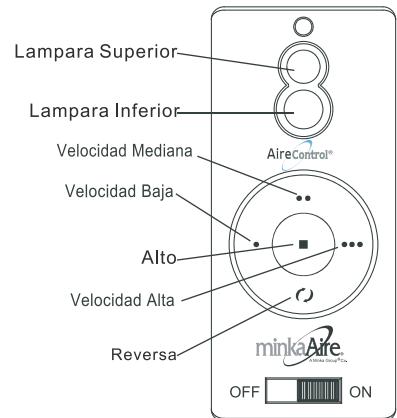



# AireControl® Universal Touch Control™

## INSTALLATION & OPERATING INSTRUCTIONS

For model WCS212

U.S. Patent: D533,514

8,253,272

### WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER

The WCS212 AireControl System is equipped with a learning frequency function which has 256 code combinations to prevent potential interference from other remote units. The frequency on your Receiver and Transmitter units have been preset at the factory. We recommend setting up frequency while installing ceiling fan instead of using initial frequency set by factory. (Fig 1.) Please use a small size tool to change the setting.

#### Safety Precautions:

**WARNING: Disconnect source of electrical power by removing the fuse or switching off circuit breakers.**

- Do not use with solid state fans.
- Electrical wiring must meet all local and national electrical code requirements.
- Electrical source and fan must be 115/120 volts, 60 hz.

Maximum fan motor amps 1.5. Maximum light watts 190-incandescent only.

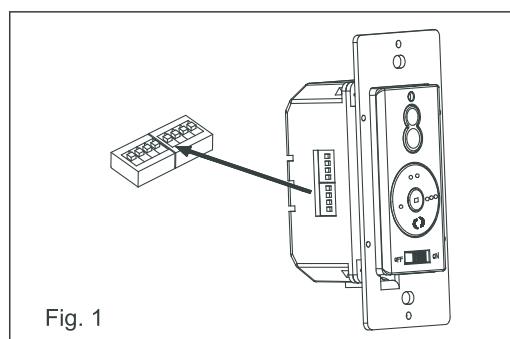


Fig. 1

#### 1. WALL TRANSMITTER INSTALLATION

**WARNING! HOOK UP "IN SERIES" ONLY. DO NOT CONNECT NEUTRAL SUPPLY WIRE OF ELECTRIC CIRCUIT TO THE TRANSMITTER WALL SWITCH, DAMAGE TO THE TRANSMITTER WALL SWITCH AND POSSIBLE FIRE COULD OCCUR.**

**Step 1.** Remove the existing wall plate and switch from the wall outlet box.

**Step 2.** Make the electrical connections as shown in Fig.2. If your outlet box has a ground wire (Green or Bare Copper) connect the Wall Transmitter's ground wire to it. Otherwise connect the Wall Transmitter's wire directly to one of the screws from the outlet box . Secure all wire connections with the plastic wire nuts provided.

**Step 3.** Carefully tuck the wire connections inside the outlet box. Use the screws provided to secure the wall transmitter and wall plate to the outlet box. (Fig. 3)

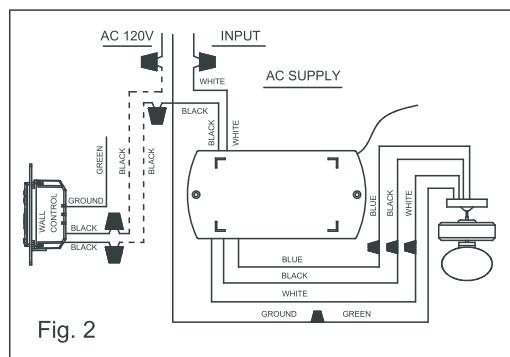


Fig. 2

#### 2. OPERATING THE WALL TRANSMITTER

The WCS212 Touch Control™ System includes two sets of face and decorative plate color options. The wall control comes with a standard white faceplate attached. If you desire to replace it with the Ivory color faceplate, use a small flat screw driver and gently pry it apart from the top or bottom of the plate.

##### 1. Light Button:

Press and release the button to turn the light ON or OFF. Press and hold the button to set the desired light brightness. The light will cycle between bright and dim settings as long as the button is pressed. The light key has an automatic auto-resume feature that allows the light to remain at the same brightness as the last time it was turned off. The Up-light button applies to ceiling fans that feature an Up-light only.

##### 2. Speed Buttons

Press and release the button for the desired speed.

##### 3. Reverse Button

Use this button to change the blade rotation

##### 4. Stop Button

This button stops the fan

##### 5. On-OFF

This button turns the power off for the fan and light.

The installation of your new WCS212 Touch Control System is complete.

#### 3.CREATING A UNIQUE FREQUENCY

Step: 1. Within 60 seconds of turning the Receivers AC power ON. Press the transmitter's "Stop" button.

**Note: After the AC power is on, do not press any other button on the transmitter before pressing the "Stop" button doing so will cause the procedure to fail.**

Step: 2. Hold the "Stop" button for over 3 seconds, once the receiver has detected the frequency, the down light will flash twice. This will indicate the receiver has learned the frequency that was previously selected on the transmitter.

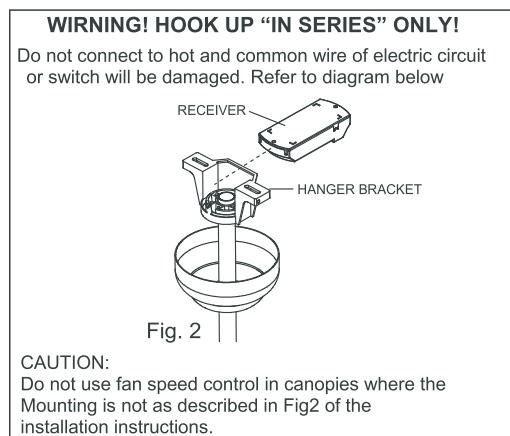


Fig. 2

##### CAUTION:

Do not use fan speed control in canopies where the Mounting is not as described in Fig2 of the installation instructions.

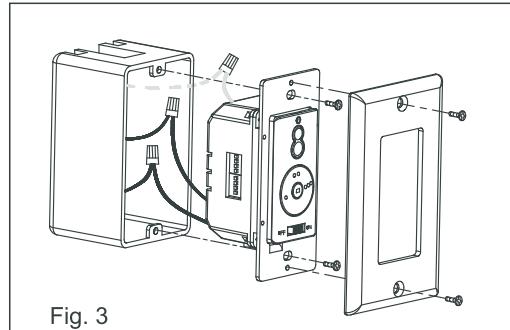


Fig. 3

After completing the steps above, you should be able to operate the ceiling fan and light. If the fan is not responding to the transmitter, please turn the off power of to the receiver and repeat Step 1 and 2.

## NOTICE!

Your ceiling fan and light kit assembly must meet the following requirements:

1. Do Not install this fan with wall solid state speed control or wall light dimmer control.

It will permanently damage the receiver of remote control and cause the fan function failure.

## CAUTION:

Ceiling Angle shall Not Exceed 30 Degrees, For Mounting controller. Models MR36T

This product is protected by United States Federal and/or State Law, including Patent, Trademark and/or Copyright laws

Manual design and all elements of manual design are protected by U.S. Federal and/or State Law, including Patent, Trademark and/or Copyright laws.

