




BLAZANT

User Manual

Fuel a New Life

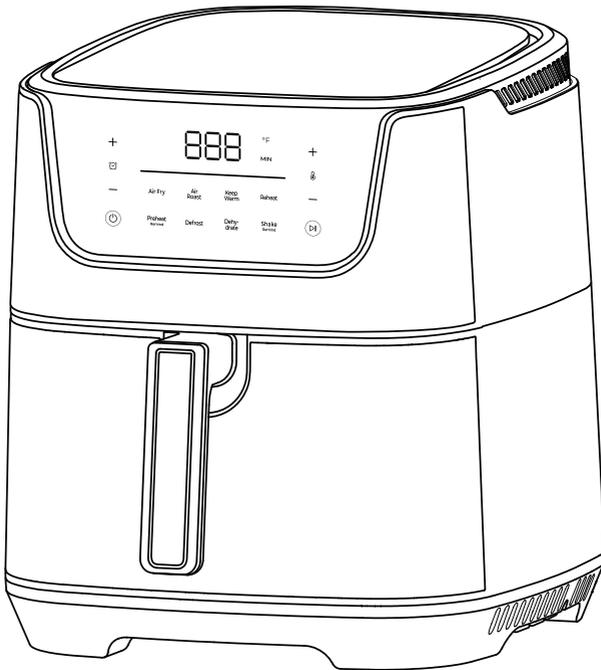

FLARE™ T01

Digital Air Fryer

7.0QT/6.6L

“When it comes to even the smallest details
of the BLAZANT FLARE™, we went big.
Delivering cooking pleasure meal after meal.”

- **BLAZANT Team**

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	2
Overview	6
Control Details	7
FLARE™ Lighting Language	9
Technical Parameter	9
OPERATING THE AIR FRYER	10
Before First Use	10
How to Cook with BLAZANT Air Fryer	10
Auto Keep Warm	11
Disable/Enable Button Beeping	11
Cooking Temperature & Time Charts (Cheat sheet)	12
MAINTAINING YOUR AIR FRYER (CLEAN & STORE)	12
TROUBLESHOOTING	13

READ ALL INSTRUCTIONS BEFORE USE

For your safety and continued enjoyment of this product, always read the instruction manual before using.

IMPORTANT SAFETY INSTRUCTIONS

Read and follow all instructions before using your Air Fryer to prevent the risk of fire, electric shock, personal injury, or damage when using the air fryer.

This guide does not cover all possible conditions that may occur. Always contact our service team about problems that you do not understand.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Warnings and important safety instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your oven.



Key Safety Points

Do not touch hot metal surfaces/ventilation openings. Use handles to insert/extract the air fry basket.

IMPORTANT SAFETY INSTRUCTIONS



General Safety

Do not use appliance outdoors or for commercial purposes. For household use only.

Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.

This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.

Make sure the appliance is cleaned thoroughly before using.

Only use the appliance on a stable, dry surface.

Oversize foods, metal foil packages and utensils must not be inserted in the Air Fryer as they may involve a risk of fire or electric shock.

Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.

Do not clean the unit with metal scouring pads.

IMPORTANT SAFETY INSTRUCTIONS



Fire & Burn

Remove all bags and packaging from appliance before use.

Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

Do not place any of the following materials in the Air Fryer: paper, cardboard, plastic and similar products.

Allow to cool before putting on or taking off parts.

Use recommended temperature settings for all cooking modes.

Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.

Do not allow the appliance to be covered by or touch flammable materials such as curtains, draperies or walls, when in operation.

Do not cover any part of the oven with metal foil. This will cause overheating of the oven.

Do not store/cover any items on top of the appliance when in operation.

Do not let the cord touch hot surfaces or hang over the edges of tables or counters.

IMPORTANT SAFETY INSTRUCTIONS



Plug & Cord

To protect against electrical shock do not immerse cord or plugs or appliance in water or other liquid.

Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner.

Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally. If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.


A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

Do not attempt to dislodge food when the appliance is plugged into electrical outlet.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

INTRODUCING YOUR NEW AIR FRYER

Overview

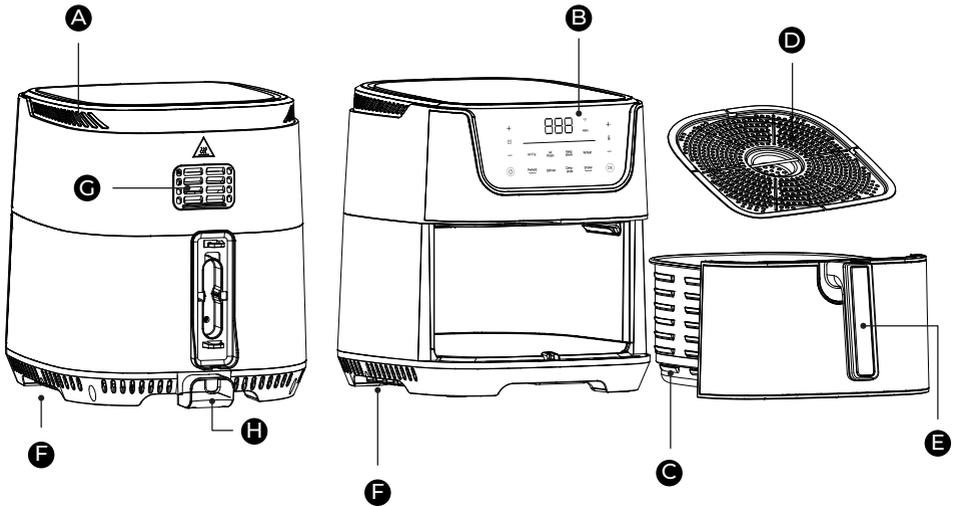

A Air Inlet

D Crisp Tray

G Air Outlet

B Control Panel

E Basket Handle

H Power Cord

C Air Fry Basket

F Unit Handles

Control Details

Time Control Buttons


Increase/Decrease cook time

Temp/Time LED Display

Toggles between time and temperature

Temperature Control Buttons

Increase/Decrease temperature

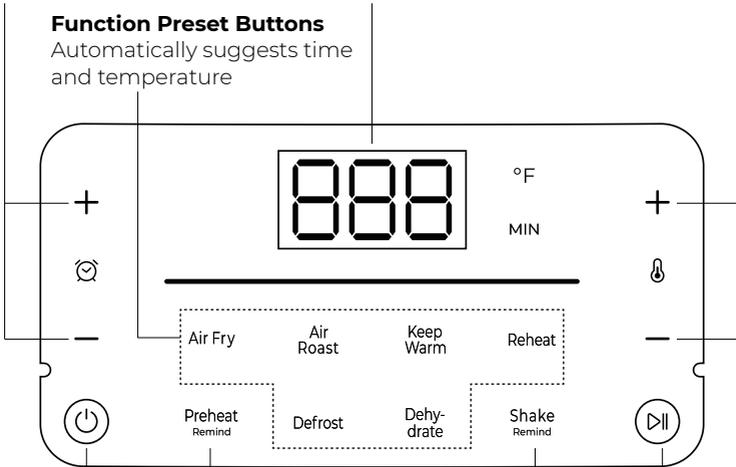

Function Preset Buttons
Automatically suggests time and temperature

Preheat Remind Button & Indicator

Let you decide whether you want to preheat the unit.

Start/Pause Button

Starts or Pauses cooking cycle

Power/Cancel Button

Turns on/off unit or cancels current setting or cooking

Shake Remind Button & Indicator

Reminds you to shake/flip food

Preheat Remind Button & Indicator

Preheat allows your food to cook evenly at the correct temperature.

•Press to add or remove a Preheat Reminder before or after starting a cooking cycle.

Note: Preheat Remind only appears when “Air Fry” or “Air Roast” are selected.

Note: Preheat Remind only appears when the cavity temperature is lower than the temperature on the display.

•The unit will preheat until reaching the set temperature (temperature on the display). The timer doesn’t count during preheating.

•When preheat is done, the unit will beep every 30 seconds for 3 minutes in total to let you add food, and Preheat Remind button also blinks quickly. If no action is taken, the unit jumps into the cooking cycle automatically.

Shake Remind Button & Indicator

Shake the food helps ensure the air is able to reach all food surfaces.

•Press to add or remove a Shake Reminder before starting a cooking cycle.

Note: Shake Remind only appears when “Air Fry”, “Air Roast”, “Defrost” or “Dehydrate” are selected.

The unit prompts Shake Reminder base on your setting. The unit will BEEP, and Shake Remind button will BLINK for 30 seconds. If you don’t do anything within this 30secs, the unit jumps into the remaining cooking cycle automatically.

Function Preset Buttons

Press to select the corresponding cooking function.

FUNCTION	Default Time	Default Temp
Air Fry (default)	18 min.	400°F
Air Roast	10 min.	350°F
Keep Warm	30 min.	180°F
Reheat	4 min.	350°F
Defrost	15 min.	120°F
Dehydrate	4 hrs.	130°F

FLARE™ Lighting Language

Light speaks to you

The uniquely-styled lighting language is easily distinguishable. Integrated with LED through lights, the Air Fryer translates functions such as cooking, pausing, keeping warm, and preheat/shake remind into glowing red lighting signals, creating language that's exclusive to you.

Technical Parameter

Product Name: Air Fryer Cooker	Rated Voltage: 120Volts
Product Model: T-01	Rated Frequency: 60Hz
Cooking Capacity: 6.6 Liters/7.0 Quarts	Rated Power: 1700Watts

OPERATING THE AIR FRYER

Before First Use

For best results, follow these steps before using your air fryer for the first time.

1. Remove all packaging materials, such as plastic bags and foam inserts. Check to ensure that all parts and accessories are accounted for.
2. Read and remove any stickers on the unit except for the rating label on the bottom, which should remain on the unit.
3. Wipe down the interior and exterior with a damp cloth. Wash the basket with warm, soapy water. Dry thoroughly.

How to Cook with BLAZANT Air Fryer

1. Remove the Basket from the air fryer, and make sure that the Crisp Tray is inserted in the Basket. **Place food in the Basket on the Crisp Tray** to allow for good air circulation, do not fill the basket past the MAX line.
2. After adding food **slide the Basket back inside the air fryer.**
3. **Press the power button (lower left button) to activate the air fryer from standby mode.**
4. **Set the time and temperature as desired, or use cooking preset functions.** If cooking with presets, choose the button that best represents the function you're cooking with.
5. **Press to add a Preheat Reminder (optional).**
Preheat allows your food to cook evenly at the correct temperature.
Press to add or remove a Preheat Reminder before or after starting a cooking cycle.

Note: Preheat Remind only appears when “Air Fry” or “Air Roast” are selected.

Note: Preheat Remind only appears when the cavity temperature is lower than the temperature on the display.

- The unit will preheat until reaching the set temperature (temperature on the display). The timer doesn’t count during preheating.

- When preheat is done, the unit will beep every 30 seconds for 3 minutes in total to let you add food, and Preheat Remind button also blinks quickly. If no action is taken, the unit jumps into the cooking cycle automatically.

6. Press to add a Shake Reminder (optional) .

Shake the food helps ensure the air is able to reach all food surfaces.

- Press to add or remove a Shake Reminder before starting a cooking cycle.

Note: Shake Remind only appears when “Air Fry”, “Air Roast”, “Defrost” or “Dehydrate” are selected.

The unit prompts Shake Reminder base on your setting. The unit will BEEP, and Shake Remind button will BLINK for 30 seconds. If you don’t do anything within this 30secs, the unit jumps into the remaining cooking cycle automatically.

7. Press Start (lower right button).

The fan will come on and LED strip indicator will animate.

Hit Start button anytime to pause the cooking process.

NOTE: During cooking, you can remove the basket to check on, turn, or shake foods. When you return the basket to the unit, the timer and heating will resume where they left off.

8. When the timer is done, the air fryer will turn off automatically. Remove the basket from the air fryer. Check food for doneness, then carefully transfer food to plates or a platter and serve.

NOTE: On first use, the unit may emit a slight odor, which is normal and will dissipate with use.

Auto Keep Warm

When the cooking cycle finishes, the air fryer keeps beeping periodically for 3 minutes. If no action is taken, the air fryer automatically switches to the Keep Warm mode. In this mode, the air fryer keeps the food at 180°F for 1 hour.

Disable/Enable Button Beeping

If the buzzer sound bothers you when pressing any button on the control panel, you can choose to MUTE/UNMUTE it.

Locate and push the “+” buttons of Time and Temperature control simultaneously and hold them down for 5 seconds.

Cooking Temperature & Time Charts (Cheat Sheet)

We are proud to offer you our magnetic cooking cheat sheet. You can stick it on your fridge to have the best temperature and time combine for the specific food type. Note that the times require preheat. If not preheating, please add a few minutes to the cook time.

When air frying the food you never cooked before, always make sure food is cooked properly before consumption. According to the USDA, the safe internal temperature is 165°F for poultry and 160°F for beef. If food is not cooked properly using these guidelines, just add a few minutes to the Air Fryer.

MAINTAINING YOUR AIR FRYER (CLEAN & STORE)

- Remove the plug from the wall socket and let the appliance cool down completely. Removing the Air Fry Basket allows the Air Fryer to cool down quicker.
- Thoroughly clean the appliance after every use.
- Do not clean the Crisp Tray, Air Fry Basket, or the inside of the appliance with metal kitchen utensils or abrasive cleaning materials, as they may damage the non-stick coating.
- Wipe the outside of the appliance with a moist, soft cloth.
- The Crisp Tray and Air Fry Basket are dishwasher-safe.
- Alternatively, the Crisp Tray and Air Fry Basket can be cleaned with hot water, dish soap, and a non-abrasive sponge.
- Clean the heating element with a soft cleaning brush to remove any food residue.
- Make sure the appliance has cooled down completely before cleaning the heating element.
- Make sure that the appliance is unplugged and all parts are clean and dry before storing.

TROUBLESHOOTING

PROBLEM	SOLUTION
The Air Fryer does not turn on.	Plug the Air Fryer into a grounded wall socket.
Food is not done after the recommended time.	Add less food and cook in batches if necessary. Your food will also cook more evenly.
	Adjust the temperature up a little bit or add 2-3 minutes cooking time.
Food is fried unevenly in the Air Fryer.	Press Shake Remind button to let the air fryer prompt you to shake your food at a proper time.
Food are not crispy when they come out of the Air Fryer.	Make sure to properly dry the food or lightly brush/spray some oil onto the food surface for a crispier result.
I cannot slide the Air Fry basket into the air fryer properly.	Do not overfill the Air Fry Basket (below the MAX line on the basket wall).
White smoke is coming out of the appliance.	When you fry greasy items in the Air Fryer, a large amount of fat will leak into the Air Fry basket. The fat produces white smoke and the Air Fry basket may heat more than usual. This does not affect the appliance or the cooking result.
	White smoke is caused by grease heating in the air fry basket. Make sure it is cleaned properly after each use.
	Do not overfill the Air Fry Basket (below the MAX line on the basket wall).
Fresh fries are not crispy when they come out of the Air Fryer.	Make sure you dry the potato sticks properly before you add the oil.
	Cut the potato sticks smaller for a crispier result.
	Add slightly more oil for a crispier result.