


INSTRUCTION FOR SIX DIGITAL DISPLAYBACK LIGHT SPORT WATCH

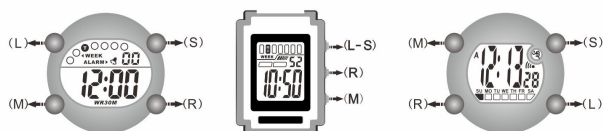

Remark: different models follow the same instruction.


FUNCTION AND SPECIFICATION

1. Standard display: hour, minute, second, month, date, week
2. Back light function
3. Stopwatch stage timekeeping function
4. Alarm, hourly chime
5. Time accuracy: ± 45 seconds/month ($T=25^{\circ}\text{C}$)
6. Battery: Hg free alkaline battery or CR2025


BUTTON FUNCTIONS

M--MODE: Selecting Button	: Alarm On
S --START: Adjusting Button	A AM :Morning Time
R--RESET: Shift Button	P PM :Afternoon Time
L --LIGHT: Back Light Button	


TIME DATE AND WEEK ADJUSTING

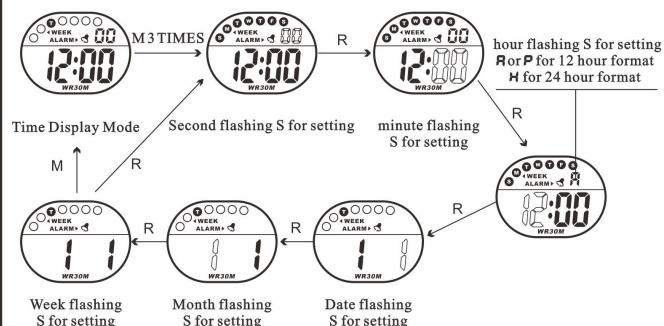


HOW TO USE STOPWATCH

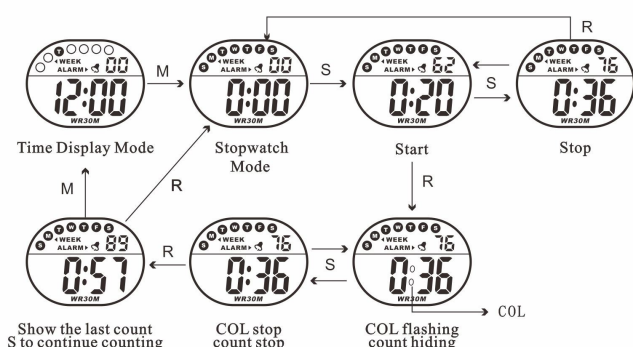


ALARM TIME SETTING

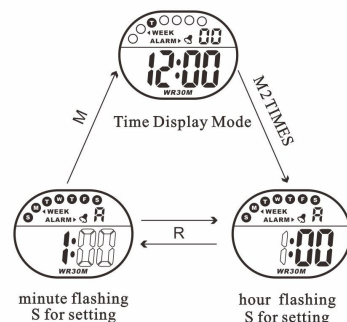

ALARM TIME SETTING

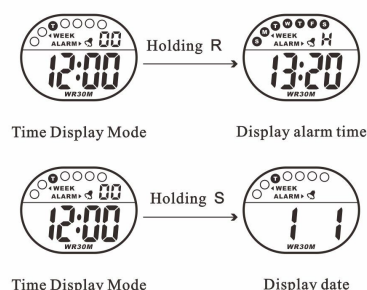

HOW TO ON/OFF ALARM HOURLY CHIME

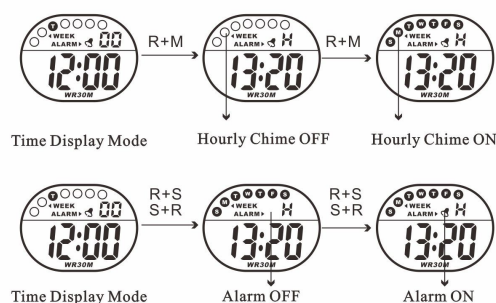

MAINTENANCE INSTRUCTION AND NOTICE

1. When water resistant marked on the watch, watch can withstand water splashing and rain, but can't fall into the water;
When 30m water resistant marked on the watch, you can wear it while swimming or was-hing the car, but don't press any buttons in the water;
When 50m water resistant marked on the watch, you can wear it while swimming or poolside diving, but don't press any buttons in the water.
2. Avoid wearing it in broiling, freezing, or vibrant environment.
3. Avoid wearing it in strong electric field, static, or high cycle environment.
4. Keep it away from gasoline, detergent, spraying agent, adhesives, and paint.
5. Wipe the watch surface with soft cloth and clear water, don't use chemicals.
6. The watch is made of precision electronic parts, don't open the cover by yourself.