




Start frothing milk

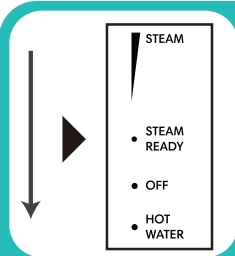


Turn the Steam Knob to "STEAM READY" position. The steam indicator starts to flash=preheating.

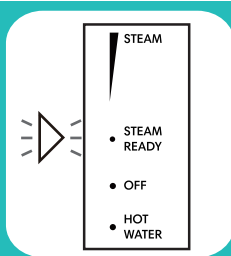

The steam indicator stops flashing and is fully illuminated=Ready.

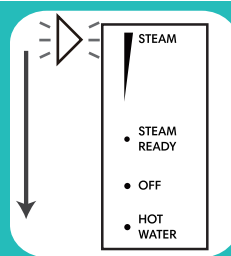

Turn the Steam Knob to "STEAM" position, and let the residual water come out of the Steam Wand.

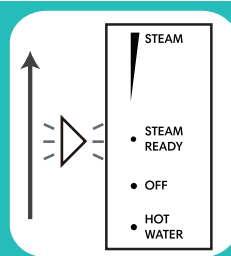


Once the steam comes out of the Steam Wand, return the Steam Knob to "STEAM READY" position.




Fill Pitcher with cold milk to just below the bottom of the spout.



Insert Steam Wand Tip just below the surface of the milk.

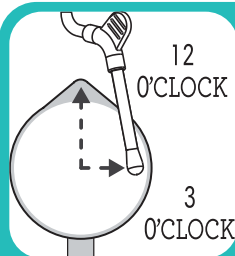

Steam Wand position:
- Arm at 12 o'clock.
- Tip at 3 o'clock.

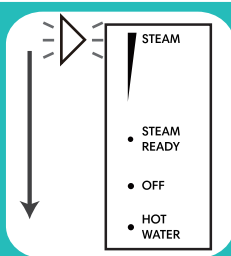

Turn the Steam Knob to "STEAM" position.



Frothing makes a smooth hissing noise.



Check milk is moving in a whirlpool action.




As milk level rises, lower Pitcher to keep Tip just below surface.



When desired micro foam achieved, immerse Steam Wand half way.



Milk ready when Pitcher is too hot to touch for 3 secs.

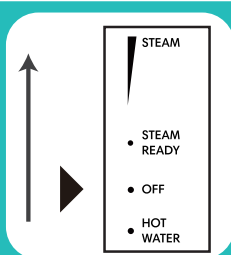

Return knob to the "OFF" position.



Remove Pitcher from Steam Wand.



Tap Pitcher to release larger air bubbles.



Swirl Pitcher to blend milk and create a silky texture.



Pour milk in one steady stream.