



**DELUXE CANOPIES CANADA LTD.**


[www.DeluxeCanopy.ca](http://www.DeluxeCanopy.ca)


1-866-246-6965

[info@DeluxeCanopy.ca](mailto:info@DeluxeCanopy.ca)

## Setup Instructions:


1.

**CAUTION:**   
Keep hands on the outside of the truss bars to avoid getting hands or fingers pinched.

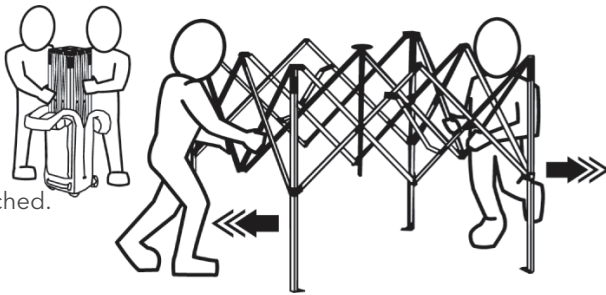


Unpack your items from the box and stand the frame up vertically. With two people centered and standing on opposite sides, grip the lower 'V' poles and lift/extend the frame while stepping away from each other.

2.

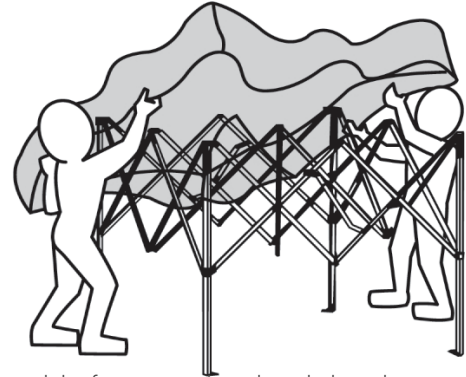


Extend the frame arms-length and place the canopy roof over the frame.

3.

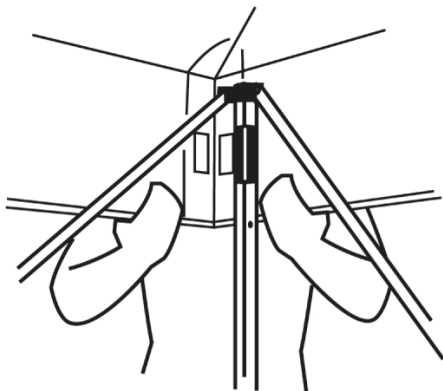

Attach each canopy corner to the framework. Do not use the round d-ring to pull the fabric over the tent frame. D-ring is to be used for tethering only.

4.

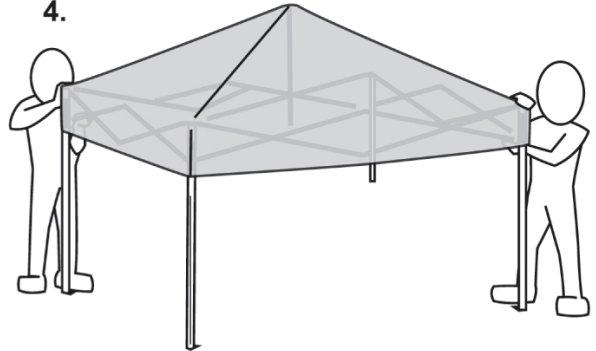


Extend the frame out completely. Push the corner bracket over the locking mechanism until it snaps into place. Repeat for all four corners.

5.



Lift each leg and slide the lower leg extension out until the latching button snaps into the first adjustment hole. The Deluxe Canopy® will be set to the lowest height setting.

6.

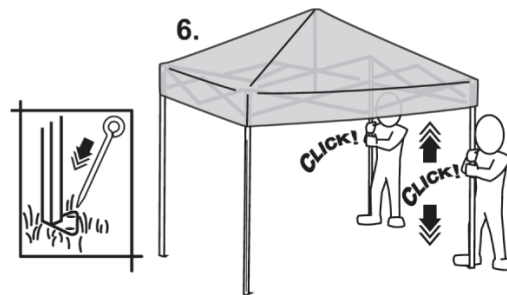

To change the height setting, push the release button and slide the leg extension up or down as required and set the height at your preferred level.

**NOTE:** 

Please remember that this is a portable shelter therefore weight bags and stakes/ropes should be used at all times to keep the canopy anchored.

## Take-down Instructions:

Press the locking button or pull the ring depending on your frame type to collapse all four legs. Reach under the fabric and lift the fabric slightly at the corner and release the locking mechanism. With two people centered and standing on opposite sides, lift the frame and walk towards each other until the canopy is 2/3 collapsed. Pull fabric corners off and lift the roof off the frame. Collapse the rest of the frame and store it in the carrying case.

