



# Arsenal One User Manual

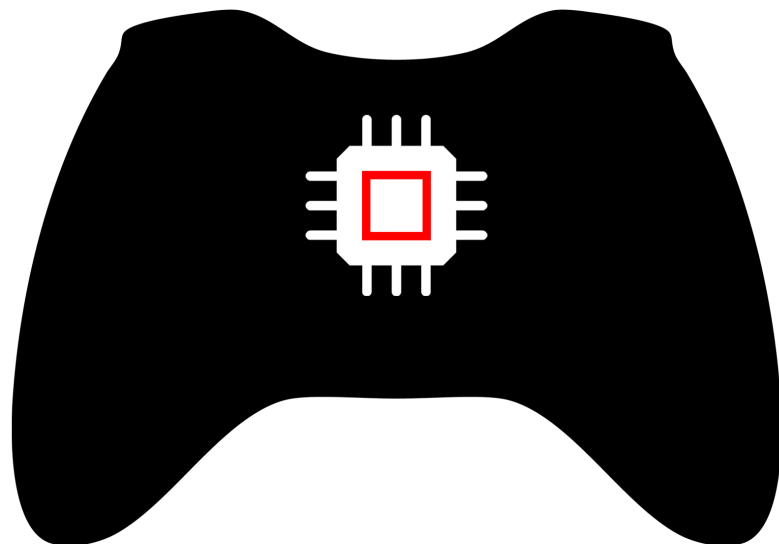

# Arsenal Mod

## **Rapid Fire**

Rapid Fire is changed by pressing the Sync button. Every time the Sync button is pressed the LED will blink in the following order:

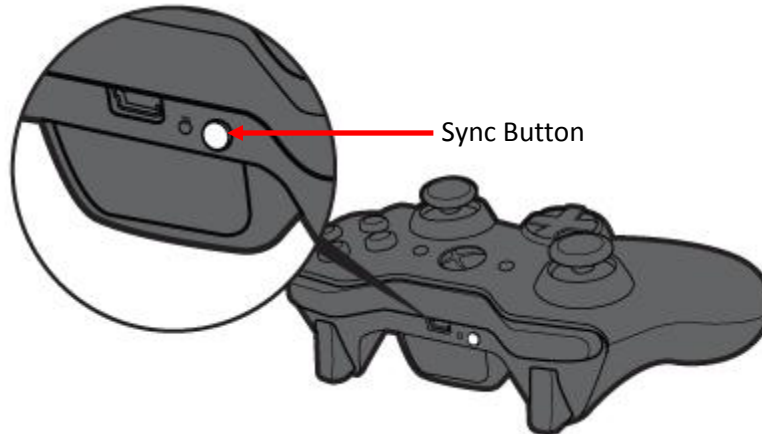


1. 1 Blink = Rapid Fire disabled.
2. 2 Blinks = RT Rapid Fire enabled.
3. 3 Blinks = LT Rapid Fire enabled.
4. 4 Blinks = Akimbo (both triggers) Rapid Fire enabled.

By default, RT Rapid Fire is enabled.

## **Button Re-Mapping**

By default, A, B, X and Y are mapped to T1 – T4. To change the mapping:

1. Plug in USB cable into controller. This step is not necessary, but recommended.
2. Press and hold the View button for 3 seconds. After 3 seconds the Xbox LED will blink, DO NOT RELEASE THE VIEW BUTTON.

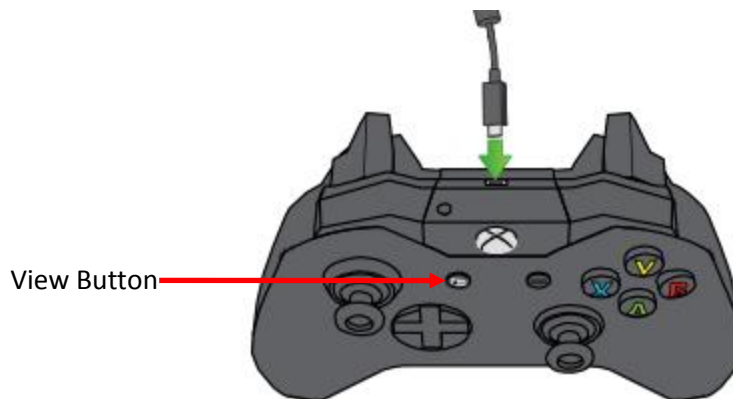

3. Press any of the Xbox One controller buttons you want to re-map. LED will blink.
4. Press any of the additional buttons (T1 – T4). LED will blink.
5. If you want to continue re-mapping more buttons, go back to step 3. Otherwise go to step 5.
6. Once you are done re-mapping, release View button.

You can remap up to 12 buttons:

<b>Buttons</b>
A
B
X
Y
Up (U)
Down (D)
Left (L)
Right (R)
RB
LB
Left Joy Stick Push Button (LJ)
Right Joy Stick Push Button (RJ)

For any questions, you can email us: [info@arsenalmod.com](mailto:info@arsenalmod.com).