

JUICÖTM

UNO

SLOW JUICER

FRESHER & PURER THAN EVER BEFORE



INSTRUCTION MANUAL

FRESHER & PURER THAN EVER BEFORE; JUICO UNO SLOW JUICER INSTRUCTION MANUAL

- Please follow the instructions carefully for ease of use, better maintenance and longer lifespan of your Juico Uno Slow Juicer.
- Please keep the user's guide where it is easily accessible.
- Please ensure the current, voltage and frequency are in accordance with the standard of your country.
- This Juico Uno Slow Juicer design and workings are subject to change without warning due to continual product development.

CONTENTS

04	■ Your Juico Uno Slow Juicer
05-06	■ Safety First
07	■ Juico Uno Customer Message
08-09	■ Parts and Accessories
10-11	■ Assembly Instructions
12-15	■ Cleaning your Juico Uno
16-17	■ Directions for Use
18-19	■ Food Preparation and Juicing Techniques
20	■ Self Clean
20-21	■ Cleaning and Maintaining your Juicer
22-23	■ Troubleshooting
23	■ Specifications

JUICO UNO COLD PRESSED JUICER

Years of experience, months of design and testing, Greenis has teamed up with some of the world's most reputable slow-juicer manufacturers to launch the revolutionary Juico Uno Slow Juicer. With its world-leading all-in-one juicing system and 35 RPM, Juico Uno will bring you remarkable juicing experience.



FRUIT JUICES

The Juico Uno is able to easily juice anything from a soft berry to a hard apple, creating a healthy drink with 35% more juice than conventional juicers.



VEGETABLE JUICES

The Cold Press Process of the Juico Uno will slowly juice hard vegetables to leafy greens in seconds maintaining maximum living nutrients and enzymes, just chop them up and off you go.

SELF-CLEANING

No need for a dishwasher, the Juico Uno can self-clean, removing most of the pulp before rinsing.

COMPREHENSIVE WARRANTY

All Juico Uno products are covered by an international warranty, supported by service centres in Europe, Asia, the Pacific and soon the United States and other countries.

SAFETY CAUTIONS

- Please **DO** read safety cautions before use
- Please **DO** follow safety cautions before use



WARNING - Any improper use against safety cautions may cause injury or device damage

- This appliance is not intended for use by persons(including children)with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with appliance.
- To avoid electric shock do not plug or unplug the unit into a socket with wet hands. Only plug the unit into a correctly grounded socket. Hold the power plug firmly when plugging or unplugging the unit,do not pull on the power cord when unplugging, Do not submerge or hold the unit under running water when cleaning, Never use the appliance if the power cord or power plug is damaged, To avoid damage to the power cord, avoid severe twists and bends in the power cord.
- If the unit jams and stops during use, switch the unit into “REV” for around 3 seconds, then back to “ON” this should dislodge the food causing the jam.
- To avoid injury and damage, never disassemble the machine during use.
- Do not block the pulp outlet while the unit is operating.
- Use both hands when moving or lifting the unit,it weighs around 4 KG.
- Keep out of reach of children.

SAFETY CAUTIONS

- Please **DO** read safety cautions before use
- Please **DO** follow safety cautions before use



WARNING - Any improper use against safety cautions may cause injury or device damage

- Never operate the machine when it is disassembled, it should only be used when it is fully assembled.
- Never put your fingers or any body parts into the unit when it is operating, only use the “pusher” assist foods as required.
- Do not use the product for more than 20 minutes at a time, excessive use can cause overheating which can lead to motor failure.
- Always operate the unit on a flat firm surface suitable for kitchen appliances.
- Do not operate the unit if;
There are any unusual odours,heat or smoke,
The unit has been dropped or has any signs of damage,
The “Squeezing screw” has been damaged.
- Do not attempt to make any repairs to the unit yourself,repairs should be carried out by a qualified person.
- Do not operate the unit without fruit or vegetables for more than a few seconds,some parts can become damaged due to lack of lubrication.
- Clean the product thoroughly after use.

JUICO UNO CUSTOMER MESSAGE

Juico Uno is dedicated to providing 100% natural nutrition to our customers through our high quality kitchen appliances. With the Juico Uno Slow Juicer you can enjoy a variety of nutrient rich juice along with these benefits.

- Ability to juice greens, herbs and grasses (with a high yield) when prepared correctly
- Juicing fruits AND vegetables, including soft varieties
- Cold pressed, to produce a superior enzyme and nutrient content juice
- Low speed (rpm), to minimise oxidation and produce a longer lasting juice
- Upright design allows gravity to assist in the juicing process
- Juice tap to reduce froth and foaming
- Less waste than centrifugal juicers
- Child friendly with no sharp blades
- Space saving design
- Auto pulp ejection for continuous automatic juicing
- Built in reverse function eliminates clogging for continuous juicing
- Easy to clean with only 5 parts which need a quick rinse or wash
- Low noise

Dual stage juicing that effectively juices:


- Soft fruit e.g. oranges
- Hard Fruit e.g. apples
- Soft Vegetables e.g. kale
- Hard Vegetables e.g. carrot

PARTS AND ACCESSORIES



PARTS AND ACCESSORIES

**JUICING
BOWL**

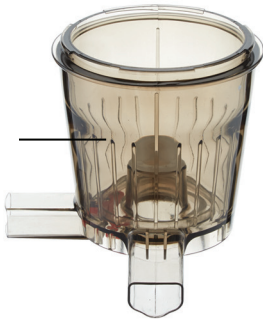

**CLEANING
BRUSH**



**PUSHER /
TAMPER**



**PULP
OUTLET**

**JUICE
OUTLET**




**MAIN
BODY**




PRODUCT ASSEMBLY


- A.** Before usage, place the silicone stopper into the pulp outlet as shown below.

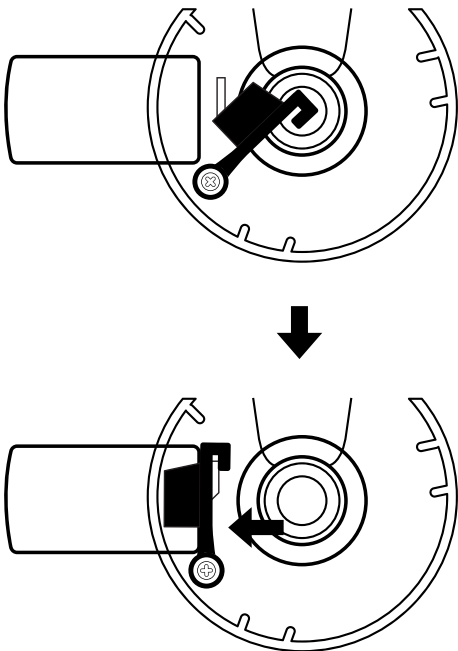

- B.** Engage the juicing bowl onto the Motor Base.

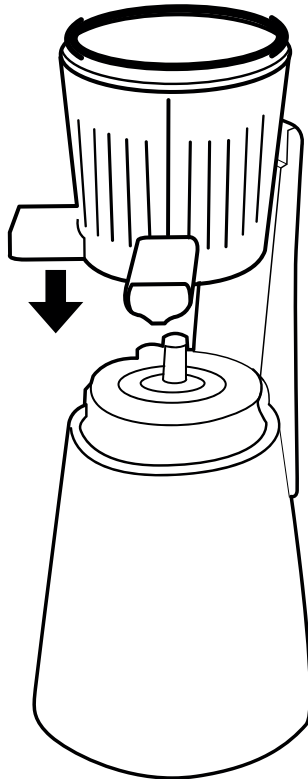


- C.** Place and push the squeezing screw into the centre of the juicing bowl.

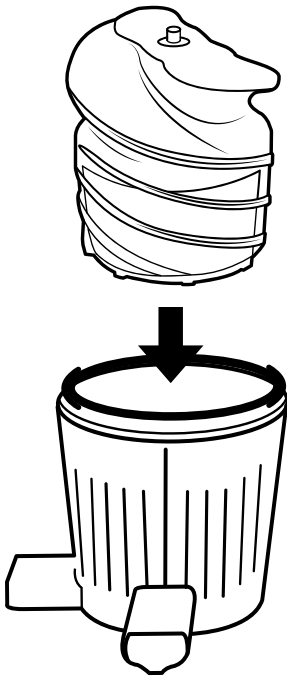

- D.** Place and push the squeezing screw into the centre of the juicing bowl.

Make sure “unlock sign” on the hopper aligns with “white dot” on the juicing bowl.


Turn the hopper clockwise until it fully engages into the juicing bowl.

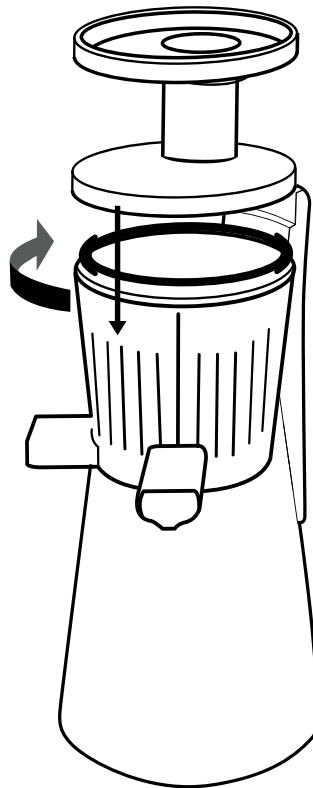

CLEANING YOUR JUICO UNO

For frequent daily use of the UNO, we recommend you remove the Juicing Screen from the auger once per week in order to give it a thorough clean.

For less frequent use, thorough cleaning might not need to take place as frequently. In order to get optimum lifespan from the UNO juicing screen, close inspection is recommended on a regular basis.

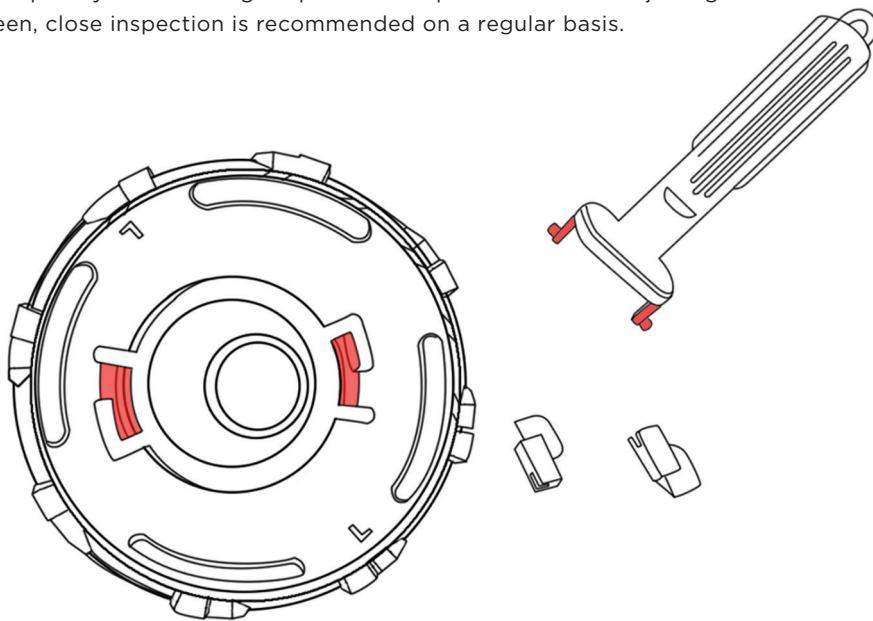



1. Remove the auger /screw from Juico UNO and have the spanner ready



2. Turn the auger / screw up side down



3. Remove each of the two rubber grommets



4. Remove each of the two rubber grommets



- 5.** Remove each of the two rubber grommets



- 6.** Take the spanner and line it up with the grey screw inside the auger



- 7.** Place the spanner inside the grey screw



- 8.** Turn Anti-clockwise until you here a "CLICK"



9. Lift the grey screw out of the auger



10. Hold the auger at the screw end



11. Pull the juicing screen away from the screw



REASSEMBLY OF UNO AUGER / SCREW

Repeat steps 1 to 11 in reverse

DIRECTIONS FOR USE

Power Button signs: “ON” activates the motor and starts making juice.

“OFF” stops the operation.

Place the button at the centre to turn off the product.

“REV” means reverse operation.

Use button when something is stuck.

It will remove the clogged material.


If Juico UNO is not juicing correctly, try following the next steps.

1. Turn off the machine
2. Run the product in “REV” mode for a few seconds.
3. Operate the product again.
4. If “REV” mode is inoperable, turn off and disassemble the product.
Then, reassemble the product by instructions.
5. Activate the product again.
The power button should be completely dried before the product is operated.

PRECAUTIONS FOR USE

- A.** Remove hard seeds before juicing from fruits like: persimmons, peach, plum, etc.
- B.** Hard items (kudzu vine, sugarcane etc) are not suitable for juicing.
- C.** Juicer can be used to mash garlic and peppers with moisture. Not suitable for grinding dry grains.
- D.** When juicing hard fruits or vegetables like carrots they may cause loud noises, this does not indicate damage to the machine.
- E.** Be aware that juice may spill out when juicing fruits and vegetable like grapes and tomatoes.
- F.** Using frozen fruits and vegetables may influence the flavour of juice.
- G.** Frequently juicing processed and hard food stuffs (ice, fruit seeds, etc) may damage the strainer. Please use with care.
- H.** The continuous working time should be no more than 30 minutes.
- I.** Drink juices as soon as possible after juicing, if you wish to store juice place it in a sealed glass container in the refrigerator.
- J.** Juicing too much food or juicing hard food stuffs may make it difficult to remove the hopper from the juicing bowl.

FOOD PREPARATION & JUICING TECHNIQUES

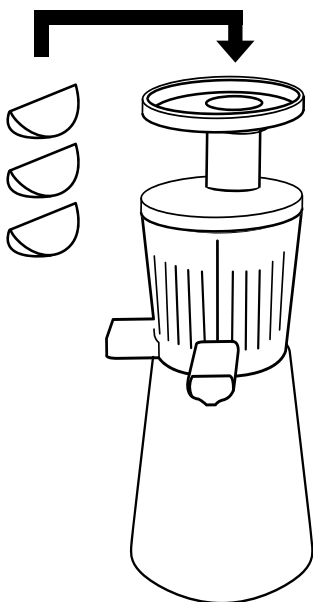

- Rinse every fruit or vegetable thoroughly before feeding them into the device.
- After rinsing, put ingredients slowly into the device. Use the pusher if necessary. For better flavours, remove any hard seeds from ingredients before juicing.
- Please ensure to turn off the device after juicing. Only touch the power button with dry hands.



The continuous working time should be no more than 30 minutes.
Otherwise, severe product damage may occur.



Remove any hard seeds from fruits or vegetables.
Otherwise, severe product damage especially on the screw.



Do not insert too much ingredients / do not feed ingredients too fast.
Otherwise, severe product damage may occur.

FOOD PREPARATION & JUICING TECHNIQUES

All fruits and vegetables must be prepared as follows:

- Refrigerate your product prior to juicing. This will also give you a less pulpy juice.
- Rinse thoroughly.
- Remove any seeds or hard ends.
- Cut the ingredients into thin pieces that fit in the feed tube. Ensure all pieces are approximately than 3-5cm in length at most. NB: This is especially important for fibrous vegetables such as celery, kale, spinach and all grasses.

Familiarise yourself with the tips below for optimal results:

TIPS

Don't press/shove food into the GREENIS Slow Juicer

Most of us used to juice with the old-style centrifugal juicing machines. If you recall, those machines require you to forcefully press/shove food into them, and allow large items like whole apples. You actually had to push hard on carrots and apples to shove them into the spinning blade where they were shredded into tiny flying pieces. Do not use this same pushing/pressing/shoving force with the Juico Uno Slow Juicer! There is no spinning blade and no dizzying shredding taking place. No pressing is required. Instead, simply let your food fall into the "chewing auger." Virtually no force is necessary! In fact, forcing more food into it can cause too much vegetable mass to end up in the auger at one time, and this will result in pulp overflowing into your juice, or the juicer to become blocked.

When juicing grasses, feed the Juico Uno a small amount of grass at a time, cutting the grass into short pieces approx 3cm long ensures the waste can easily come out of the waste chute. You do NOT need to "clump" the grass into a ball like you used to do with the centrifugal juicers. In fact, you can slowly feed small strands of grass, coriander, parsley and other leafy greens without any problem at all! You can also juice kale and spinach in the same way. A great tip for large leafy, stringy or fibrous vegetables is to remove the leaf from the stem, cut both leaves and stems into 3-5cm lengths and feed through gently, letting the auger pull the ingredients into the juicer, using the tamper only gently if required.

CLEANING AND MAINTAINING YOUR JUICER

1. Turn device "OFF". Please do not touch the plug with wet hands.
2. Twist the hopper to unlock by grabbing the two outlets. Make sure the arrow is aligned with open side before pulling off the bowl.
3. Disassemble the device in reverse to assembly order.
4. Rinse it using cleaning brush with flowing water after disassembling do not use metal sponge to clean, otherwise it will scratch and damage the device. Do not clean it in the dishwasher.
5. Do not immerse or rinse the main body under water, use dry towel or wet sponge to clean.
6. Let the parts dry in an open, clean and drafty space after washing. Store it out of reach of children.

In order to extend the product service life, please clean it promptly after usage.

If it appears that the plastic of the containers and parts is very dry, wipe with cooking oil and then wash with gentle detergent to clean.


SELF CLEAN

When making more than one juice, it is not necessary to disassemble after juicing each different type of food, a quick self clean will ensure juice flavours do not mix.

1. Ensure the pitchers are underneath both the waste and juice chutes. Turn off juicing tap.
2. Switch on the juicer and pour a bowl of clean water slowly into the feed tube.
3. Turn on juicing tap drain water after juicing bowl is clean.

NB: Please disassemble fully after juicing is complete and follow the cleaning instructions found in this manual.

CLEANING TIPS

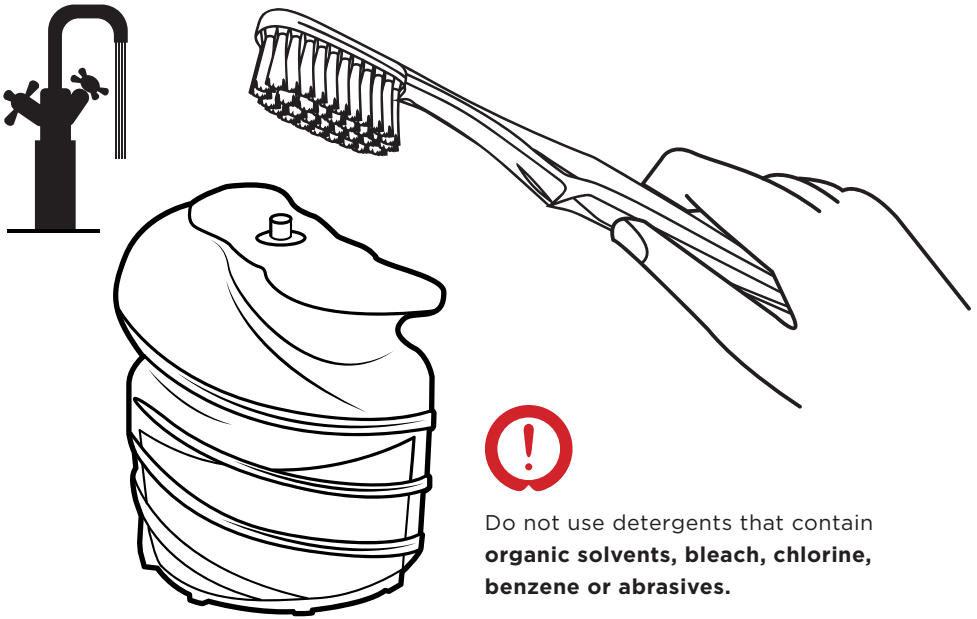

- Clean the inside and outside of the squeezing screw with the cleaning brush coming in the package.
- Clean and wash the product right after use.
- Please rinse the squeezing screw under flowing water after cleaning with the brush.
- The remaining pulp will be washed out.
- We recommend you for thorough cleaning, please disassemble the squeezing screw completely. Doing so will be more hygienic as potentially otherwise bacteria may develop inside the the squeezing screw.
- Use the spanner above to fit into the “nut button” and twist uncloose to release the squeezing screw.

TROUBLESHOOTING

Check the below troubleshooting guide...

Troubleshooting when the device does not work:

- A.** Please check if the plug is correctly positioned.
- B.** Please check if all components are correctly installed. Only when all components are properly inserted/assembled can the device be operated. Should the juicer made a strange noise or not start please re-check assembly.
- C.** Please check hopper is securely locked in place with juicing bowl, juicer will not start when this is not done correctly.

The device does not work

Make sure the power plug is correctly plugged into the wall socket.

Make sure the device is assembled correctly.

The device stops when juicing

Please check power plug has not become loose.

Please ensure you have not put in excessive or hard foodstuff into the juicer.

Please check that the device has not been working continuously for too long.

Leaking from beneath juicing bowl

Please check if the silicone stopper is plugged in securely.

The device shakes when juicing

The motor rotation may cause it to shake slightly.

Please ensure the device is on a level surface.

Please ensure that the food is prepared correctly.

Separation of juice

Please note that some ingredients have different density and you may note a slight separation during juicing. Simply stir and enjoy.

TROUBLESHOOTING

Abnormal noise

Please ensure to place the device on level of surface.

Check if the device contains excessive or overly hard foodstuffs.

Dyed containers or accessories

Please clean the device promptly after using to prevent pulp leftovers from sticking to the containers. The container or accessories may be stained when juicing some foods containing rich pigments. Clean it with cooking oil and then with detergent.

Hopper/lid is stuck

Do not force it open. Make sure that no excessive pulp is left inside the device.

Please start the juicer to assist in removing any build up.

Check if any unidentified or hard objects have been left inside.

Use the reverse button to push objects back up the feed tube feed tube.

PRODUCT SPECIFICATIONS

Product name	Greenis Juico Uno Slow Juicer
Model No.	F-9100
Voltage	220-240 V
Power Consumption	150 W
Motor type	PMDC Planetary Gearbox Motor
RPM	35 RPM
Product weight	App. 4.8 Kg (undefined as packaging not ready)
Dimensions	15.5cm(W)*15.5cm(L)*43.5cm(H)
Working sound volume	30-45 decibels
Standard usage time	No more than 30 minutes continuously

