



ELBA

AIR FRYER

MODEL: EAF-H3214(BK)

Owner's Manual

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.


For The Warranty Terms & Conditions, Please Refer To Warranty Certificate.

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed:

1. Read all instructions before using.
2. Before using check that the voltage of wall outlet corresponds to the one shown on the rating plate.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service agent for examination, repair or electrical or mechanical adjustment.
4. To protect against electric shock do not immerse cord, plugs, or housing in water or other liquid.
5. To avoid the hazard caused by overload of the circuit, do not use the extension cord.
6. Do not let the power cord hang over edge of table or counter, or touch on hot surface.
7. Do not place the appliance on unstable surfaces or surfaces that can be affected by heat, near walls or furniture. Leave at least 10cm free space at the back, both sides and top of the appliance.
8. The use of accessory not recommended by the appliance manufacturer may cause injuries.
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
10. Children should be supervised to ensure that they do not play with the appliance.
11. Do not place any items on top or next to this appliance at any time to prevent fire. Keep this appliance clear of contact with any flammable material including curtain, walls, cloth, paper, cardboard, plastic material, etc at all times.
12. Do not let the appliance operate unattended.
13. When operating the appliance, hot steam will release through air outlet. Keep hands and face at a safe distance from the air outlet. Beware of hot steam and hot surfaces when removing the tray from the appliance.
14. Do not overfill the basket! Oversized food must not be inserted into the basket as it may cause fire.
15. Improper handling of the tray or basket may cause the non-stick coating to peel off.
16. Do not fill the tray with oil or use this appliance as a deep fryer as this may cause fire hazards.
17. Immediately unplug the appliance if you see dark smoke coming out from the appliance. Wait until the smoke emission stops before removing the tray from the appliance.
18. Always unplug from the wall outlet when not in use. Let the appliance cool down completely before putting on or taking off parts before cleaning or putting away.
19. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
20. This appliance has been designed for domestic and household use only. Any commercial use, inappropriate use or failure to comply with the instructions, ELBA accepts no responsibility and the warranty will not apply.
21. Do not use outdoors.
22. Save these instructions.

PRODUCT DESCRIPTIONS

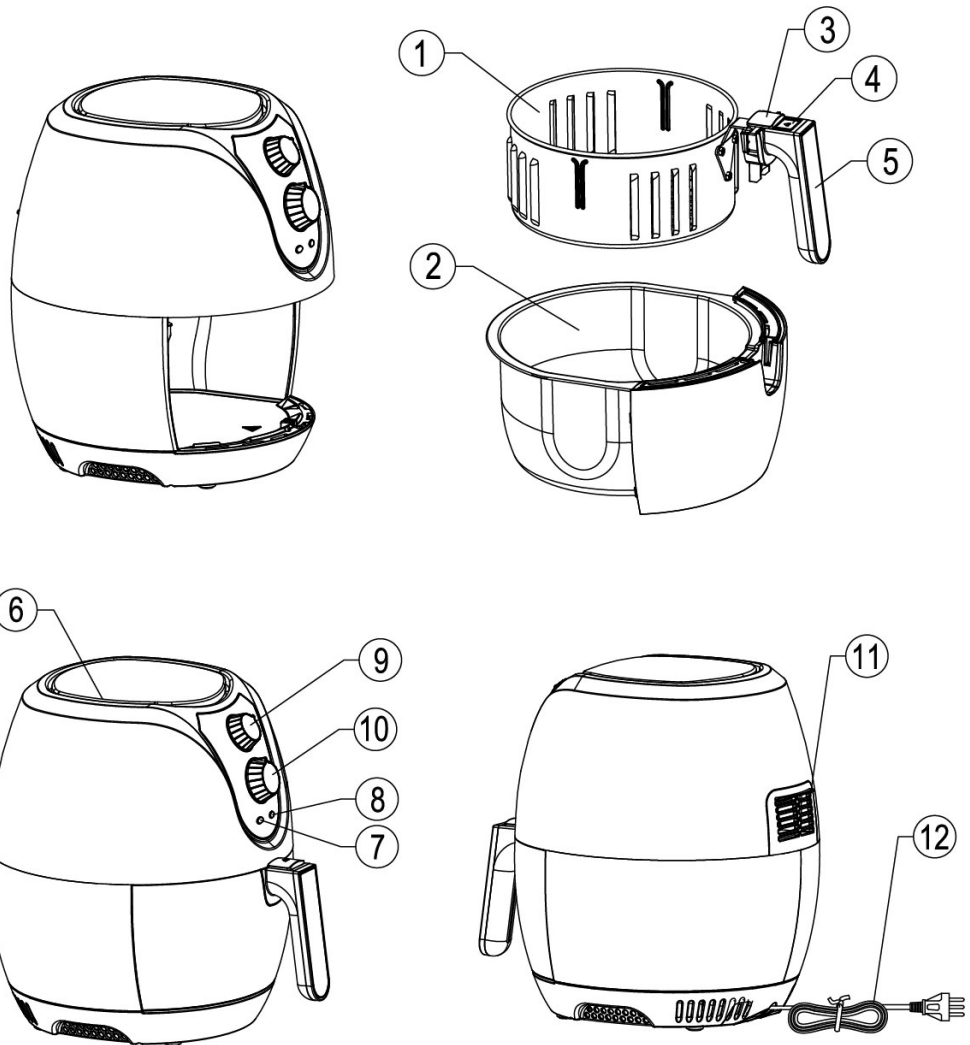

- | | |
|---|---------------------------|
| 1. Frying Basket | 6. Air Inlet |
| 2. Frying Tray | 7. Power Indicator |
| 3. Safety Cover for Basket Release Button | 8. Temperature Indicator |
| 4. Basket Release Button | 9. Temperature controller |
| 5. Frying Basket Handle | 10. Timer controller |

BEFORE THE FIRST USE

1. Remove all packing materials and stickers or labels from appliance.
2. Thoroughly clean the basket and pot with water and some washing liquids. Use a non-abrasive sponge.
3. Wipe the inside and outer surface of the appliance with a moist cloth.

Note: There is no need to fill the tray with oil or frying fat as this appliance works on hot air.

OPERATION PREPARATION

1. Put the appliance on a levelled, even and stable surface. Do not put the appliance on non-heat-resistant surface.
2. Put the frying basket into the frying tray properly and you hear the sound signal “tang” when fix into position. Slide the tray back to the appliance.
3. Do not put anything on top of the appliance this to prevent the air flow and affects the hot air frying result.

Note: Do not fill the frying tray with oil or any other liquid.

OPERATING THE APPLIANCE

1. Insert the plug into grounded socket.
2. Power on the appliance. Adjust the temperature controller knob to desired temperature.
3. Turn the timer to 3 minutes for pre-heating function. After this, the appliance is ready to use.
4. When the timer to 0, carefully slide out the tray and insert the ingredient into the basket. (**Attention:** Do not exceed the maximum line) and slide the frying tray back into the appliance.
 - a) Never use the tray without the basket in it.
 - b) Do not touch the tray during and sometime after use, as it gets very hot. Only hold the tray by the handle.
 - c) Do not press the basket release button while inserting the tray back to the appliance.
5. Set the desired temperature by adjusting the temperature control knob.
6. Adjust the timer knob to the required preparation time and the appliance will start to operate.
7. When you hear the timer bell, the set cooking time has elapsed. Pull the tray out of appliance and place it on a heat-resistant surface.
8. Check if the food is ready. If the food is not ready yet, simply slide the tray back into the appliance and set the timer to a few extra minutes.
9. Once the food is ready, carefully pull out the tray, and press the basket release button to lift the basket out of tray to remove the food. Do not turn the basket upside down with the tray still attached to it, as any excess oil that has collected on the bottom of the tray will pour onto the food.
10. Empty the basket by transferring the cooked food onto a plate.

COOKING TIPS

1. Smaller size of foods usually require a slightly shorter preparation time than larger size of foods.
2. Shaking smaller ingredients halfway during the preparation time optimize the end result and can help to prevent unevenly cooking.
3. Add a few drops of oil to fresh potatoes for a crispy result. Cook your foods within a few minutes after adding the oil.
4. Place a baking tin or oven dish in the basket if you want bake a cake or quiche or if you want to fry fragile or filled ingredients.
5. You can use the appliance to reheat the food. To reheat food, set the temperatures at 150°C, the maximum cooking time is 10 minutes.

CLEANING AND MAINTENANCE

Always remove the plug from wall outlet when not in use. Let the appliance to cool down completely before cleaning.

1. Use a clean damp cloth to wipe the product body.
Note: Do not use thinner, benzene, bleach, abrasive cleaning agents or sources to clean the appliance and tray.
2. Remove the tray and basket from the appliance. Clean them with soapy water and rinse thoroughly. Dry with a soft cloth.
3. If dirt is stuck to the basket or bottom of the tray, fill the tray with warm water with some washing-up liquid. Put the basket into the tray and let the tray and basket soak for about 10 minutes.
4. Clean the inside the appliance with warm water and non-abrasive sponge.
Note: Any residue, seasonings, vinegar or salt may cause the coating of the tray to corrode.

APPLIANCE STORAGE

1. Unplug the appliance and let it cool down thoroughly.
2. Make sure that all the parts are cleaned and dry.

TROUBLESHOOTING

No.	Problem	Possible Causes	Solution
1.	The air fryer does not work	The appliance is not unplugged in	Insert the plug into the grounded power socket
		Did not set the timer	Set the timer to desired cooking time, then the appliance able to connect with power.
2.	The ingredients fried by the frying tray not ripe enough	The amount of the ingredients in the basket is too big	Put smaller batches of ingredients in the basket. Smaller batches are fried more evenly
		The set temperature is too low	Adjust the temperature knob to set the temperature required
		The cooking time is too short	Adjust the timer knob to decide the time for cooking
3.	The ingredients are fried unevenly in the Air Fryer	Certain types of ingredients need to be shaken halfway through the preparation time	Ingredients that lie on top of or across other (e.g. Fries) need to be shaken halfway through the preparation time.
4.	Fried snacks are not crispy when they come out of the Air Fryer	You used a type of snacks meant to be prepared in a traditional deep fryer	Use oven snacks or lightly brush some oil onto the snacks for a crispier result
5.	I cannot slide the tray into the appliance properly	There are too much ingredients in the basket	Do not fill the basket beyond the maximum line.
		The basket is not placed in the tray correctly	Push the basket down into the tray until you hear a "click" sound
6.	While smoke coming out of the product	You are preparing greasy ingredients	When you are preparing greasy ingredients in the Air fryer, it will caused large amount of oil fume will infiltrate into the frying tray. The oil will produce while fume, and the frying tray might be hotter than usual. But this will not affect the final cooking effect
		The tray still contains greasy residues from previous use	White smoke is caused by greasy heating up in the tray. Make sure you clean the frying tray properly after each use



Correct Disposal of this appliance:

This marking indicates that this appliance should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

ELBA