




# MAX Boot Instructions

## MOUNTING

1. Remove the footbed from boot. For xMAX and freeMAX boots, the footbed is held in with 2 Velcro strips, 1 located towards the front, under the toes, and 1 located under the arch of the foot. Release the Velcro by slowly pulling upwards on the front of the footbed and then working towards the back. The footbed can then be slid out towards the front. For vMAX boots, the footbed is located in the bottom of the boot. Simply lift from the heel and remove the footbed through the ankle opening of the boot
2. Position front boot on ski based on the following location chart:

SKI SIZE	63	64	65	66	67	68	69	71
DISTANCE FROM SKI TAIL TO BACK OF FRONT BOOT	27.5"	28"	28.5"	29"	29.5"	30"	30.5"	31.5"

3. Fasten the boot securely to the ski. Use only HO Skis DirectConnect screws. The forward fastener is accessed by moving the tongue, while the rear fastener can be reached through the ankle opening of the boot. Each fastener position has 3 inserts which allow for maximum adjustability and customized settings for each skier.

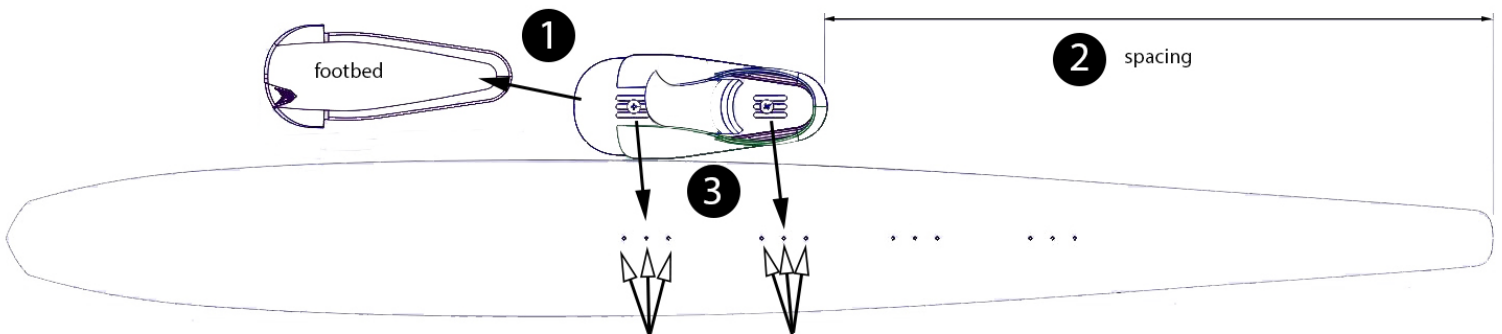

4. Replace the footbed.
5. Repeat the process for the rear boot. The DirectConnect system also allows for rotating each boot to the skier's preference.

## LACE MANAGEMENT SYSTEM

The HO MAX Ski Boot line features a new lace management system optimized for ease of use.

1. Tension all lace zones for a snug, but not tight, fit.
2. For xMAX and freeMAX Ski Boots, bring the lower zone lace in back of the boot past the lace securing post.
3. Bring the upper lace around the other side of the boot and snap the lace end over the lace securing post.

