


How To Adjust The Grinder Settings

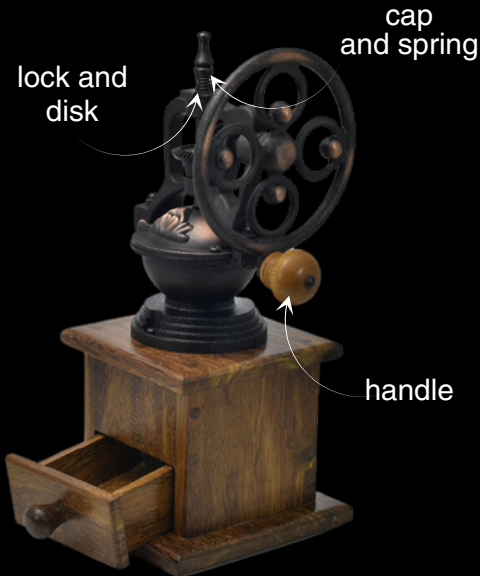

Step 1

Put your coffee beans in the designated opening.

Step 2

Begin disassembling by unscrewing the top cap, next remove the spring, then remove the lock.

Step 3

Use the disk to adjust the coarseness. If you want your coffee beans to be fine, tighten the disk (clockwise motion), for more coarse loosen the disk (counter clockwise motion).

Step 4

Once you are happy with the settings – begin reassembling the parts. Starting with lock, then the spring (make sure it is pushed down), and lastly screw the top cap back on.

Step 5

Start rotating the handle to start grinding.

