



# INSTRUCTION SHEET

## Gear Reduction Racing Starter

### MasterTorque 9600, 9610, 9612, 9636

We want to help! If you have any comments or difficulty with this product, please contact technical support at:

**1833 Downs Drive, West Chicago IL 60185**

**Tech Phone: (630) 849-7754 Sales Phone: (630) 957-4019**

**Tech Email: tech@powermasterperformance.com**

**Sales Email: sales@powermasterperformance.com**

## INSTALLATION

*These instructions are provided as supplementary information to the factory service manual instructions for starter replacement.*

*The box contains: (1) starter, (2) mounting bolts, and (2) shims.*

### DISCONNECT THE BATTERY.


**MOUNT STARTER.** Make sure the mounting surface of the engine block is smooth, flat and free of paint buildup.

Torque starter mounting bolts to engine manufacturer's specifications, typically 32 ft. lbs. If the starter motor is interfering with the engine block, remove the two socket head cap screws securing the mounting block to the starter and rotate the mounting block to another clocking position for increased clearance. (See box "Installation Instructions for Internal Shim")

**CHECK PINION CLEARANCE.** There should be 0.060" ~0.140" clearance from the face of ring gear to the front face of the starter pinion. Check in at least six locations on the ring gear (see Figure 1). If not in spec, verify that the ring gear is properly mounted and does not have excessive runout. The included shims can be installed between the starter mounting block and the starter's center support to increase this distance. (See box "Installation Instructions for Internal shim").



FIGURE 1

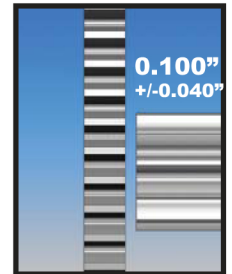

### **IMPORTANT! It is critical that the infi-CLOCK ring be tightened correctly!**

#### Clocking Instructions for InfiCLOCK, and Installation of Internal shim

After the starter has been installed, there should be 1/16" (0.062) minimum between the engine side of the ring gear and the front edge of the teeth on the starter pinion gear. Check this distance with the ring gear in at least three different positions. If the distance is too small, a shim can be installed inside the starter, which will increase this clearance an additional 0.062".

1. Mark the starter body to starter block position so it can be correctly positioned during reassembly.
2. Remove the two bolts that retain the infi-CLOCK ring using a 3 mm Straight hex key. DO NOT USE BALL END HEX KEY.
3. Remove the ring and block.
4. Install the shim and reassemble as shown, (fig. 2).
5. Rotate the block into position and tighten the two ring bolts. The bolts must be tightened evenly. While holding the ring parallel to the block, lightly snug each bolt.

\*Powermaster recommends that no more than one internal shim be installed in a starter.



Using Blue Loctite® on the two ring bolts is recommended.

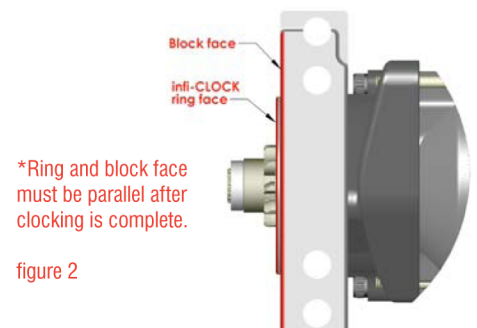


figure 2

Evenly tighten the bolts in an alternating pattern. Torque to 50 in/lbs. Inspect the ring again to be certain it is parallel to the block.

6. Reinstall the starter to the engine.

## CHECK PINION ENGAGEMENT.

1.) Engage the pinion into the ring gear. This can be done by either:

Using a tool to pull the pinion out of the starter **OR** Connecting 12 VDC to the “Switch” terminal only. (DO NOT connect battery cable to “BAT” terminal on the starter solenoid). This engages the solenoid and pinion but does not spin the starter. **CAUTION: Do not leave the solenoid engaged like this for more than 30 seconds at a time as the solenoid will overheat.**

2.) Insert a wire gauge to check for proper backlash between the ring gear and starter pinion (see Figure 2). There should be a 0.020” to 0.025” clearance measured from the flank of a starter pinion tooth to the flank of a ring gear tooth. Check clearance at least three places on the ring gear. If the clearance **CHECK PINION CLEARANCE**. There should be 0.060”~0.140” clearance from the face of ring gear to the front face of the starter pinion. Check in at least six locations on the ring gear (see Figure 1). If not in spec, verify that the ring gear is properly mounted and does not have excessive runout. The included shims can be installed between the starter mounting block and the starter’s center support to increase this distance. (See box “Installation Instructions for Internal shim”)

## CHECK PINION ENGAGEMENT.

1.) Engage the pinion into the ring gear. This can be done by either:

Using a tool to pull the pinion out of the starter **OR** Connecting 12 VDC to the “Switch” terminal only. (DO NOT connect battery cable to “BAT” terminal on the starter solenoid). This engages the solenoid and pinion but does not spin the starter. **CAUTION: Do not leave the solenoid engaged like this for more than 30 seconds at a time as the solenoid will overheat.**

2.) Insert a wire gauge to check for proper backlash between the ring gear and starter pinion (see Figure 3). There should be a 0.020” to 0.025” clearance measured from the flank of a starter pinion tooth to the flank of a ring gear tooth. Check clearance at least three places on the ring gear. If the clearance is too small, add one shim at a time between the starter and engine block to bring it into specifications. In many installs, no shims are necessary.

3.) **PLEASE NOTE:** After releasing the solenoid, the pinion may stay engaged in the ring gear until the engine is started. This is normal for gear reduction starters and does NOT require shimming to correct.

**ATTACH BATTERY CABLE AND SWITCH WIRE.** The switch wire should be capable of handling 50A intermittent and 10A continuous, typically a 12AWG wire. The battery cable must be the proper size for the length of the cable (see chart). All connections should be clean and tight and terminals should be soldered if possible. The ground cable is important and the best ground path is direct to the engine block. With steel frame vehicles the ground path can be to the frame. This ground cable should be the same size as the starter positive cable. Also, a ground strap should be installed from the frame to the engine. If the original solenoid had a connection to the “R” terminal (ballast resistor bypass), this wire can usually be eliminated. (See explanation below.)

## CONNECT THE BATTERY.

**OPERATE THE STARTER**—it should operate quietly. The cables and connectors themselves should be checked for voltage drop with a voltmeter. To check any wire or cable for voltage drop, connect one side of the voltmeter to one end of the cable and the other side of the voltmeter to the other end. OPERATE THE CIRCUIT and simultaneously measure the volt drop. It should be 0.5VDC or less. A high voltage drop indicates a bad connector or an undersized cable. The ground circuit can be checked in the same manner.

Measure input voltage by connecting the positive probe of a voltmeter to the “MOTOR” terminal of the solenoid and connecting the negative to the starter housing. This should be 9.6V minimum while cranking.

**CAUTION: NEVER OPERATE A STARTER MORE THAN 30 SECONDS AT A TIME WITHOUT ALLOWING TIME TO COOL AT LEAST TWO MINUTES. OVERCRANKING WILL DAMAGE THE STARTER.**


## COMMON QUESTIONS

1. **Why does the engine seem to crank slowly?** Although this condition can be caused by several things, the most common cause is excessively low input voltage. The input voltage to the starter must be 9.6V volts or higher. Low voltage during cranking can be caused by undersized starter cables, high resistance or defective batteries, high resistance battery disconnect switches, or poor connectors.
2. **What do I do with the wire that connected to the ‘R’ terminal on the original starter?** In early original wiring harness the ‘R’ circuit was a ballast resistor bypass. This terminal is ‘no connection’ when the starter is at rest and is +12VDC while cranking. This circuit provided +12VDC to the ignition coil during cranking for easier engine starting. Cars that do not have a ballast resistor (i.e. HEI, MSD or other aftermarket ignition systems) should not need this connection. In most cases this wire can be eliminated. If the engine has no ignition during cranking, then the wiring of the coil is going to require an ‘R’ terminal signal. To accomplish this use the optional “R Terminal Diode Kit” P/N 600. Some Powermaster replacement solenoids are available with an ‘R’ terminal. Ask your dealer.

## ADDITIONAL NOTES ON INSTALLATION

1. **A note about ring gears.** It is important for long starter life that the ring gear be round and true. Check the ring gear in at least six places verifying that the clearance for the starter is the same in all locations. If not remove the ring gear and make sure the mounting surface of the crankshaft is clean and free of paint buildup or rust. Reinstall the ring gear and properly torque the mounting bolts. If this does not correct the problem, replace the ring gear.
2. **Disconnect switches in race cars and other off road vehicles.** The switch used for a battery disconnect is very important. All of the starter current will go across this switch during cranking which, depending on the starter, can be as high as 700A! After the engine is running, all of the current from the alternator will be running across this switch. Therefore make sure that the switch that is being used can handle these amounts of current. Switches are rated in intermittent amps and continuous amps. The intermittent rating should match or exceed the amount the starter will pull and the continuous rating should match or exceed the amount the alternator can produce. Using a switch that is too small will result in voltage loss and possible switch failure.

FIGURE 3

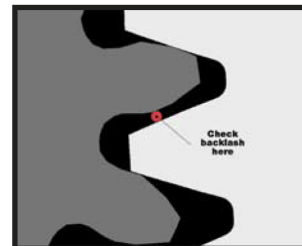

WIRE GAUGE CHART

DISTANCE	3'	5'	7'	10'	+10'
AWG	4	2	1	0	00