

GoWISE USA®

Instruction Manual

Electric Pressure Cooker

GW22614



GoWISE USA®

www.gowiseusa.com

sales@gowiseusa.com

1-855-233-9199

- Thank you for purchasing this *GoWISE USA®* Electric Pressure Cooker.
- To ensure correct use of this appliance, read these instructions carefully and thoroughly.
- Please keep the manual for future reference.

Table of Contents:

Product Introduction.....	3
Important	
Safeguards.....	4-6
Product Structure &	
Features.....	6
Before First Use.....	7-8
Pressure Cooker Settings.....	8-9
How To Use Your Pressure Cooker.....	9-11
Slow Cooking.....	11-12
Delay Timer.....	12
Cleaning.....	13
Troubleshooting.....	14
Warranty.....	15

PRODUCT INTRODUCTION

GoWISE USA® GW22614 is a new model of programmable pressure cooker. It is a three (3) quart pressure cooker designed for an individual's cooking needs. It is a 5-in-1 multifunction cooker: pressure cooker, slow cooker, food warmer, steamer, and brown. It has 6 different cooking options: pressure cooking, slow cooking, food warming, steaming, and browning. It also features a delay timer up to 8 hours. This also comes with a cup and a spoon. It is a new great way to make delicious food.

Important Safeguards

1. READ THE MANUAL.
2. This appliance cooks under pressure; please do not attempt to remove the lid while the cooker is operating. Improper use may result in scalding or injury.
3. Do not touch hot surfaces. Always use the handles.
4. Do not overfill the cooking pot because the food such as rice or vegetables may expand during cooking. Overfilling the cooker may result in developing more pressure or clogging the vent pipe.
5. Be aware that certain foods, such as applesauce, cranberries, pearl barley, oatmeal or other cereals, split peas, noodles, macaroni, rhubarb, or spaghetti can foam, froth, and sputter, and clog the pressure release device (steam vent). These foods should not be cooked in a pressure cooker at all.
6. Do not use this cooker for pressure frying with oil.
7. Always check the pressure release vent for clogs before use.


8. Do not immerse cord, plugs, or appliance in water or any other liquids to avoid electrical shock.
9. Keep away from children. This appliance is not intended for use by children.
10. Unplug the appliance when not in use and before cleaning. Wait for the parts to cool before removing or replacing them.
11. Do not operate this appliance with a damaged cord or plug or after it has experienced any malfunctions or has been damaged in any way.
12. Do not let the cord hang over edge of table or counter. Keep cord away from hot surfaces.
13. Do not use outdoors.
14. Do not use under hanging cabinets because it may cause damage when steam occurs from pressure release.
15. Use of any accessories that is not for this product may damage the unit.
16. Always attach plug into the appliance first before plugging into the wall outlet.
17. Do not place on an unstable surface. It is strictly prohibited to use it on newspaper, foam, or any other material that may block the vent at the bottom.

A short power-supply cord is provided to prevent the risks of becoming entangled in or tripping over a longer cord.

An extension cord may be purchased and must be used properly.

If a long extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance. The longer cord must not drape over the surface where it can be pulled on by children or tripped over.

PRODUCT STRUCTURE & FEATURES

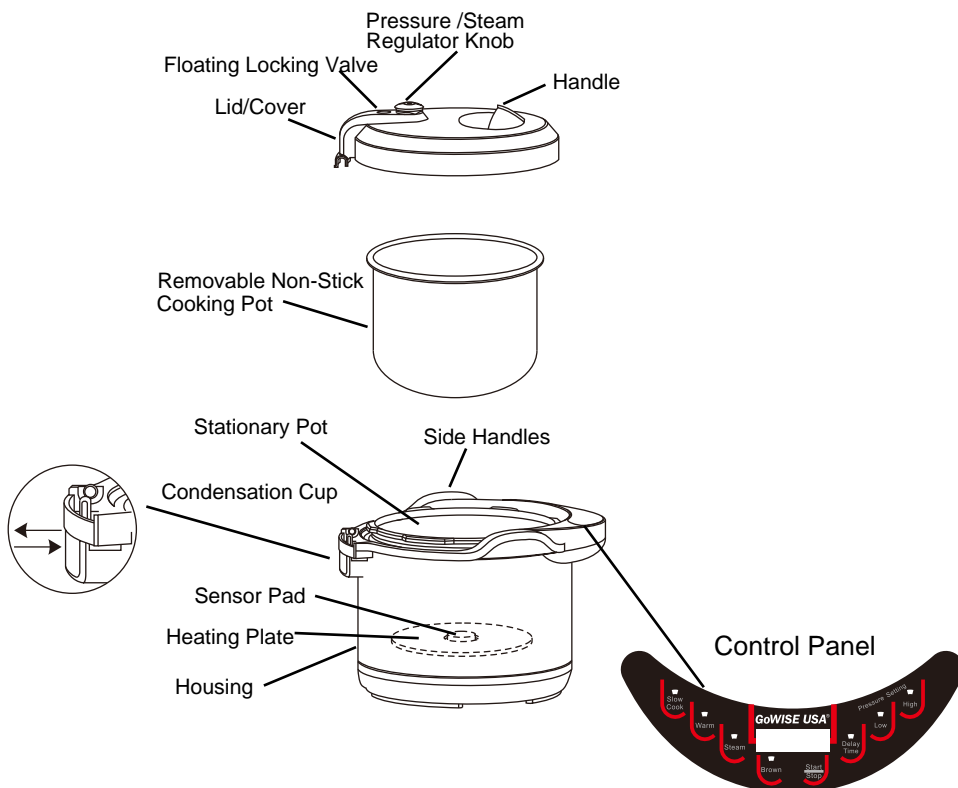

- The lid has a safety lock pin. The cooker will not start until the lid is closed and locked in place.
- Once the correct pressure is reached, it is maintained through the duration of the cooking time.
- Regulator knob is used to release pressure instantly.
- The cool touch handles are for transporting the cooker properly.


BEFORE FIRST USE

Remove any packing materials and labels from your electric pressure cooker. Be sure to remove cook pot and check for parts.

Be sure that all of the products parts are included before you dispose of the packing materials. However, you may want to store the box and packing material to use at a later time.


Before you use your *GoWISE USA®* Electric Pressure cooker for the first time, wipe the cooker clean with a damp cloth. Clean the lid and the cooking pot. The cooking pot can be cleaned with warm soapy water. Do not put the cooking pot in the dishwasher. Rinse with clean water, towel or let the pot air dry, and place it into the pressure cooker.

You must also install the sealing ring onto the inside of the lid as shown below:

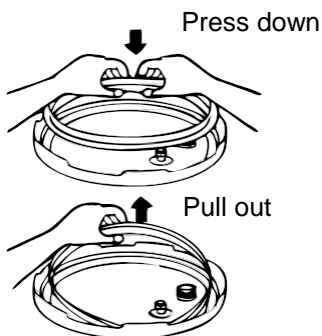

NOTE: You can take out the sealing ring after cooking your meals to clean it. You can clean the sealing ring with warm soapy water. Make sure to dry it before inserting it back into the lid.

PRESSURE COOKER SETTINGS

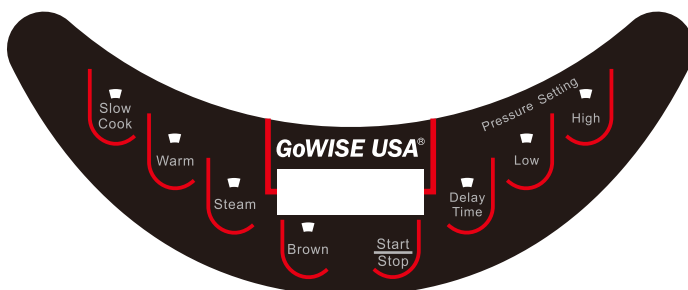

There are 6 settings that you can use on this pressure cooker. All settings have a time range. You can choose one of the cooking options; you are able to increase times by pressing the button repeatedly to the desired time.

You are able to choose one of the cooking times by pressing the button repeatedly. This pressure cooker comes with the following cooking options and times:


- Slow Cook : Up to 12 Hours
- Food Warmer : Up to 8 hours
- Steam : 0 – 99 minutes
- Brown : 0 – 99 minutes
- Low (Pressure Cooker Setting) : 0 - 99 minutes
- High (Pressure Cooker Setting) : 0 – 99 minutes
- Delay Timer : Up to 8 hours

NOTE: The cooking options “Brown” do not use pressure and do not require the lid; however, when using this option, you must be present to watch over the food that is being cooked to prevent it from burning.

How To Use Your Pressure Cooker

When all the parts are assembled properly, you are ready to start cooking with your pressure cooker.

1. To remove the lid, grasp the top handle and turn clockwise and lift.

2. Take the cooking pot from the pressure cooker and add food and liquids. **NOTE: Do not fill more than 60% of the capacity of the cooking pot. For food that expands, such as dried vegetables and beans, you must not exceed 50% of the capacity of the pot. When cooking with pressure, you must always use at least ½ cup of water.**
3. Put the cooking pot back into the cooker and close the lid. To lock the lid in place, place the lid on the cooker and turn it counterclockwise. **NOTE:** When opening and closing the lid, there is a locking pin on the side of the lid that goes out when you are opening the lid and goes back into the lid to indicate that the lid is closed and locked.
4. Set the regulator knob located at the top of the lid to the dot that is labeled “Pressure” by pushing the knob down and turning it clockwise.
5. Plug in the power cord into the pressure cooker then into the wall outlet. The LED display will show . Choose which cooking option you would like to use and set the time. For example, if you choose to pressure cook at a “High” pressure for 30 minutes, press the button labeled “High” repeatedly until you reach 30 minutes. For a faster time change, hold the button down. **NOTE:** To cancel the cooking option you set, press the “START/STOP” button.
6. Once you have set the cooking time, press the button that is labeled “Start/Stop” button to start the cooking cycle.
7. Three dashes will appear repeatedly on the LED display

and that means that the cooker is heating up and building pressure. Once there is enough pressure, you will see brackets blinking on the LED display. This means that the cooker has enough pressure to start the cooking cycle. The timer does not start until there is enough pressure inside the cooker.

8. When the cooker is done, it will beep. **DO NOT REMOVE THE LID.** There is still pressure being used inside the cooker. Release the pressure by turning to knob to “STEAM”. **NOTE:** When turning the regulator knob to release pressure, keep hands and face as far from the knob as possible to prevent from injury or scalding from the steam that will be released. When the cook cycle is completed, it will automatically go into the “Warm” mode. To cancel this function, press the “Start/Stop” button and four dashes should appear on the LED display.

Using the Slow Cooking Option

1. Remove the lid and fill the cooking pot with foods and liquids then put the cooking pot back into the cooker.
2. Set the cooking time by pressing on the “Slow Cook” button repeatedly, they come in half hour increments, until you reach the time that you want.
3. Press the “START/STOP” button to start the cooking cycle.
4. When there is enough heat, the timer will start to

count down and the cooking cycle will begin.

If you are have any questions regarding your pressure cooker, please contact Customer Service at 1-855-233-9199.

Using the Delay Timer

1. Remove the lid and fill the cooking pot with foods and liquids then put the cooking pot back into the cooker.
2. Choose the cooking option you want and set the time.
3. After you set the time, press the delay timer option, the time will come in 30 minute increments.
4. After setting the delay time that you want, press the "START/STOP" button.
5. The cooking cycle will begin after the delayed time.

NOTE: Do not use the delay timer when cooking foods that might spoil after being left out at room temperature.

If you are have any questions regarding your pressure cooker, please contact Customer Service at 1-855-233-9199.

CLEANING

1. Always unplug the cooker and let it cool down before you clean it.
2. Use a clean dry or damp soft cloth to wipe the cooker with. Do not immerse or spray the cooker with any kind of liquid.
3. Remove the condensation collector by pulling it down. Clean it with warm soapy water. Rinse and dry it thoroughly. Put the condensation collector back by pushing it up.
4. Clean the cooking pot with warm soapy water.
 - Always use a sponge or nonmetal brush to clean it.
5. Clean all parts of the inner side of the lid.

Regulator Knob Cleaning Instructions:

- Pull the regulator knob out of its housing.
- Clean the space of any food or foreign particles that may be in there.
- Replace the regulator knob by putting it back into the housing by pushing down.

Sealing Ring Cleaning Instructions:

- Remove the sealing ring and clean with warm soapy water. Be sure to dry the sealing ring before placing it back into the lid.

TROUBLESHOOTING

No.	Problem	Reason	Solution
1	Difficult to cover the lid	The seal gasket is not well placed. Floating valve is stuck on the bar.	Place the seal gasket in the proper position. Push the bar slightly.
2	Difficult to open the lid	Floating valve does not drop after pressure release.	Take up the regulator knob to release steam until the floating valve drops, then turn the lid to open it.
3	Steam leaking around the lid	Seal gasket is not placed. Food remains in the seal gasket. Damaged seal gasket The lid is not well placed	Place the seal gasket. Clean the seal gasket. Replace the seal gasket. Cover the lid according to the directions.
4	Steam leaking around floating valve	Food remains in the seal gasket of floating valve. The seal gasket of the floating valve is worn out.	Clean the seal gasket of the floating valve. Replace the seal gasket of the floating valve.
5	The floating valve cannot rise.	Too little food and water. Leakage around the lid or pressure displaying valve.	Add food and water according to the directions. Send it to a designated repair center

For any other problems that are not described above, please contact Customer Service at 1-855-233-9199.

WARRANTY

This product is warranted against defects in materials and workmanship for one year from the date of purchase, when used in accordance with the instructions provided. This warranty does not cover damages or wear resulting from accident, misuse, abuse, commercial use, or unauthorized adjustment and/or repair.

Ming's Mark Inc. dba **GoWISE USA®** shall not be liable for loss of use or any other incidental, consequential or indirect costs, expenses or damages. There are no express warranties except as listed above. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Should this product require service (or replacement at our option) while under warranty, CALL 1-855-233-9199 for RETURN INSTRUCTIONS. Be sure to keep your receipt showing the date of purchase.

GoWISE USA®
3550 W Clarendon Ave Suite #7
Phoenix, AZ 85019
www.gowiseusa.com
1-855-233-9199