All-in-One Vegetable Chopper

USER MANUAL






In the Box




1 x vegetable chopper

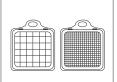

2 x square blades



1 x egg white filter

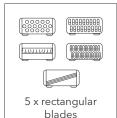



1 x cleaning brush




1 x slicing safety guard



1 x blade storage container


Introduction to Parts

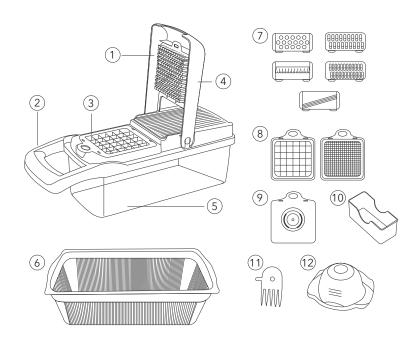

- 1. Presser
- 2. Handle
- Dicing blade slot
- 4. Slicing blade slot
- 5. Container
- 6. Basket strainer


- 7. Rectangular blades
- 8. Square blades
- 9. Egg white filter
- 10. Blade storage container
- 11. Cleaning brush
- 12. Slicing safety guard

Blades

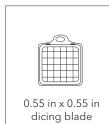





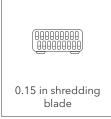








0.07 in slicing blade




How to Use

CAUTION: Blades are sharp and can cut your finger. Use with caution.

1. Clean all parts with dish soap before use. Remove the cover and place the basket strainer inside the plastic container (optional).

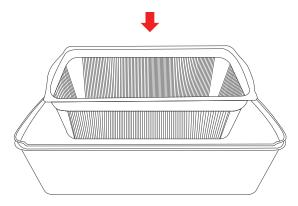


2. Place the cover onto the plastic container.

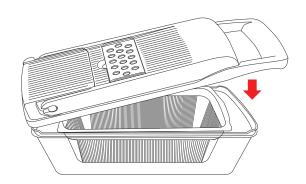


3. For dicing, open the top of the cover and insert your preferred dicing blade into the square slot.


Note: For eggs, insert the egg white filter into the square slot.

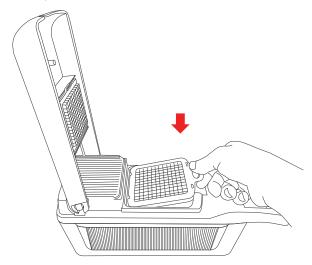

4. Place your vegetable in the middle of the square blade and firmly close the top.

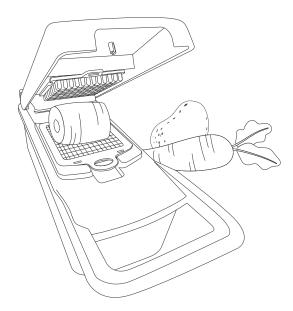


5. For slicing, remove the dicing blade and the presser from underneath the lid. Then close the top and insert your preferred blade into the rectangular slot.

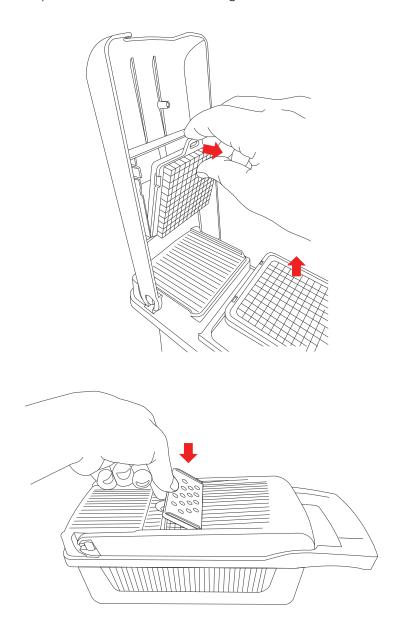

6. Pull up on the top of the slicing safety guard to reveal the spikes, and press firmly into your vegetable.



7. Move your vegetable back and forth along the blade.

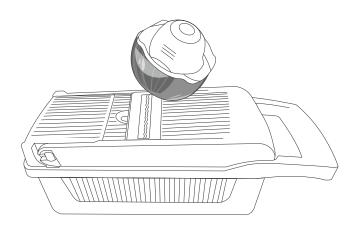

8. Clean all parts with dish soap after use.



Specifications

Capacity: 40.6 oz Weight: 1.4 lb

Product dimension: 13.0 x 4.5 x 4.5 in Materials: plastic / metal

Get More Support

Scan the QR code below or email us at contact@wasserstein-home.com





www.wasserstein-home.com

Made in China