




# QUAD Band GSM Relay Board and Auto-Dialler

A3.02/Firmware 3.20

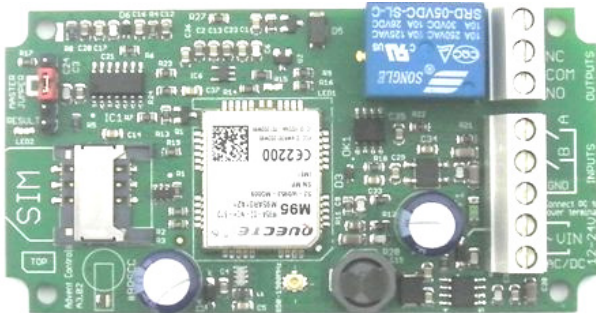

## Open-on-Call Access Control with Text Alert & Auto-Dial

for GSM850MHz, GSM900MHz  
DCS1800MHz & PCS1900MHz

[www.adventcontrols.co.uk](http://www.adventcontrols.co.uk)



**EMC/EMI Compliance Statement: CE Mark Declaration of Conformance**

Manufacturer's Disclaimer Statement:

The information in this document is subject to change without notice and does not represent a commitment on the part of the vendor. No warranty or representation, either expressed or implied, is made with respect to the quality, accuracy or fitness for any particular purpose of this document. The manufacturer reserves the right to make changes to the content of this document and/or the products associated with it at any time without obligation to notify any person or organisation of such changes. In no event will the manufacturer be liable for direct, indirect, special, incidental or consequential damages arising out of the use or inability to use this product or documentation, even if advised of the possibility of such damages. This document contains materials protected by copyright. All rights are reserved. No part of this manual may be reproduced or transmitted in any form, by any means or for any purpose without expressed written consent of its authors. Product names appearing in this document are mentioned for identification purposes only. All trademarks, product names or brand names appearing in this document are registered property of their respective owners.

**Contents**

|   |                                |                                                       |    |
|---|--------------------------------|-------------------------------------------------------|----|
| 1 | Introduction                   | 3                                                     |    |
|   | 1.2                            | Technical Specification                               | 3  |
|   | 1.3                            | Number Types                                          | 3  |
| 2 | Operation                      | 4                                                     |    |
|   | 2.1                            | Registration                                          | 5  |
|   | 2.2                            | Command Message Format                                | 5  |
|   | 2.3                            | Master Number Setup                                   | 5  |
|   | 2.4                            | Allowing Master Control for All Users                 | 6  |
|   | 2.5                            | Adding a User Number                                  | 6  |
|   | 2.6                            | Removing a User Number                                | 6  |
|   | 2.7                            | Viewing the Valid Number List                         | 7  |
|   | 2.8                            | Finding a Number in the Memory                        | 8  |
|   | 2.9                            | Clearing All Numbers and Settings                     | 8  |
|   | 2.10                           | Result Acknowledgement Message                        | 8  |
| 3 | Relay Operation/Access Control | 8                                                     |    |
|   | 3.1                            | Enabling Any Number and Disabling Open-on-Call        | 8  |
|   | 3.2                            | Call Reject                                           | 9  |
|   | 3.3                            | Connecting a Call                                     | 9  |
|   | 3.4                            | Input/Output Status Message                           | 9  |
|   | 3.5                            | Relay Activation Mode                                 | 10 |
|   | 3.6                            | Relay Activation Time                                 | 10 |
|   | 3.7                            | OPEN/ON & CLOSE/OFF Commands                          | 10 |
|   | 3.8                            | Exit Switch Enable                                    | 11 |
|   | 3.9                            | Output Change Acknowledge SMS                         | 11 |
| 4 | Auto-Dialler/SMS Sender        | 11                                                    |    |
|   | 4.1                            | Input Triggered SMS Text Sending and Auto-Dialling    | 12 |
|   | 4.2                            | Input Change State Level                              | 12 |
|   | 4.3                            | Customising the Input Alert Message                   | 13 |
|   | 4.4                            | Autodial Logic                                        | 13 |
|   | 4.5                            | Changing the Maximum Ring Time                        | 14 |
|   | 4.6                            | Changing the Maximum Call Time                        | 14 |
|   | 4.7                            | Changing the Maximum Silence Time                     | 14 |
|   | 4.8                            | Adding SMS Sender Text Numbers                        | 14 |
|   | 4.9                            | Adding Auto-Dialler Call Numbers                      | 14 |
|   | 4.10                           | Assigning a Number to One Channel Only                | 14 |
|   | 4.11                           | International Calling/Texting                         | 15 |
|   | 4.12                           | Dial Now                                              | 15 |
|   | 4.13                           | Input Hold-off Timer                                  | 16 |
|   | 4.14                           | Silencing the Alarm                                   | 16 |
| 5 | Setup                          | 15                                                    |    |
|   | 5.1                            | SIM Keep Alive Text                                   | 15 |
|   | 5.2                            | Signal Strength Indicator                             | 15 |
|   | 5.3                            | Power Up/Reset Text Message                           | 16 |
|   | 5.4                            | SIM Card Balance Checking and Service Data Forwarding | 16 |
|   | 5.5                            | Forwarding SMS Messages to any Number                 | 16 |
| 6 | Installation                   | 14                                                    |    |
|   | 6.1                            | Power Connection                                      | 14 |
|   | 6.2                            | Input Connection                                      | 14 |
|   | 6.3                            | Connection to a Burglar Alarm                         | 14 |
|   | 6.4                            | Output Connection                                     | 15 |
|   | 6.5                            | Antenna Connection                                    | 15 |
|   | 6.5                            | Mounting                                              | 15 |
| 7 | Command Set Summary            | 16                                                    |    |

## 1. Introduction

The Advent Controls Alpha GSM Relay Board has been primarily designed for security applications although can be used as a general purpose call/SMS activated relay. The board also features two optically-isolated DC inputs which can be used to trigger dialling and/or sending of customisable Short Message Service (SMS) alert messages to up to 512 numbers.

The relay can be activated by a call or SMS text from up to 512 stored telephone numbers or can be configured to activate when receiving a call from any number. By default the call will not be answered and hence costs the caller nothing. However, the system can also be set to reject the call or connect a call when either the input is open or closed (or both). This allows the input status to be determined even when the SIM card does not have credit for SMS text messages.

Setup and operation is performed by simple SMS text messages including adding and removing user telephone numbers. A complete list of accepted telephone numbers can be viewed via SMS text message. The memory can also be scanned to see if it contains an individual number and the result is displayed by the on-board LED and (if enabled—see **2.10 TEXTRES**) by SMS text message. SIM card balance checking can also be achieved using the SMS and Service data forwarding functions.

The output relay has both Normally Open (NO) and Normally Closed (NC) with Common (COM) connections. The action of the relay can be a single timed actuation from either 1s to 999s or 1 to 999 minutes or the relay can be set to toggle between calls.

## 1.2 Technical Specification

|                               |                                                          |
|-------------------------------|----------------------------------------------------------|
| Power Supply                  | 12-24V AC or DC 400mA Max. (35-20mA idle)                |
| Average Current (in-call)     | 60mA @ 28VDC, 95mA @ 18VDC, 130mA @ 12VDC                |
| Relay Output                  | 5A Max. CATIII 220VAC                                    |
| SIM                           | 1.8/3.6V                                                 |
| Compliant with GSM Phase 2/2+ | Class 4 (2W @850/900 MHz)<br>Class 1 (1W @1800/1900 MHz) |
| Antenna                       | 50Ω U.FL                                                 |



## 1.3 Number Types

When adding a telephone number to the system it can be set up as one of five different telephone number types with each type having a specific purpose. There is space for 512 numbers and each number can be set up as any type of number. For example you may wish to have 200 masters and 312 users. **All four user (non-data) number groups can operate the output relay by SMS text or by calling the board.**

### Master Numbers

These numbers are used to make changes to the system including adding other numbers. At least one master number must be set up when the system is first used (see **section 2.3**). Once one master number is set up it can then be used to set up other master numbers

Example Master Number setup command:

Master 07000000000.

## User Numbers

User numbers are only able to operate the relay output. This can be via SMS text or by calling the board. Unless MUSER is enabled (this makes all numbers master numbers) user numbers cannot access any command functions.

Example User Number setup command:

```
Add 07000000000.
```

## Text Numbers

These numbers are the recipients of input triggered SMS text messages. The board sends SMS text messages to these numbers in the order in which they are added. These numbers cannot access any of the board's command functions but are able to operate the output relay by call or text. Note, if a master or user sends a command to the board which results in a SMS text reply, the reply is sent to the sender of the command and not the list of text numbers.

Example Text Number setup command:

```
TEXTNUM 07000000000.
```

## Call Numbers

Call numbers are dialled when the input is triggered. Call numbers are dialled before the sending of SMS text messages to the Text Numbers. They are dialled in the order in which they are added. The numbers are dialled sequentially until a call is answered and rejected or a call is answered and the # key is pressed. See Section 4.1 Auto-Dialler for details.

Example Call Number setup command:

```
Callnum 07000000000.
```

## Data Numbers

Data Numbers are setup in a similar way to master numbers and allow settings to be amended using software. A call from a data number may leave the unit unresponsive for up to 3 minutes after the call has ended. Data numbers cannot activate the output relay. Details of the software are not covered in this manual. Please see the Advent Controls website/blog.

```
Data 07000000000,37212.           for module with IMEI 355073034237212
```

## 2. Operation

### 2.1 Registration

A valid GSM Subscriber Identity Module (SIM) card must be present in the SIM holder for the system to operate. Immediately on power up the system will attempt to register on the SIM card on it's home network. Once registration has occurred LED1 will change from flashing approximately once every second to a momentary flash once every two seconds. If the LED1 continues to flash once every second for some time, the system cannot register the SIM on the network. The system will restart should this occur. If the problem persists check the antenna and strength of signal in your area/validation of the SIM card. **Remove any PIN numbers from the SIM card.** Observe anti-static precautions when inserting the SIM.

The second LED, LED2 found by the 5 pin header, is used to display the result of a command. **The LED will flash twice to acknowledge the successful receipt of a command** and will light continuously for 2s to show the instruction has failed. It also illuminates during any call (valid or invalid) and lights continuously when a signal cannot be found (network dependent).

## 2.2 Command Message Format

To operate the system a master GSM phone is used to send SMS text messages to the system telephone number. All message follow a similar format as follows:

COMMAND<space>action. (eg. Master 0700000000.)

The command (see **Section 7**) is always written first followed by a space and the action required. Although not necessary, it is useful to include a full stop immediately after the action as some mobile phones can enter superfluous characters at the end of a message, which can invalidate the message. The message is **not** cAsE sensitive.

## 2.3 Master Number Setup

The system is controlled by the master GSM mobile phone numbers (see **2.2 Number Types**). The system must first be associated with at least one master phone's number before it can be used. To do this the supplied 2.54mm jumper connector must be fitted to pins 3 & 4 on HDR1 as shown in red in Figure 1. **Do not connect the jumper to any other pins or damage may result.**



Figure 1. Jumper pins

The master phone number must then be sent via a SMS text message to the system phone number as follows:

**MASTER<space>number.**

For example, if the master telephone number is 07000 000 000:

**MASTER 0700000000.**

Also valid are the following:

**Master 0700000000 and master 0700000000**

The following messages are invalid:

master 07000 000 000. (spaces in the number)  
master0700000000 (no space after 'master')

The result LED, LED2, will flash two times to indicate the master number has been successfully setup. Calling the board's telephone number with the master phone will now activate the relay. Once one master number has been setup further masters (up to 512) can be setup by this and subsequent master phones without the jumper fitted (using the same message).

### Using the PIN for Master Setup

The Master Number can also be set up using the PIN. This is only possible for the first master number that is added to the system. Subsequent masters must be added by a master using the MASTER command. The PIN is the last 5 characters of the IMEI number written on the QUECTEL GSM module sticker. The command is sent as follows:

**Master 0700000000,37212.** for module with IMEI 35507303423**7212**

## 2.4 Allowing Master Control for all Users

To enable any user to control master commands (such as adding and removing numbers) the MUSER command is sent to the board, by a master number, as follows:

|                      |                                                 |
|----------------------|-------------------------------------------------|
| <b>MUSER ENABLE</b>  | Allows any valid user number to modify settings |
| <b>MUSER DISABLE</b> | Only master numbers can modify settings         |

By default MUSER is set to disable full access for all users. N.B. Only master numbers can add other master numbers despite this setting

## 2.5 Adding a User Number

Any telephone number of at least 5 digits where caller ID is available is valid. The system only compares the last 8 digits (if present) of any calling number against the numbers stored in memory. Therefore it is not necessary to enter the international dialling code format of the telephone number.

i.e. for 070**00000000** only the characters shown in **BOLD** text are considered

The ADD command is used to add a new telephone number. To add a new number any master phone must send the following SMS text message to the system telephone number:

**add**<space>*number*. e.g. **Add 07000000000.**

If TEXTRES is enabled the system will respond with the 'Operation Successful' message.

## 2.6 Removing a User Number

The REMOVE command is used to remove an existing telephone number. To remove an existing telephone number any master phone must send the following SMS text message:

**remove**<space>*number*. e.g. **REMOVE 07000000000.**

The REMOVE command must be sent for each number in the memory. The user can specify which number type is desired to be removed and only that type will be removed regardless of whether the number is already in the memory in a different form.

For example to remove a Call Number the 'C' character is appended after the word remove as follows:

**REMOVEC** 07574163361.

This will only remove instances of the number 07574163367 that are stored as Call Numbers.

The following shows the characters associated with each number type:

**T**—Text Number

**C**—Call Number

**M**—Master Number

**D**—Data Number

None specified—Any number (including User Numbers)

If TEXTRES is enabled the system will respond with the 'Operation Successful' message. If the number is not found the 'Operation Failed' message will be sent by the system.

## 2.7 Viewing the Valid Number List

The system can send a SMS text message containing a complete list of valid user numbers to any master phone.

To receive the list of numbers the LIST command is used. The master phone must send the following SMS text message to the system:

### List

The response format shows the number type, the channel (if applicable) and the last 8 digits of the stored number followed by a space and the next number and so on...

Number Types:

**T**—Text Number

**C**—Call Number

**M**—Master Number

**U**—User Number

**D**—Data Number

**K**—Keep Alive Number

Input Channels:

**A**—Channel **A**

**B**—Channel **B**

**M**—Multiple (Both A&B)

The numbers are in the reverse order to the order they were added with the primary master not displayed.

e.g. TA74163367 CM17283167 D51953899 U17283167 M30666575

07574163367 is a Text Number for Channel A

01517283167 is a Call Number for both channels and so on...

## 2.8 Finding a Number in the Memory

When a large number of numbers are stored in the memory using the LIST command can be impractical. To find whether an individual number is stored in the memory the master user sends the following command to the board:

**QUERY**<space>number.      or  
**QNUM**<space>number

*NB the number should be the full number (not the 8-digit truncated number)*

If the number is present the LED will flash 4 times and if not in the memory the LED will light twice for 2 seconds. If TEXTRES is enabled an SMS text message will be sent with the result.

## 2.9 Clearing All Numbers and Settings

The CLEAR ALL command is used to erase all stored user and master numbers. To erase all numbers the following SMS text message is sent by a master number:

### **CLEAR ALL**

No response is sent by the system to acknowledge the command. This does not affect the customisable input text messages.

## 2.10 Result Acknowledgement Message

The system can be setup to send a SMS text message to acknowledge a command. This acknowledges the result of the last command processed such as adding a new user number. The SIM card in the system must have sufficient credit for sending SMS text messages. To enable/disable the service the following text message is sent by the master number:

**TEXTRES enable**      (or also valid: **TEXTRES e**)

**TEXTRES DISABLE**      (or also valid: **TEXTRES d**)

The result message 'Operation Successful' is sent when the service is enabled

## 3 Relay Operation/Access Control

### 3.1 Enabling Any Number and Disabling Open-on-Call

The system can be setup to allow any number to operate the relay output. To enable any call the CALL command is used with the action ANY and is sent by the master phone in the following format:

#### **Call any**

To return the system to operate from only valid user numbers the LIST action is sent with the CALL command as follows:

#### **call list**



To disable activation of the relay by calling the following command is sent to the board (the relay can still be activated by SMS text; see OPEN/ON & CLOSE/OFF commands):

### CALL NONE

To switch the inputs on and off the CALL DIALER command is used. There is no relay activation by calling in this mode (although it can be activated by SMS text)

**CALL DIALER** switches the inputs on and off (see section 4)

When the inputs are being disabled the call is rejected; when the inputs are being enabled the system rings out

### 3.2 Call Reject

By default any call to the system will be allowed to ring indefinitely (or up to the host network time limit). This is to avoid calls being diverted to voicemail when rejected by the system. However the system can be instructed to reject (hang up) calls using the REJECT command:

**REJECT ALL** rejects all *valid* calls

The reject command can also be used to determine the status of the relay when in toggle mode by sending the following command:

**REJECT OPEN** rejects the call when the call is deactivating the relay  
connects the call when the call is activating the relay

**REJECT NONE** disables all call rejection

### 3.3 Connecting a Call

By default, when called the system is set to ring indefinitely or until the SIM card network operator transfers the call to voicemail. However the system can be set to connect a call when the input is **OPen** (high/12V) or **Closed** (low/0V). This is done to allow the caller to know the state of the input even when the system has insufficient credit to send a status SMS text message. See also the REJECT command if call rejection is preferred.

To change the connect mode the CONN command is sent by the master phone with the action **CL** or **OP**. To disable connect on call the **NO** action is sent.

e.g. **CONN CL** connect when input high  
**CONN OP** connect when input low  
**CONN NO** do not connect call

### 3.4 Input/Output Status Message

To determine the current status of the input terminal and output relay the STATUS command is sent to the system telephone number by a master phone as follows:

#### STATUS

The system will respond with a SMS text message as follows:

RELAY OPEN INPUT LOW relay not activated/input closed (GND)  
RELAY CLOSED INPUT HIGH relay activated/input open (+V)

### 3.5 Relay Activation Mode

When a valid call is received the relay can be set to activate for a set period of time (set by the RLYTIME command), to activate whilst the caller is ringing or to toggle between states on each call. By default the relay mode is set for timed (pulsed) activation. To switch to toggle mode the following message is sent to the system by the master number:

**RLYMODE TOGGLE** enables toggle mode

To activate the relay for however long the caller rings (n.b. turn off voicemail!)

**RLYMODE RING** relay active whilst phone rings

To revert to timed (pulsed) mode the following message is sent:

**RLYMODE PULSE** relay Normally Open (NO)

### 3.6 Relay Activation Time

The RLYTIME command is used to adjust the time the relay is active following a call when RLYMODE is set to PULSE. By default the relay time is set to 3s. The time can be set from 1s to 999 seconds or 1 to 999 minutes using this command.

To change the activation time the master number sends a SMS text message as follows:

RLYTIME *seconds*.

|      |                      |                                       |
|------|----------------------|---------------------------------------|
| e.g. | <b>rytime 10.</b>    | 1 second activation time              |
|      | <b>rytime 250s</b>   | 250 second activation time            |
|      | <b>Rlytime 1m.</b>   | 1 minute activation time              |
|      | <b>RLYTIME 960m.</b> | 16 hour (16 x 60mins) activation time |

### 3.7 OPEN/ON & CLOSE/OFF Commands

The OPEN and ON commands are used to activate the relay with a SMS text message. The CLOSE and OFF commands deactivate the relay, whether activated by the OPEN or ON command or a call. When the OPEN command is sent without any additional instructions the relay is activated indefinitely. When sent with a value and **m**(inutes) or **s** (econds) parameter the relay activates for a set period of time. The maximum number length is three characters therefore the timer is limited to 999 seconds or 999 minutes. If the m or s parameter is not sent then the timer value is read as the number of seconds.

The ON and OFF commands are identical to the OPEN and CLOSE commands respectively and can be used interchangeably.

When sent with additional time information the relay is activated for however many seconds or minutes specified.

|      |                   |                                                  |
|------|-------------------|--------------------------------------------------|
| e.g. | <b>OPEN</b>       | activates relay indefinitely                     |
|      | <b>on</b>         | activates relay indefinitely                     |
|      | <b>open 10.</b>   | 10 second activation time (s parameter optional) |
|      | <b>Open 250s</b>  | 250 second activation time                       |
|      | <b>ON 1m.</b>     | 1 minute activation time                         |
|      | <b>open 960m.</b> | 16 hour (16 x 60mins) activation time            |

|              |                                        |
|--------------|----------------------------------------|
| <b>CLOSE</b> | deactivates relay under all conditions |
| <b>OFF</b>   | deactivates relay under all conditions |

*If the system loses power the relay state is restored when the power is reconnected!*

### 3.8 Exit Switch Enable

The INPUTA connection can be used to activate the output relay which is ideal for connection to a secure-side exit switch. It uses the trigger level for the input text message (see INLVL) and activates the relay as per a phone call. To enable the exit switch input the EXIT command is sent to the board as follows:

|                     |                               |
|---------------------|-------------------------------|
| <b>EXIT ENABLE</b>  | enables the exit switch input |
| <b>Exit disable</b> | disable the exit switch input |

### 3.9 Output Change Acknowledge SMS

Where necessary the board can send an acknowledgement SMS text message to all of the TEXTNUM numbers showing the current status of the output. When the output is actuated by a telephone call or text message the activating number is also sent. When the output is activated via an exit switch (see section 3.8) on INPUTA the relay status and 'MANUAL' message is sent. To activate and de-activate the acknowledge message the following command is sent to the board:

|                            |                               |
|----------------------------|-------------------------------|
| <b>Acknowledge Enable</b>  | enables the acknowledge text  |
| <b>ACKNOWLEDGE DISABLE</b> | disables the acknowledge text |

*also valid,*

|              |                     |
|--------------|---------------------|
| <b>ack e</b> | acknowledge enable  |
| <b>ack d</b> | acknowledge disable |

### 4.1 Auto-dialler: Input Triggered SMS Text Message Sending and Autodialing

The inputs can be used to trigger the sending of customisable SMS text messages to all of the 'text numbers' (see section **1.3 Number Types**) and to sequentially dial all of the 'call numbers' (see section **1.3 Number Types**).

Call numbers are given priority and are dialled before the sending of SMS text messages to the Text Numbers. If no call numbers are stored no call dialling will occur and the system will begin sending SMS text messages straight away.

Each input can be configured to either send a text message, initiate dialling or both send a text message and dial the call numbers. Each input can also be disabled by SMS remotely.

Each input has it's own customisable message (see section 4.3) which can be sent when the associated input is triggered.

Dialling can be triggered by either input in a logical OR configuration or can be triggered only when both inputs are active in a logical AND arrangement (see section 4.4). Additionally, dialling can be triggered only when input A is triggered followed by input B in an A THEN B sequence.

Calls are dialled in the order in which they are added. The numbers are dialled sequentially until a call is answered and rejected (hung-up) or a call is answered and the # key is pressed or until all of the numbers have been dialled.

If a call is answered the system will automatically hang up the call after 5s. The board will then call the next number. During the 5s call the recipient can end dialling by holding the # key on their phone or by ending the call if the recipient is a mobile phone. After dialling is complete, the system will proceed to send the customisable text message to the list of text numbers.

The maximum call length in auto-dialler mode is fixed at 5s. The maximum ring time (the time between dialling and call pick up) can be set using the RTIME command. The triggering of dialling and SMS messaging can be delayed using the HOLD command. If the input ceases to be active during the holding period the dialling and texting is cancelled. This is useful were the input is used to inform the user a door has been

To enable autodialing on either input the following command is sent via a SMS text message by any master telephone number:

|                       |                                                          |
|-----------------------|----------------------------------------------------------|
| <b>INPUTA Auto</b>    | enables autodialing on input A                           |
| <b>INPUTA Text</b>    | enables SMS text sending on input A                      |
| <b>INPUTA Both</b>    | enables both autodialing and SMS text sending on input A |
| <b>INPUTA Disable</b> | disables input A                                         |

|                       |                                                          |
|-----------------------|----------------------------------------------------------|
| <b>INPUTB Auto</b>    | enables autodialing on input B                           |
| <b>INPUTB Text</b>    | enables SMS text sending on input B                      |
| <b>INPUTB Both</b>    | enables both autodialing and SMS text sending on input B |
| <b>INPUTB Disable</b> | disables input B                                         |

also valid;

|                 |                                               |
|-----------------|-----------------------------------------------|
| <b>inputb a</b> | enables autodialing on input B                |
| <b>input t</b>  | input A is the default input if not specified |
| <b>inpb b</b>   |                                               |
| <b>INPB D</b>   |                                               |

## 4.2 Input Change State Level

The INLEVEL sets the active state of the input for triggering the auto-dialler. For example, if the user requires triggering when the input is (going) closed (GND), then the following message is sent by the master number:

|                       |                                   |
|-----------------------|-----------------------------------|
| <b>INLEVEL CLOSED</b> | trigger when input A closed (GND) |
|-----------------------|-----------------------------------|

If the trigger is required when the input goes open the following message is sent:

|                     |                                 |
|---------------------|---------------------------------|
| <b>INLEVEL OPEN</b> | trigger when input A open (+VE) |
|---------------------|---------------------------------|

The input functions become inactive whilst the input remains in the active state (i.e. GND for INLEVEL CLOSED/+V for INLEVEL OPEN) and remains inactive for 5 seconds after returning to the idle state. **INLEVEL BOTH** allows triggering on either edge (no inactive state)

|                     |                                |
|---------------------|--------------------------------|
| <b>INLEVEL BOTH</b> | trigger input A on either edge |
|---------------------|--------------------------------|

By default changes will only be made to input A if not specified by the INLEVEL command. To change input B the following commands are sent:

|                        |                                   |
|------------------------|-----------------------------------|
| <b>INLEVELB CLOSED</b> | trigger when input B closed (GND) |
| <b>INLEVELB OPEN</b>   | trigger when input B open (+VE)   |
| <b>INLEVELB BOTH</b>   | trigger input B on either edge    |

similarly;

|                   |                                       |
|-------------------|---------------------------------------|
| <b>INLEVELA C</b> | trigger when input B closed (GND)     |
| <b>INLA O</b>     | trigger when input A open (+VE)       |
| <b>INL B</b>      | trigger input A on either edge (BOTH) |

### 4.3 Customising the Input Alert Message

The default input alert message is '>INPUTX ACTIVE'. This can be customised by the user using the CUSTOM command for each input. The maximum length of the message is 127 characters and it **must** end with a full stop. The custom command is used as follows:

**CUSTOMA THE GATE IS OPEN.**

**CUSTOMB THE PUMP HAS STOPPED PLEASE CALL 07000000000.**

Use only text or number characters in the message. The message will end where there is a full stop. Do not use a full stop in the middle of the message. If you do not specify channel A or B the message is applied to channel A.

Separate messages can be specified for when the channel is triggered by a positive going (logic HIGH) edge or a negative going edge (LOW). This is achieved by adding the appropriate suffix to the command (this is particularly useful when INLEVEL is set to BOTH:

CUSTOMAH this is sent when input A goes positive.

CUSTOMBL this is sent when input B goes negative.

### 4.4 Autodial Logic

By default, if both inputs are set to autodial, then if either input is triggered dialling will commence (OR configuration). If desired the system can be set to require both inputs to be in the active state in order to initiate dialling (AND configuration). Additionally the system can be set for input A to be triggered before input B (A THEN B) in order to initiate dialling. To change the autodial logic settings the following message is sent to the board:

|                      |                                                        |
|----------------------|--------------------------------------------------------|
| <b>autodial AND</b>  | requires both inputs to be active to initiate dialling |
| <b>autodial OR</b>   | triggering either input initiates dialling             |
| <b>AUTODIAL THEN</b> | A THEN B triggering                                    |

**aut A**  
**aut o**  
**Aut T**

### 4.5 Changing the Maximum Ring Time

The maximum time for which the system will attempt dialling before dialling the next number is set using the RTIME command. The default time limit is 60s. The RTIME command is specified in seconds and can be set from 1s to 255s. Most calls will require at least 15s for connection which is included in RTIME.

**RTIME 45.** sets the maximum ring time to 45 seconds

### 4.6 Changing the Maximum Call Time

The maximum time limit for an answered call is set using the CTIME command. The default time limit is 45s. The CTIME command is specified in seconds and can be set from 1s to 255s.

**CTIME 45.** sets the maximum call time to 45 seconds

### 4.7 Changing the Maximum Line Silence Time

The maximum time for which a silent call will remain connected is set using the SILENCE command. This is useful were a call may be redirected to voicemail. The silence during recording will cause the system to hang the call. The default silence time is 15s and can be set from 1s to 255s.

**STIME 25.** sets the maximum line silence time to 25 seconds

#### **4.8 Adding Auto-dialler SMS Text Numbers**

The system can send the input triggered message (2.16) to up to all 511 numbers. To add a text number the following SMS text message is sent to the system by any master number:

**TEXTNUM**<space>*number*.

e.g. **textnum 07000000000**.

#### **4.9 Adding Auto-dialler Call Numbers**

The system can call up to all 511 numbers when the input is triggered. To add a call number the following SMS text message is sent to the system by any master number:

**CALLNUM**<space>*number*.

e.g. **callnum 07000000000**.

#### **4.10 Assigning a Number to One Channel Only**

Both Call and Text Numbers can be assigned to call/text only when one particular channel is activated. This is done by appending A or B to the CALLNUM and TEXTNUM commands as follows:

**CALLNUMA 07000000000** calls the number 07000000000 only when channel A is active  
**TEXTNUMB 07000000000**texts the number 07000000000 only when channel B is active

**N.B. Text/Call numbers can also activate the output—there is no need to ADD the number**

#### **4.11 International Calling/Texting**

The system can call/text international numbers, however the exit code should not be specified and should be replaced with the '+' symbol e.g:

UK Number 07574163367 should be entered as +447574163367 when outside the UK

#### **4.12 Dial Now**

If necessary the system can make a call to a number not stored in it's memory at any time. This is achieved using the DIAL command. The call observes the RTIME, CTIME and SILENCE time settings

**DIAL**<space>*number*. make an ad-hoc call to the specified number

e.g. dial 01517283167.

The call will end when the other party hangs up or the CTIME or SILENCE time limit is reached.

#### **4.13 Input Hold-off Time**

Dialling and SMS sending can be delayed from 1 second to up to 250 minutes (over 4 hours) on either input using the HOLD command. Additionally after sending the SMS message/dialling the call numbers the system can repeat the action after the delay time again if required. To set up the hold-ff time the following SMS text is sent to the system;

**HOLD 10** 10s delay on Input A  
**HOLDA R10** 10s delay on Input A; repeat every 10s

HOLDB R120m. 120 minute delay on Input B; repeat every 120 mins (2 hours)  
Holdb 2s                      2 second delay on Input B

holda 0                      turn off delay on Input A (set delay time to zero)

NB. If the input is not specified then the default input is Input A

#### 4.14 Silencing the Alarm

The bell –ve wire can be routed through the relay COM and NC terminals onto the bell. This allows the relay to break the connection when active and silence the alarm. Whilst the bell is sounding the SILENCE command can be used to silence the bell. The connection is re-established once both inputs return to the idle state (i.e. the alarm panel is reset)

silence                      activates the output relay until the input is idle

### 5 Setup

#### 5.1 SIM Keep Alive Text

When using a Pay As You Go (PAYG) SIM card, to avoid SIM card deactivation, the system will periodically call a dedicated telephone number (+441512834306) and can send a SMS text message to keep the SIM active. Ensure the SIM card has sufficient credit to make a call or text (the call will be answered and will be active for 15s). To setup the Keep Alive Text function the following SMS text message is sent to the system:

**KAT**<space>*number,frequency.*                      enables periodic text message sending

e.g.        **KAT 07000000000,10.**                      (text 07000000000 every 10 days)  
             **KAT Off**                                              disables periodic text message sending

Frequency—number of days interval

The default setting for the Keep Alive Call, KAC, are a call to +441512834306 every 56 days. This can be changed using the **KAC** command:

**KAC +441512834306,50.**                      dials +441512834306 every 50 days

If the KAC fails, a message will be sent to the master numbers with the text 'KAC#FAIL :('". This can be due to the KAC number having been removed without switching off the KAC function with 'KAC OFF'. A manual call should be made using the **DIAL** command.

#### 5.2 Signal Strength Indicator

When setting up the system it is important to know the strength of signal for reliable operation. To receive a message showing the Received Signal Strength Indicator (RSSI) the CSQ command is sent to the system as follows:

#### CSQ

When the system SIM card has sufficient credit a SMS text message is sent to the number which sent the command displaying the current RSSI.

e.g. >RSSI 21

It is recommended that the minimum signal level for the installation is 15 (-83dBm) to ensure reliable operation. The system will operate below 8 (-100dBm) but may become unresponsive at times.

To achieve an improved RSSI the standard antenna can be upgraded to a model with higher gain and/or the antenna should be positioned in an area with less physical obstruction. An extension lead can be attached to the SMA connector on the PCB to locate the antenna away from the control unit housing.

### 5.3 Power Up/Reset Text Message

The system can send an message to all the text numbers when a system reset or power up has occurred. This can be due to network failure or power cycling (power off followed by power on). Note the system repeatedly resets during network outage. You will only receive 1-message after a network outage.

|                     |                                    |
|---------------------|------------------------------------|
| <b>RSMS Enable</b>  | enables the reset text message     |
| <b>RSMS Disable</b> | disables the reset text message    |
| <b>PSMS Enable</b>  | enables the power up text message  |
| <b>PSMS Disable</b> | disables the power up text message |

### 5.4 SIM Card Balance Checking and Service Data Forwarding

The system is able to forward SMS messages and Service Data which networks use to display remaining air-time minutes or credit. The forward function can also send network data used to register a SIM with the network website. All forwarded data is sent to the phone which set the service up. The forwarding service can be permanently enabled to forward all unsolicited messages from unrecognised numbers (i.e. not user or master numbers) to the forwarding phone number. However, to stop excessive 'spamming' and wasting credit, the service can be enabled in temporary mode limiting to forwarding messages for only 3 minutes after a master user has sent a valid message (typically the SMS or DIAL command). Additionally only one message will be forwarded every minute to ensure excessive numbers of messages are not sent.

|                 |                                                                  |
|-----------------|------------------------------------------------------------------|
| Forward Enable  | Forwarding service permanently enabled                           |
| Forward Temp    | Forwarding for up to 3 mins after a valid messaged received only |
| Forward Disable | No SMS/Service Data Message forwarding                           |

Networks require either a SMS text message to be sent to retrieve a balance or a network code to be dialled. Please check with your network to find your balance checking method.

### 5.5 Forwarding SMS Messages to any Number

Typically the SMS command is used to forward a SMS text to the network to request a balance. However the SMS function will forward the text to any number specified.

**SMS** <number>,<text>.

Typical example (Orange, T-Mobile Balance Request)

**SMS** 150,Balance sends 'Balance' to 150

This will text 'Balance' to number 150. Please note you need to ensure the forward service is set up as above to receive a reply from the system

For network which require a code to be dialled use the DIAL for example Vectone UK:


**DIAL** \*102# dials '\*102#' for a balance request (see section 4.10 Dial Now)



## 6 Installation

### 6.1 Power Connection

A fused AC or DC power supply of between 12 and 24V (MAX!) should be used with this unit. AC voltages over 27VAC will cause the on board thermal fuse to trip and may cause erratic operation. We recommend you measure the supply voltage when using AC to ensure it does not exceed this voltage during normal operation.

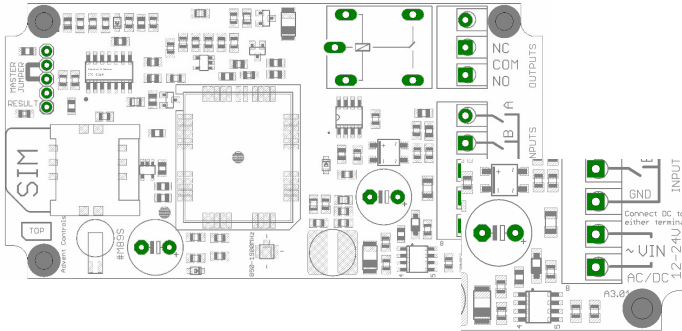


AC power supplies should be connected to either of the ~VIN terminals. Similarly DC supplies should be connected to these terminals with the polarity connected either way around (i.e. +ve and -ve connected to either of the ~VIN terminals). If DC supply voltages are liable to drop below 12VDC or it is mandatory that the GND terminal be at the same voltage level as the supply ground, connect the negative (0v) supply to the GND terminal and the supply +ve to the outer-most ~VIN terminal (terminal number 5). This will bypass the bridge rectifier for the GND negative supply.

**Please note if using this equipment in a motor vehicle please consult Advent Controls prior to fitting ([support@adventcontrols.co.uk](mailto:support@adventcontrols.co.uk))**

### 6.2 Input Connection


The inputs are optically isolated from the digital circuitry. Both inputs are active low and should be connected to the GND terminal in the active state. Input impedance is 4.4kΩ and is limited to 13V max. The input features protection against over-voltage but should not exceed 50V.

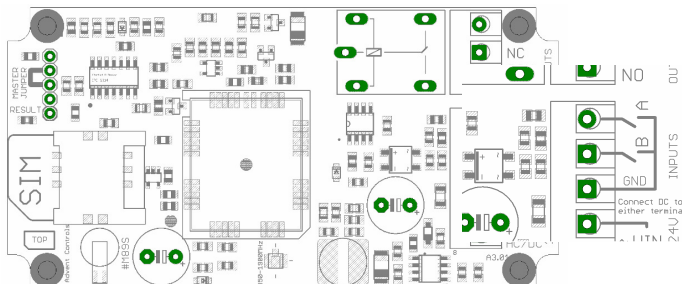




## 6.5 Antenna Connection

The standard antenna can be used where a good signal exists. In areas with a poor signal an external antenna is recommended connected via RG174 coaxial cable. The system antenna connection is a male Hirose U.FL connector. The supplied pigtail is a U.FL female to SMA female connector. It is not recommended to use an extension greater than 3m in length.

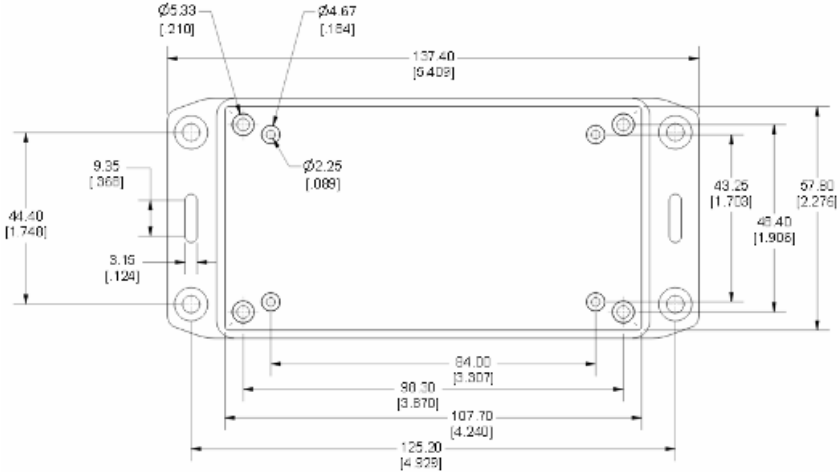

## 6.6 Mounting

The PCB has been designed to fit into a Hammond 1591B enclosure. When mounting the unit into such an enclosure the enclosure must be modified to allow for the antenna/coaxial cable to be connected. When mounting in a metal cabinet, an external antenna must be used, connected using 50ohm impedance coaxial cable. If required, please contact [support@adventcontrols.co.uk](mailto:support@adventcontrols.co.uk) for assistance.

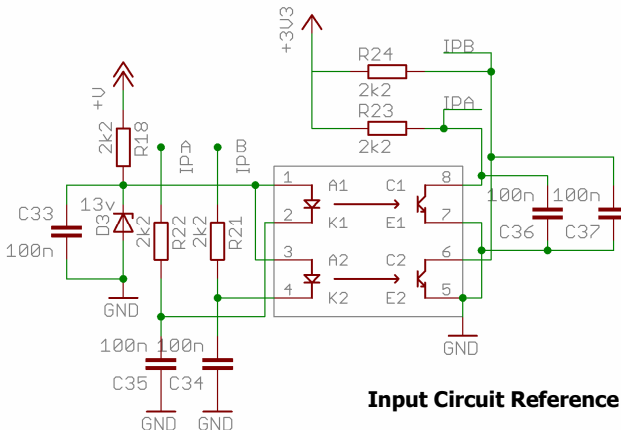

**Input Circuit Reference Schematic**

## 7 SMS Command Set Summary



Developed and Manufactured by Advent Controls Ltd, Liverpool, UK  
**BOLD** indicates default settings

| Command                | Action                   |                          |      | Comments                       |
|------------------------|--------------------------|--------------------------|------|--------------------------------|
| <b>ACKNOWLEDGE</b>     | <b>DISABLE</b>           | ENABLE                   |      | SMS on Relay Change State      |
| <b>ADD</b>             | <i>number</i>            | .                        |      | Add User Number                |
| <b>AUTODIAL</b>        | <b>OR</b>                | AND                      | THEN |                                |
| <b>CALL</b>            | <b>LIST</b>              | ANY                      | NONE | Call Handling                  |
| <b>CALLNUM(A/B)</b>    | <i>number</i>            |                          |      | Add Autodial Call Number       |
| <b>CLEAR</b>           | <b>ALL</b>               |                          |      | Factory Reset (CLEAR ALL)      |
| <b>CLOSE</b>           |                          |                          |      | Deactivate Relay               |
| <b>CONNECT</b>         | <b>NONE</b>              | CL                       | OP   | Connect Call Condition         |
| <b>CSQ</b>             |                          |                          |      | Get RSSI                       |
| <b>CTIME</b>           | <b>&lt;seconds&gt;</b>   | .                        |      | Set Call Maximum Time Limit    |
| <b>CUSTOM</b>          |                          |                          |      | Custom input message           |
| <b>DIAL</b>            | <i>number</i>            |                          |      | Dial Number on Receipt         |
| <b>DIVERT</b>          | <b>ENABLE</b>            | DISABLE                  |      | Enable Dialling Diverted Calls |
| <b>EXIT</b>            | <b>DISABLE</b>           | ENABLE                   |      | Exit Switch Enable             |
| <b>FORWARD</b>         | DISABLE                  | ENABLE                   | TEMP | Forward SMS/SSD                |
| <b>HOLDX</b>           | <i>&lt;seconds&gt;</i>   | <i>&lt;minutes&gt;m.</i> | R 0  | Input Delay                    |
| <b>INPUTX</b>          | <b>BOTH</b>              | AUTO                     | TEXT | INPUT Control (4.1)            |
| <b>INPUTX</b>          | DISABLE                  |                          |      |                                |
| <b>INLEVELX</b>        | <b>CLOSE</b>             | OPEN                     | BOTH | Input Edge (4.2)               |
| <b>KA</b>              | <i>number</i>            | <i>frequency</i>         |      | Keep Alive Message             |
| <b>LIST</b>            |                          |                          |      | List All Numbers               |
| <b>MASTER</b>          | <i>number</i>            | .                        |      | Add Master User                |
| <b>MUSER</b>           | <b>DISABLE</b>           | ENABLE                   |      | Treat all users as Master      |
| <b>OFF [as CLOSE]</b>  |                          |                          |      | Deactivate Relay               |
| <b>OPEN/ON</b>         | <i>&lt;minutes&gt;m.</i> |                          |      | Activate Relay (with Time)     |
| <b>PSMS</b>            | <b>ENABLE</b>            | DISABLE                  |      | Power Up Text Alert            |
| <b>QUERY/QNUM</b>      | <i>number</i>            | .                        |      | Find Number in Memory          |
| <b>REJECT</b>          | ALL                      | <b>NEVER</b>             | OPEN | Call Handling                  |
| <b>REMOVE(C/D/M/T)</b> | <i>number</i>            | .                        |      | Remove Number                  |
| <b>RESET</b>           |                          |                          |      | Remote Restart                 |
| <b>RLYMODE</b>         | <b>PULSE</b>             | TOGGLE                   | RING | Relay Mode Toggle/Pulse        |
| <b>RLYTIME</b>         | <i>&lt;seconds&gt;</i>   |                          |      | (default 3s)                   |
| <b>RLYTIME</b>         | <i>&lt;minutes&gt;m</i>  | .                        |      | relay time in minutes          |
| <b>RSMS</b>            | <b>ENABLE</b>            | DISABLE                  |      | Reset Text Alert (Network)     |
| <b>RTIME</b>           | <i>&lt;seconds&gt;</i>   |                          |      | Maximum Ring Time              |
| <b>SILENCE</b>         |                          |                          |      | Silence Alarm—Activate Relay   |
| <b>STIME</b>           | <i>&lt;seconds&gt;</i>   |                          |      | Maximum Line Silence Time      |
| <b>SMS</b>             | <i>number,</i>           | <i>message</i>           | .    | SMS Text Forwarding            |
| <b>STATUS</b>          |                          |                          |      | Get Relay and Input Status     |
| <b>TEXTNUM(A/B)</b>    | <b>&lt;master&gt;</b>    | <i>number</i>            | .    | Input Trigger Text Numbers     |
| <b>TEXTRES</b>         | <b>DISABLE</b>           | ENABLE                   |      | Result Acknowledgement         |