

Command	Action			Comments
ADD	<i>number</i>	.		Add User Number
CALL	LIST	ANY	NONE	Call Handling
CALLNUM	<i>number</i>			Add Autodial Call Number
CLEARALL				Also clears MASTER
CLOSE				Deactivate Relay
CONNECT	NONE	CL	OP	Connect Call Condition
CSQ				Get RSSI
CTIME	< <i>seconds</i> >	.		Set Call Maximum Time Limit
CUSTOM				Custom input message
DIAL	<i>number</i>			Dial Number on Receipt
EXIT	DIS	EN		Exit Switch Enable
INPUT	DIS	EN		Input Trigger Enable
INLEVEL	OPEN	CLOSE		Input Edge Trigger Setting
LIST				List All Numbers
MASTER	<i>number</i>	.		Add Master User
MUSER	DISABLE	ENABLE		Treat all users as Master
OFF [as CLOSE]				Deactivate Relay
OPEN/ON				Activate Relay
OPEN/ON	< <i>seconds</i> >			Open for < <i>seconds</i> > seconds
OPEN/ON	< <i>minutes</i> >m.			Open for < <i>minutes</i> > minutes
PRGSIM				Purge Inbox
PSMS	Enable	Disable		Power Up Text Alert
QUERY/QNUM	<i>number</i>	.		Find Number in Memory
REJECT	ALL	NEVER	OPEN	Call Handling
REM	<i>number</i>	.		Remove Number
RESET				Reset Settings to Defaults
RLYMODE	PULSE	TOGGLE	RING	Relay Mode Toggle/Pulse
RLYTIME	< <i>seconds</i> >			(default 3s)
RLYTIME	< <i>minutes</i> >m	.		relay time in minutes
RSMS	Enable	Disable		Reset Text Alert (Network)
RTIME	< <i>seconds</i> >			Maximum Ring Time
SILENCE	< <i>seconds</i> >			Maximum Line Silence Time
SMS	<i>number</i> ,	<i>interval (days)</i>	.	PAYG Keep Alive
SMS	OFF			(switch off KA Text)
STATUS				Get Relay and Input Status
TEXTNUM	< <i>master</i> >	<i>number</i>	.	Input Trigger Text Numbers
TEXTRES	DIS	EN		Result Acknowledgement
VOLUME	< <i>vol</i> >			Speaker Volume 1-9



QUAD Band GSM Door Entry Intercom

DE1.05/Firmware 2.11DE



Open-on-Call Access Control
with Text Alert & Auto-Dial

for GSM850MHz, GSM900MHz
DCS1800MHz & PCS1900MHz



Developed and Manufactured by Advent Controls Ltd, Liverpool, UK


www.adventcontrols.co.uk

EMC/EMI Compliance Statement: CE Mark Declaration of Conformance

Manufacturer's Disclaimer Statement: The information in this document is subject to change without notice and does not represent a commitment on the part of the vendor. No warranty or representation, either expressed or implied, is made with respect to the quality, accuracy or fitness for any particular purpose of this document. The manufacturer reserves the right to make changes to the content of this document and/or the products associated with it at any time without obligation to notify any person or organisation of such changes. In no event will the manufacturer be liable for direct, indirect, special, incidental or consequential damages arising out of the use or inability to use this product or documentation, even if advised of the possibility of such damages. This document contains materials protected by copyright. All rights are reserved. No part of this manual may be reproduced or transmitted in any form, by any means or for any purpose without expressed written consent of its authors. Product names appearing in this document are mentioned for identification purposes only. All trademarks, product names or brand names appearing in this document are registered property of their respective owners.

Contents


1	Introduction	3
1.2	Technical Specification	3
1.3	Number Types	3
2	Operation	3
2.1	Registration	4
2.2	Command Message Format	5
2.3	Master Number Setup	5
2.4	Allowing Master Control for All Users	6
2.5	Adding a User Number	6
2.6	Removing a User Number	6
2.7	Viewing the Valid Number List	6
2.8	Finding a Number in the Memory	7
2.9	Clearing All Numbers and Settings	7
2.10	Result Acknowledgement Message	7
3	Relay Operation/Access Control	8
3.1	Enabling Any Number and Disabling Open-on-Call	8
3.2	Call Reject	8
3.3	Connecting a Call	8
3.4	Input/Output Status Message	9
3.5	Relay Activation Mode	9
3.6	Relay Activation Time	9
3.7	OPEN/ON & CLOSE/OFF Commands	9
3.8	Exit Switch Enable	10
4	Intercom and Auto-Dialler/SMS Sender	10
4.1	Intercom Operation and SMS Sender/Auto-dialler	10
4.2	Input Change State Level	11
4.3	Customising the Input Alert Message	11
4.4	Changing the Maximum Ring Time	11
4.5	Changing the Maximum Call Time	11
4.6	Set Speaker Volume	11
4.7	Changing the Maximum Silence Time	12
4.8	Adding SMS Sender Text Numbers	12
4.9	Adding Auto-Dialler Call Numbers	12
4.10	Dial Now	12
4.11	Door Entry Intercom/Audio Interface	12
5	Setup	12
5.1	SIM Keep Alive Text	12
5.2	Signal Strength Indicator	13
5.3	Power Up/Reset Text Message	13
6	Installation	14
6.1	Inserting a SIM	14
6.2	Wall Mounting	14
6.3	Output Connection	14
6.4	Antenna Connection	15
7	Command Set Summary	16

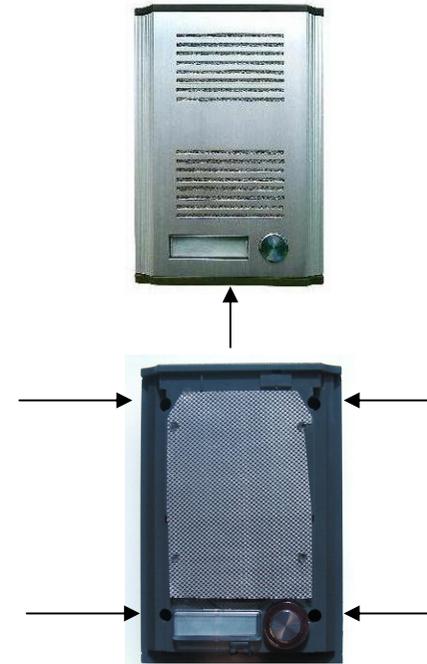

6.3 Output Connection

The relay output has Normally Open (NO) and Normally Closed (NC) relative to COMmon (COM) connections. These can be actuated in a momentary operation or can be toggled (see **3 Setup**).


The connections are 'voltage free' with no connection to +VE or GND. The relay connections have a minimum creepage distance greater than 4mm and are CATII rated to 220V.

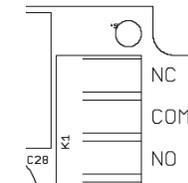

6.4 Antenna Connection

The standard antenna can be used where a good signal exists. In areas with a poor signal an external antenna is recommended connected via RG174 coaxial cable. The system antenna connection is a male Hirose U.FL connector. It is not recommended to use an extension greater than 3m in length. Please contact support@adventcontrols.co.uk for external antennae.

6 Installation

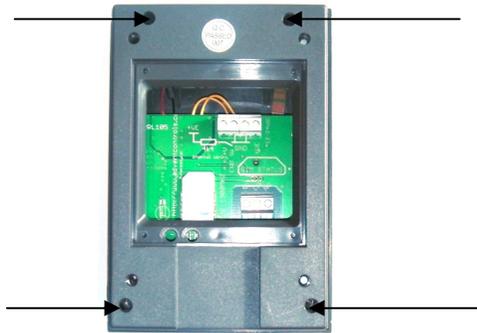


6.1 Inserting a SIM card

Remove the screws shown in the above diagram. This will expose the internal circuit board. Insert a suitable SIM card and jumper (if required). It is recommended at this stage to power up the unit and set up at least one master user. Pass any required cables through the slit in the rear cover and connect them to the PCB. Refit the rear cover.

6.2 Wall Mounting

The enclosure is IP44 rated and the PCB has a conformal coating making it suitable for outdoor use.

Mount the plastic hood using the supplied screws and drill a hole for the cable exit.

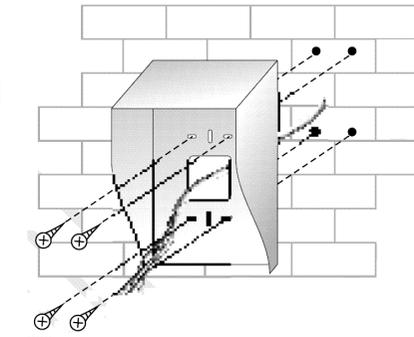

Remove the screw in the underside of the unit. Lift the aluminium cover up at the bottom and slide free. You can now access the illuminated name tag.

With the aluminium plate removed use the supplied screws to mount the unit to the hood through the holes shown in the picture overleaf.

1. Introduction

The Advent Controls GSM Door Entry Intercom allows callers to your property to speak to you no matter where you are. When connected to a door or gate you can grant a visitor access using your telephone. Using the GSM network the unit requires only power to operate making installation simple.

The door output relay can be activated by pressing your telephone's # key during a call or by calling the system from any registered telephone with caller ID enabled

Setup and operation is performed by simple SMS text messages including adding and removing user telephone numbers. A complete list of accepted telephone numbers can be viewed via SMS text message. The memory can also be scanned to see if it contains an individual number and the result is displayed by the on-board LED and (if enabled—see **2.10 TEXTRES**) by SMS text message.

The output relay has both Normally Open (NO) and Normally Closed (NC) with Common (COM) connections. The action of the relay can be a single timed actuation from either 1s to 999s or 1 to 999 minutes or the relay can be set to toggle between calls.

1.2 Technical Specification

Power Supply	12-24VDC 500mA Max. (10-15mA idle)
Relay Output	5A Max. CATIII 220VAC
SIM	1.8/3.6V
Compliant with GSM Phase 2/2+	Class 4 (2W @850/900 MHz) Class 1 (1W @1800/1900 MHz)
Antenna	50Ω U.FL
Audio Speaker Power Output	700mW RMS

1.3 Number Types

When adding a telephone number to the system it can be set up as one of four different telephone number types with each type having a specific purpose. There is space for 512 numbers and each number can be set up as any type of number. For example you may wish to have 200 masters and 312 users. **All four number groups can operate the output relay by SMS text or by calling the board.**

Master Numbers

These numbers are used to make changes to board including adding other numbers. At least one master number must be set up when the board is first used (see **section 2.3**). Once one master number is set up it can then be used to set up other master numbers

Example Master Number setup command:

Master 07000000000.



User Numbers

User numbers are only able to operate the relay output. This can be via SMS text or by calling the board. Unless MUSER is enabled (this makes all numbers master numbers) user numbers cannot access any command functions.

Example User Number setup command:

Add 07000000000.

Text Numbers

These numbers are the recipients of input triggered SMS text messages. The board sends SMS text messages to these numbers in the order in which they are added. These numbers cannot access any of the board's command functions but are able to operate the output relay by call or text. Note, if a master or user sends a command to the board which results in a SMS text reply, the reply is sent to the sender of the command and not the list of text numbers.

Example Text Number setup command:

TXTNUM 07000000000. For backward compatibility TXTNUM is also allowed
TEXTNUM 07000000000.

Call Numbers

Call numbers are dialled when the input is triggered. Call numbers are dialled before the sending of SMS text messages to the Text Numbers. They are dialled in the order in which they are added. The numbers are dialled sequentially until a call is answered and rejected or a call is answered and the # key is pressed. See Section 4.1 Intercom for details.

Example Call Number setup command:

Callnum 07000000000.

2. Operation

2.1 Registration

A valid GSM Subscriber Identity Module (SIM) card must be present in the SIM holder for the system to operate. Immediately on power up the system will attempt to register on the SIM card on it's home network. Once registration has occurred the 'GSM STATUS' LED will change from flashing approximately once every second to a momentary flash once every two seconds. If the LED1 continues to flash once every second for some time, the system cannot register the SIM on the network. The system will restart should this occur. If the problem persists check the antenna and strength of signal in your area/validation of the SIM card. Observe anti-static precautions when inserting the SIM.

The display backlight LED is used to display the result of a command. **The LED will flash off twice to acknowledge the successful receipt of a command** and will extinguish continuously for 2s to show the instruction has failed. It also extinguishes during any call (valid or invalid) and does not light when a signal cannot be found (network dependent).

When using a Pay As You Go (PAYG) SIM card, to avoid SIM card deactivation, the system can periodically send a SMS text message to keep the SIM active. Ensure the SIM card has sufficient credit to make a call or text (even if the call goes unanswered). To setup the Keep Alive Text function the following SMS text message is sent to the system:

SMS<space>*number,frequency.* enables periodic text message sending

e.g. **SMS 07000000000,10.** (text 07000000000 every 10 days)
SMS Off disables periodic text message sending

Frequency—number of days interval

Most UK networks require the equivalent spend of one one minute call per quarter. It is recommended a text is sent at least once per month (28 days).

5.2 Signal Strength Indicator

When setting up the system it is important to know the strength of signal for reliable operation. To receive a message showing the Received Signal Strength Indicator (RSSI) the CSQ command is sent to the system as follows:

CSQ

When the system SIM card has sufficient credit a SMS text message is sent to the number which sent the command displaying the current RSSI.

e.g. >RSSI 21

The RSSI can be converted to an approximate Signal to Noise Ratio (SNR) in decibels using the following formula:

$RSSI \text{ (dBm)} = -113 + 2x(\text{CSQ value})$

It is recommended that the minimum signal level for the installation is 15 (-83dBm) to ensure reliable operation. The system will operate below -100dBm but may become unresponsive at times.

To achieve an improved RSSI the standard antenna can be upgraded to a model with higher gain and/or the antenna should be positioned in an area with less physical obstruction. An extension lead can be attached to the SMA connector on the PCB to locate the antenna away from the control unit housing.

5.3 Power Up/Reset Text Message

The system can send an message to all the text numbers when a system reset or power up has occurred. This can be due to network failure or power cycling (power off followed by power on). Note the system repeatedly resets during network outage. You will only receive 1-message after a network outage.

RSMS Enable enables the reset text message
RSMS Disable disables the reset text message
PSMS Enable enables the power up text message
PSMS Disable disables the power up text message

4.7 Changing the Maximum Line Silence Time

The maximum time for which a silent call will remain connected is set using the SILENCE command. This is useful were a call may be redirected to voicemail. The silence during recording will cause the system to hang the call. The default silence time is 15s and can be set from 1s to 255s.

SILENCE 25. sets the maximum line silence time to 25 seconds

4.8 Adding Auto-dialler SMS Text Numbers

The system can send the input triggered message (2.16) to up to all 511 numbers. To add a text number the following SMS text message is sent to the system by any master number:

TEXTNUM<space>*number*.

e.g. **textnum 07000000000**.

N.B. Text numbers can also activate the output—there is no need to ADD the number twice!

4.9 Adding Intercom/Auto-dialler Call Numbers

The system can call up to all 511 numbers when the input is triggered. To add a call number the following SMS text message is sent to the system by any master number:

CALLNUM<space>*number*.

e.g. **callnum 07000000000**.

N.B. Call numbers can also activate the output—there is no need to ADD the number twice! Numbers are rung in the order they are added!

4.10 Dial Now

If necessary the system can make a call to a number not stored in it's memory at any time. This is achieved using the DIAL command. The call observes the RTIME, CTIME and SILENCE time settings

DIAL<space>*number*. make an ad-hoc call to the specified number

e.g. **dial 01517283167**.

The call will end when the other party hangs up or the CTIME or SILENCE time limit is reached.

5 Setup

5.1 SIM Keep Alive Text

2.2 Command Message Format


To operate the system a master GSM phone is used to send SMS text messages to the system telephone number. All message follow a similar format as follows:

COMMAND<space>*action*. (eg. **Master 07000000000**.)

The command (see **Section 7**) is always written first followed by a space and the action required. Although not necessary, it is useful to include a full stop immediately after the action as some mobile phones can enter superfluous characters at the end of a message, which can invalidate the message. The message is **not** cAsE sensitive.

2.3 Master Number Setup

The system is controlled by the master GSM mobile phone numbers (see **2.2 Number Types**). The system must first be associated with at least one master phone's number before it can be used. To do this the supplied 2.54mm jumper connector must be fitted to pins 3 & 4 on HDR1 as shown in red in Figure 1. **Do not connect the jumper to any other pins or damage may result.**

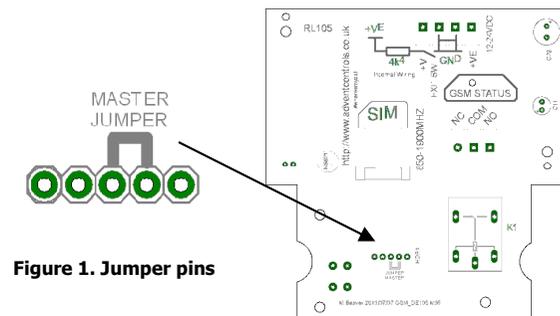

The master phone number must then be sent via a SMS text message to the system phone number as follows:

MASTER<space>*number*.

For example, if the master telephone number is 07000 000 000:

MASTER 07000000000.

Also valid are the following:

Master 07000000000 and master 07000000000

The following messages are invalid:

master 07000 000 000. (spaces in the number)
master07000000000 (no space after 'master')

The result LED will flash two times to indicate the master number has been successfully setup. Calling the board's telephone number with the master phone will now activate the relay. Once one master number has been setup further masters (up to 512) can be setup by this and subsequent master phones without the jumper fitted (using the same message).

Using the PIN for Master Setup

The Master Number can also be set up using the PIN. This is only possible for the first master number that is added to the system. Subsequent masters must be added by a master using the MASTER command. The PIN is the last 5 characters of the IMEI number written on the QUECTEL GSM module sticker. The command is sent as follows:

Master 0700000000,37212. for module with IMEI 355073034237212

2.4 Allowing Master Control for all Users

To enable any user to control master commands (such as adding and removing numbers) the MUSER command is sent to the board, by a master number, as follows:

MUSER ENABLE Allows any valid user number to modify settings
MUSER DISABLE Only master numbers can modify settings

By default MUSER is set to disable full access for all users. N.B. Only master numbers can add other master numbers despite this setting

2.5 Adding a User Number

Any telephone number of at least 5 digits where caller ID is available is valid. The system only compares the last 8 digits (if present) of any calling number against the numbers stored in memory. Therefore it is not necessary to enter the international dialling code format of the telephone number.

i.e. for 0700000000 only the characters shown in **BOLD** text are considered

The ADD command is used to add a new telephone number. To add a new number any master phone must send the following SMS text message to the system telephone number:

add<space>*number*. e.g. **Add 0700000000.**

If TEXTRES is enabled the system will respond with the 'Operation Successful' message.

2.6 Removing a User Number

The REM command is used to remove an existing telephone number. To remove an existing telephone number any master phone must send the following SMS text message:

rem<space>*number*. e.g. **REM 0700000000.**

If TEXTRES is enabled the system will respond with the 'Operation Successful' message. If the number is not found the 'Operation Failed' message will be sent by the system.

2.7 Viewing the Valid Number List

The system can send a SMS text message containing a complete list of valid user numbers to any master phone.

4.2 Input Change State Level

The INLVL sets the active state of the input for sending the change state text message. For example, if the user requires a message to be sent when the input is closed (GND), then the following message is sent by the master number:

INLVL CLOSED send status message when input closed (GND)

If the user requires the system to send a status message when the input goes open (+5V) the following message is sent by the master number:

INLVL OPEN text when open (+5V)

The change state service becomes inactive whilst the input remains in the active state (i.e. GND for INLVL CL/+V for INLVL OP) and remains inactive for 5 seconds after returning to the idle state.

4.3 Customising the Input Alert Message

The default input alert message is '>INPUT ACTIVE'. This can be customised by the user using the CUSTOM command. The maximum length of the message is 128 characters and it **must** end with a full stop. The custom command is used as follows:

CUSTOM THE GATE IS OPEN.
CUSTOM THE PUMP HAS STOPPED PLEASE CALL 0700000000.

Use only text or number characters in the message. The message will end where there is a full stop. Do not use a full stop in the middle of the message.

4.4 Changing the Maximum Ring Time

The maximum time for which the system will attempt dialling before dialling the next number is set using the RTIME command. The default time limit is 60s. The RTIME command is specified in seconds and can be set from 1s to 255s. Most calls will require at least 15s for connection which is included in RTIME.

RTIME 45. sets the maximum ring time to 45 seconds

4.5 Changing the Maximum Call Time

The maximum time limit for an answered call is set using the CTIME command. The default time limit is 45s. The CTIME command is specified in seconds and can be set from 1s to 255s.

CTIME 45. sets the maximum call time to 45 seconds

4.6 Set Speaker Volume

The speaker volume is adjusted using the VOLUME command. The allowable range is 1-9

VOLUME 9 These go to 9 <http://goo.gl/VJTU>

When sent with additional time information the relay is activated for however many seconds or minutes specified.

e.g.	OPEN	activates relay indefinitely
	on	activates relay indefinitely
	open 10.	10 second activation time (s parameter optional)
	Open 250s	250 second activation time
	ON 1m.	1 minute activation time
	open 960m.	16 hour (16 x 60mins) activation time
	CLOSE	deactivates relay under all conditions
	OFF	deactivates relay under all conditions

If the system loses power the relay state is restored when the power is reconnected!

3.8 Exit Switch Enable

The input connection can be used to activate the output relay which is ideal for connection to a secure-side exit switch. It uses the trigger level for the input text message (see INLVL) and activates the relay as per a phone call. To enable the exit switch input the EXIT command is sent to the board as follows:

EXIT ENABLE	enables the exit switch input
Exit disable	disable the exit switch input

4.1 Intercom and Auto-dialler/SMS Sender

The audio intercom can be used to talk to a visitor using the GSM network. The call button on the entry panel triggers dialling of the CALLNUM numbers in the order they are added. If CONNECT is enabled the system can also be called to initiate a call.

Calls are dialled in the order in which they are added. The numbers are dialled sequentially until a call is answered and rejected (hung-up) or a call is answered and the # key is pressed or until all of the numbers have been dialled. To activate the output relay and open a door or gate the call recipient should press and hold the # key on their phone until the call has ended.

The maximum ring time (the time between dialling and call pick up) can be set using the RTIME command.

The maximum call length is set by the CTIME command. If the call is answered by an answering machine and the line goes quiet the system will hang up the call after the time set by the SILENCE command (default 10s) and it will proceed to dial the next number.

SMS Sender

The system is able to send a SMS text message to up to 511 'text numbers' (see section 1.3 **Number Types**). If no text numbers are stored no messages will be sent.

To enable this service (the auto-dialler) the following command is sent via a SMS text message by any master telephone number:

INPUT Enable	enables the change state text message
INPUT Disable	disables the input triggered text message

To receive the list of numbers the LIST command is used. The master phone must send the following SMS text message to the system:

List

No further characters are required and are ignored if received.

The response format shows the last 8 digits of the stored number followed by a space and the next number and so on...(the master will not appear in the list but will also be valid).

The numbers are in the reverse order to the order they were added with the primary master not displayed.

e.g. 33333333 22222222 11111111 00000000

2.8 Finding a Number in the Memory

When a large number of numbers are stored in the memory using the LIST command can be impractical. To find whether an individual number is stored in the memory the master user sends the following command to the board:

QUERY<space>number. or
QNUM<space>number

NB the number should be the full number (not the 8-digit truncated number)

If the number is present the LED will flash 4 times and if not in the memory the LED will light twice for 2 seconds. If TEXTRES is enabled an SMS text message will be sent with the result.

2.9 Clearing All Numbers and Settings

The CLEARALL command is used to erase all stored user and master numbers. To erase all numbers the following SMS text message is sent by a master number:

CLEARALL

No response is sent by the system to acknowledge the command

2.10 Result Acknowledgement Message

The system can be setup to send a SMS text message to acknowledge a command. This acknowledges the result of the last command processed such as adding a new user number. The SIM card in the system must have sufficient credit for sending SMS text messages. To enable/disable the service the following text message is sent by the master number:

TEXTRES enable (or also valid: **TEXTRES e**)

TEXTRES DISABLE (or also valid: **TEXTRES d**)

The result message 'Operation Successful' is sent when the service is enabled

3 Relay Operation/Access Control

3.1 Enabling Any Number and Disabling Open-on-Call

The system can be setup to allow any number to operate the relay output. To enable any call the CALL command is used with the action ANY and is sent by the master phone in the following format:

Call any

To return the system to operate from only valid user numbers the LIST action is sent with the CALL command as follows:

call list

To disable activation of the relay by calling the following command is sent to the board (the relay can still be activated by SMS text; see OPEN/ON & CLOSE/OFF commands):

CALL NONE

If TEXTRES is enabled the system will respond with the 'Operation Successful' message.

3.2 Call Reject

By default any call to the system will be allowed to ring indefinitely (or up to the host network time limit). This is to avoid calls being diverted to voicemail when rejected by the system. However the system can be instructed to reject (hang up) calls using the REJECT command:

REJECT ALL rejects all *valid* calls

The reject command can also be used to determine the status of the relay when in toggle mode by sending the following command:

REJECT OPEN rejects the call when the call is deactivating the relay
connects the call when the call is activating the relay

REJECT NONE disables all call rejection

3.3 Connecting a Call

By default, when called the system is set to ring indefinitely or until the SIM card network operator transfers the call to voicemail. However the system can be set to connect a call when the input is **Open** (high/12V) or **Closed** (low/0V). This is done to allow the caller to know the state of the input even when the system has insufficient credit to send a status SMS text message. See also the REJECT command if call rejection is preferred.

To change the connect mode the CONN command is sent by the master phone with the action **CL** or **OP**. To disable connect on call the **NO** action is sent.

e.g. **CONN CL** connect when input high
CONN OP connect when input low
CONN NO do not connect call

3.4 Input/Output Status Message

To determine the current status of the input terminal and output relay the STATUS command is sent to the system telephone number by a master phone as follows:

STATUS

The system will respond with a SMS text message as follows:

RELAY OPEN INPUT LOW relay not activated/input closed (GND)
RELAY CLOSED INPUT HIGH relay activated/input open (+V)

3.5 Relay Activation Mode

When a valid call is received the relay can be set to activate for a set period of time (set by the RLYTIME command), to activate whilst the caller is ringing or to toggle between states on each call. By default the relay mode is set for timed (pulsed) activation. To switch to toggle mode the following message is sent to the system by the master number:

RLYMODE TOGGLE enables toggle mode

To activate the relay for however long the caller rings (n.b. turn off voicemail!)

RLYMODE RING relay active whilst phone rings

To revert to timed (pulsed) mode the following message is sent:

RLYMODE PULSE relay Normally Open (NO)

3.6 Relay Activation Time

The RLYTIME command is used to adjust the time the relay is active following a call when RLYMODE is set to PULSE. By default the relay time is set to 3s. The time can be set from 1s to 999 seconds or 1 to 999 minutes using this command.

To change the activation time the master number sends a SMS text message as follows:

RLYTIME seconds.

e.g. **rlytime 10.** 1 second activation time
rlytime 250s 250 second activation time
Rlytime 1m. 1 minute activation time
RLYTIME 960m. 16 hour (16 x 60mins) activation time

3.7 OPEN/ON & CLOSE/OFF Commands

The OPEN and ON commands are used to activate the relay with a SMS text message. The CLOSE and OFF commands deactivate the relay, whether activated by the OPEN or ON command or a call. When the OPEN command is sent without any additional instructions the relay is activated indefinitely. When sent with a value and **m**(inutes) or **s**(econds) parameter the relay activates for a set period of time. The maximum number length is three characters therefore the timer is limited to 999 seconds or 999 minutes. If the m or s parameter is not sent then the timer value is read as the number of seconds. The ON and OFF commands are identical to the OPEN and CLOSE commands respectively and can be used interchangeably.