

ORGA light


POGNAE




## How to put on the hip seat




01 Wrap the hip seat belt behind you.

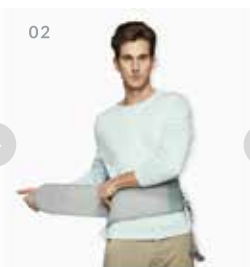


02 Inhale as deeply as you can and wrap the fastener of the belt as tight as possible.

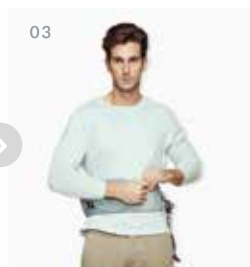


03 Make sure that the fastener overlaps perfectly on top of each other, so that the hip seat is firmly supported.

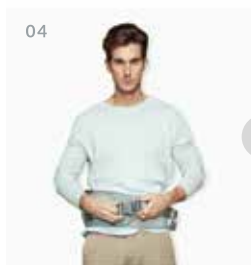

04 Fasten the buckle and tighten the webbing strap.

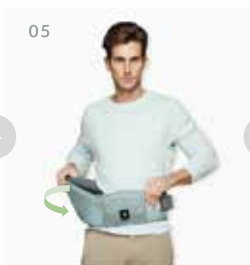

05 Turn the hip seat forward.

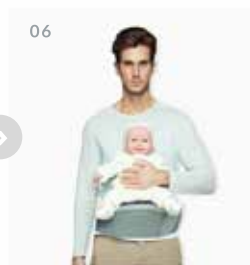

06 Hold your baby on the middle of the hip seat.



- For safety, be sure to fasten the buckle.
- Please wear the waist belt around the narrowest part of your waist.
- The tighter you wear it, the better the support given for your lower back, making it more comfortable to use.

## Ways to use the hip seat



Horizontally



Face to Face



Forward-facing

## How to unfasten the waist belt quietly



1 Flip the buckle cover of the waist belt.



2 Separate the joined buckle.



3 Undo the waist belt quietly to avoid waking up the sleeping baby.

# CAUTION

## **Precautions for Use** (Notice by the Korean Agency for Technology and Standards)

- Check the condition of the product before use.
- When using the hip seat, always support the infant by hand.
- Do not sit the infant in the face to face or forward facing position until the infant can hold his/her head up independently. Please use the horizontal position until the infant has developed sufficient head control.
- It is not recommended to use within 30 minutes after feeding.
- It is recommended to use for less than two consecutive hours.
- Always ensure that the infant is correctly placed on the hip seat and that all parts are correctly fastened and tightened before use.
- If necessary, write down the cautions for washing.
- Note that the center of gravity of the adult holding or carrying an infant may be affected by the movement of the adult as well as the infant.
- Adults holding or carrying infants should move with caution and check the position of the infant when leaning forward.
- This carrier is suitable for general activity and not for exercise.
- It is recommended to check the infant from time to time during use, and always be mindful of the risk of falling while using it.

## **Care Instructions**

**Before washing, please read the cautions.**

**Damages caused by incorrect washing and drying are not grounds for exchange or return.**

- Machine washing may cause product damage. We recommend the product to be hand washed.
- If machine wash is needed, please fasten all fasteners and wash in a laundry bag.
- Before washing, make sure to take the foam seat base out of the hip seat. You can access the foam seat base by unzipping the zipper.
- If the detergent for baby products contains alkali, it may cause discoloration. Please use a neutral detergent.
- Please wash it separately in cold water.
- Do not immerse in water for a prolonged period.
- Never wash or boil in hot water.
- For minor stains, pat with a wet towel or spot clean, and avoid frequent washing.
- Drying in a dryer may cause damage or deformation of the product, such as shrinkage. Please air dry the product.
- When drying, avoid direct sunlight and dry in a well-ventilated and shaded area.



CB015A0199-0001

