

## Solar pump stations ErP

These units can be installed on the INOXSTOR 200-300-500 V2 storage tank units (see page 46) and UB 550-750 V2 (see page 50).



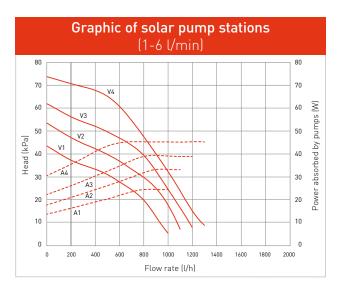

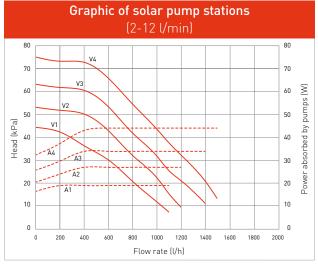

**Key** Head pump at:

V2


٧3

٧4

Power absorbed by pumps:

First speed A1 F
Second speed A2 S
Third speed A3 T
Fourth speed A4 F

A1 First speed
A2 Second speed
A3 Third speed
A4 Fourth speed

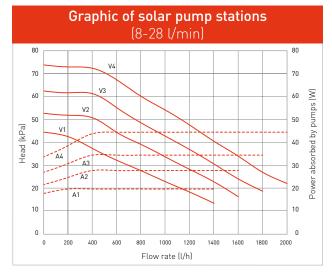

## Type **Description** The kit includes: low consumption circulation pump Single solar pump station ErP with 1-6 l/min flow rate 6 bar safety valve 0-10 bar pressure gauge one-way ball valve, thermometer and connection to the safety unit Code 3.025662 flow rate regulated and filling and draining valve attachment for expansion vessel filling valve draining valve Single solar pump station ErP with 2-12 l/min flow rate • insulation 1" hydraulic connections 230 V ~ power supply voltage Code 3.025663 The kit includes: Double solar pump station ErP with 1-6 l/min flow rate low consumption circulation pump 6 bar safety valve Code 3.025664 0-10 bar pressure gauge one-way ball valve, thermometer and connection to the safety unit ball valve with temperature sensor

draining valve insulation

flow rate regulated and filling and draining valve

attachment for expansion vessel filling valve

• air separating device with vent 1" hydraulic connections 230 V ~ power supply voltage

Double solar pump station ErP with 8-28 l/min flow rate Code 3.025666

Double solar pump station with 2-12 l/min flow rate

Code 3.025665