



MODEL 6285BL

Cushioned Hammock & Stand

CONGRATULAGTIONS ON YOUR PURCHASE OF THE CUSHIONED HAMMOCK WITH STAND. WITH PROPER USE AND CARE THIS HAMMOCK AND STAND SHOULD PROVIDE YEARS OF ENJOYMENT.


WHEN ASSEMBLING THIS STAND, A SECOND PERSON TO HOLD THE PIECES IN PLACE WHILE NUTS ARE BEING TIGHTENED COULD MAKE ASSEMBLY EASIER AND SPEED ASSEMBLY TIME.



Warning:

- The recommended weight capacity of this hammock and stand is 350 lbs. Never exceed the weight capacity.
- Never use the hammock as a swing as excess swinging could cause the frame to tip over causing injury.
- Care should be taken while entering or exiting the hammock to avoid possible flipping which could cause injury.
- Children should never use the hammock without close adult supervision.
- Always inspect hammock before each use to assure all pieces are fully tightened, and stand and hammock are secure.
- The hammock should be used on a flat surface to avoid tipping which could cause injury.

Parts List

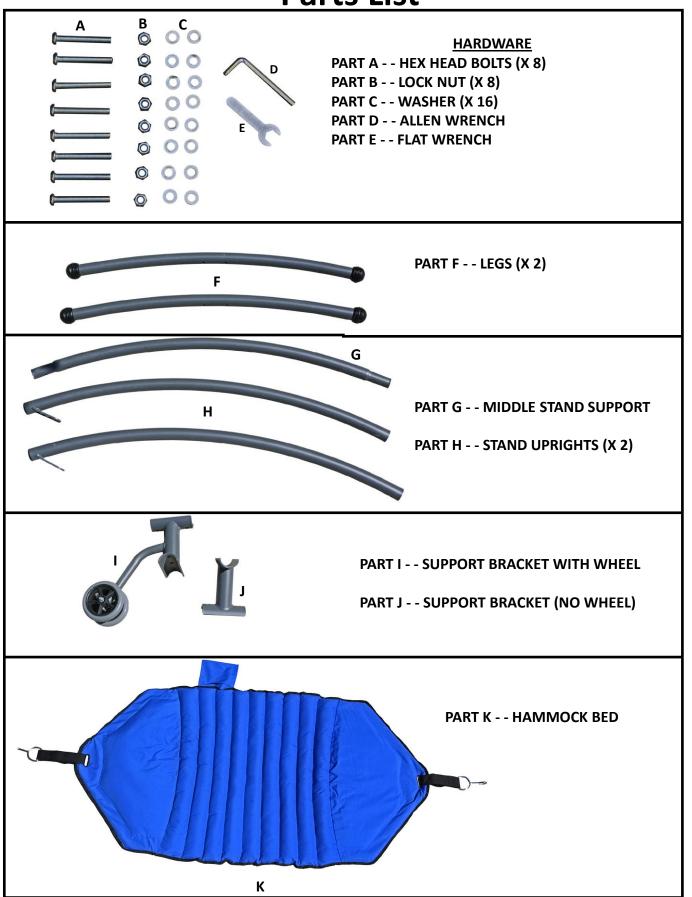

Instructions:

Step 1: Locate either Leg (Part F), and the Support Bracket with Wheels (Part I). Using either leg, place the support bracket with wheels on the top of the arch of the leg, aligning the holes in the bracket with the holes on the leg. (see diagram 1). Place a washer (Part C) onto the Hex Head Bolt (Part A) and insert bolt through the aligned holes of the bracket with wheels, and the leg. (See diagram 2). Place another washer (Part C) onto the end of the inserted bolt and secure with a Lock Nut (Part B). (See diagram 3). Do the same procedure with the second aligned hole, then tighten both with the supplied Allen wrench (Part D) and Flat Wrench (Part E). (See diagram 4)











Step 2: Locate the second Leg (Part F), and the Support Bracket with no wheel (Part J). Place the Support Bracket on top of the arch of the leg and align the holes. (see diagram 5). Follow the same procedure as step 1 with hardware and supplied tools to attach the support bracket with no wheel to the second leg. Finished legs shown in diagram 6 and 7.

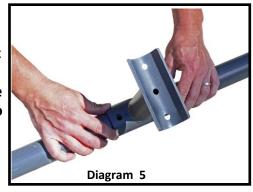





Step 3: Locate the Middle Stand Support (Part G) and one of the two Stand Uprights (Part H). Slide the middle support onto the upright, aligning the holes. (See diagram 8).

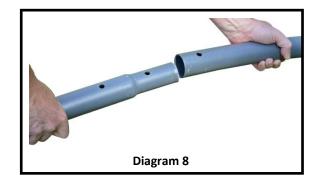


Place this onto the support bracket that is now on either leg, align the holes with the bracket and stand support and insert the bolt (Part A) with washer (Part C) through the aligned holes. (See diagrams 9 and 10). Place washer (Part C) onto ends of inserted bolts and then secure with lock nut (Part B) Tighten with the supplied wrenches. (See diagram 11).



Place the second upright (Part H) onto the opposite end of the middle stand support (Part G). Again, align the holes of the stand supports and place them on top of the second leg support. Align all holes. Using the hardware and supplied tools, repeat the attachment procedure for this second leg. (See diagram 12)




Completed stand should look like diagram 13.

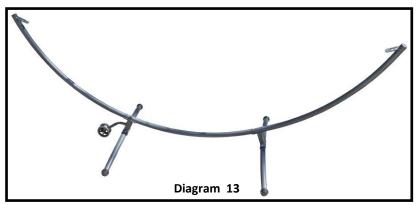

Step 4: Attach padded hammock (Part K) onto the completed stand by placing hooks on each end of the hammock onto the adjustable height hook bracket on each end of the hammock stand. (See diagram 14).

Note: Your hammock bed may stretch over time. You can adjust the height by placing hammock hook onto a higher notch on the adjustable hook bracket on each end of the hammock.

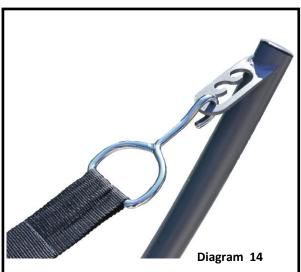





CAUTION! ALWAYS USE STAND ON A LEVEL

SURFACE. DO NOT SWING, BOUNCE OR JUMP WHEN USING THIS PRODUCT. SERIOUS INJURY CAN RESULT FROM IMPROPER USE.

The cushioned hammock and stand have a maximum weight capacity of 350 lbs. Never exceed maximum weight capacity. Inspect hooks and hardware before use to assure all connections are tight and secure. If the functionality of any hardware has been compromised in any way, do not use this product as doing so could result in serious injury. Before each use, make sure base is secure and located on a flat level surface. Inspect overall condition before using this product. Children should never use this product without adult supervision.

Care Instructions: For maximum life on this product, it is recommended that the unit be taken out of the elements during extreme weather conditions. Clean stand with a mild soap and warm water. Dry with cloth. For best results, and to avoid excess fading or other weather related issues, it is recommended to take off the hammock bed from the stand, and store in a dry location when not in use.

Call or email for questions or missing parts. (920) 487-5577 Email: customerservice@algomanet.com