

lillagunga

GRAND

USER MANUAL

ver. 1.2

READ THIS MANUAL CAREFULLY BEFORE INSTALLING
AND USING YOUR LILLAGUNGA SWING.

NOTE This manual guides you through the installation and use of a Lillagunga Grand swing to a ceiling.

NOTE This product is primarily intended for indoor use. Please refer to "outdoor use" for more information.

NOTE This package does NOT include curl hooks.

NOTE This product is intended for home use. The swing shall be used by one (1) person at a time.

NOTE This product is intended for people in the age of 14 years and above.

NOTE The maximum permitted weight is 90 kg.

WARNING! We do not take ANY responsibility for possible accidents or damage caused by failure or neglect to follow, or misunderstanding this manual.

REQUIRED TOOLS

Power drill and a drill bit

(Type and size dependent on hook model and ceiling material)

Pencil

Ladders, a tall chair or similar to reach the ceiling

Measuring tape

WARNING!

Don not place the swing near an open fire or other sources of strong heat, such as electric bar fires, gas fires etc due to the risk of fire.

WARNING!


Avoid placing the swing over hard floor ground materials such as asphalt, concrete or glazed tile. Use softening materials to reduce impact in case of an accident.

INSTALLATION

1. Reserve at least two (2) meters in front/behind, and at least two (2) meters on both sides of the swing seat.
2. Use the ladders to reach the ceiling. Make sure that the ladders are stable and stand firmly, drilling vertically may distract your balance.
3. Use a measuring tape and mark two points at 65 cm apart from each other. Drill two holes, and screw the hooks into the ceiling.
4. Rotate the ends of the curl hooks pointing to the side, linear with the swing seat.
5. Make sure that both hooks are tightly in place.
6. Test before use.

WARNING!


Ensure that the hooks will be attached to a bearing part of a ceiling. Consult an expert in uncertainty.

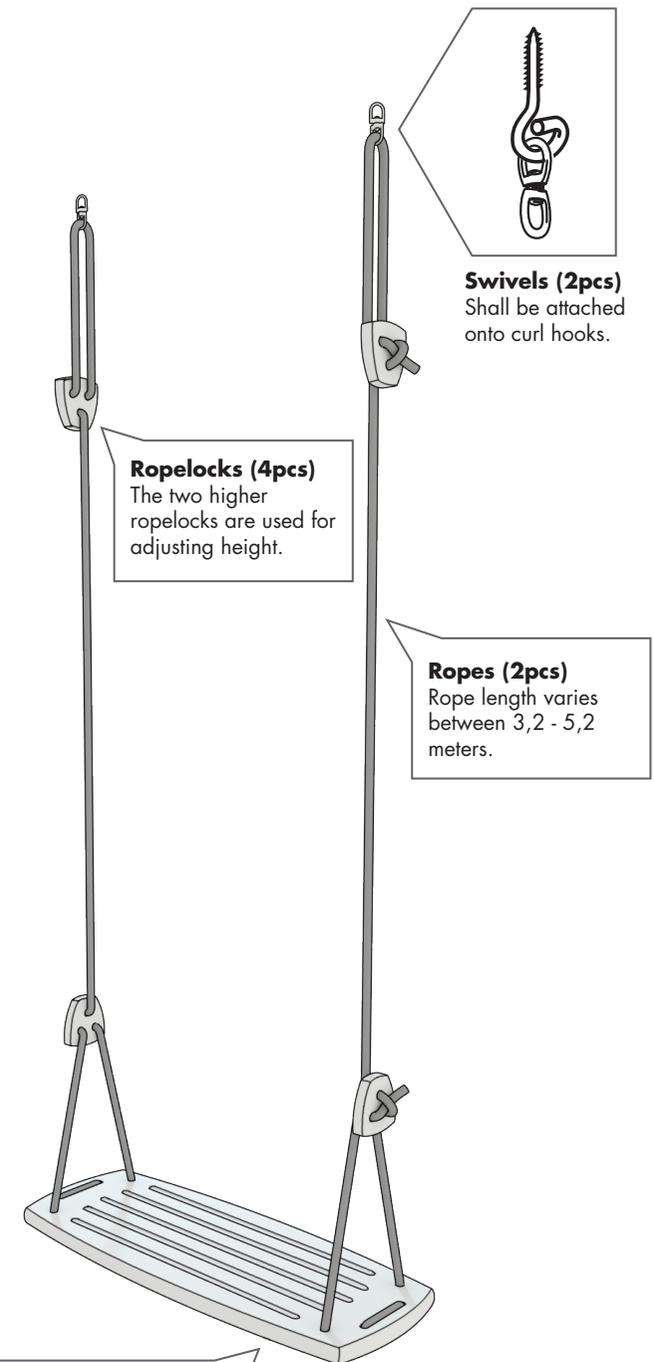

Swing seat (1pcs)
Material: Birch or Oak
Size: 20x516x211mm
Weight: 1400-1600g

ADJUSTING HEIGHT

1. Loosen the knot of the UPPER ROPE LOCK by pulling up the rope (A) end. See fig. 1 Do NOT use the LOWER ROPE LOCKS for height adjustment.
2. Slide the rope lock up and down to adjust. See fig. 2
 - a. To raise the swing: move the rope lock down by sliding the looped rope (B).
 - b. To lower the swing: move the rope lock up by sliding the looped rope.
3. Once the height is adjusted pass the loose end (A) back under the loop, and tighten the knot by pulling the rope (B) in opposite directions. See fig. 3

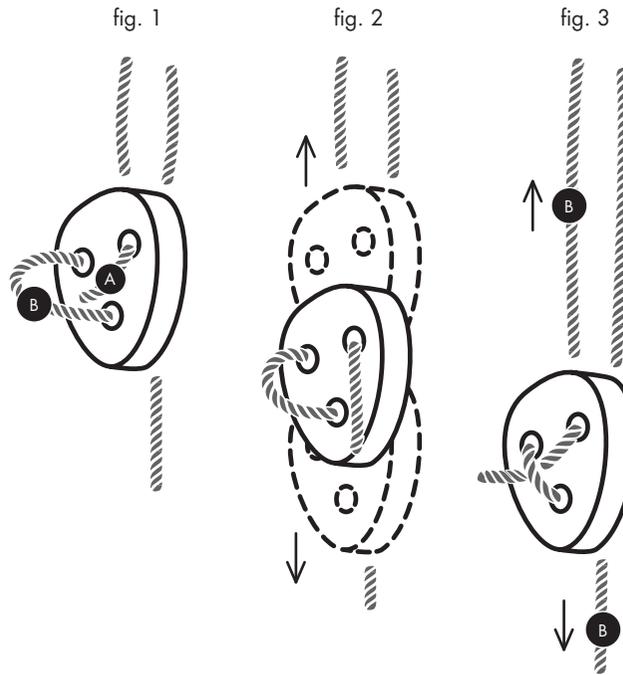

MAINTENANCE AND SAFETY

The swing must be inspected once a month.

- All parts shall be inspected on a regular basis as they may become safety risks if damaged or worn out.
- If a fracture (clearly visible to the eye) is identified in a rope lock, remove and replace it.
- Inspect the ropes by sliding your palm gently over the ropes. If the rope is damaged or torn, the braid may loosen up. Remove and replace.

NOTE

This package does not include components or parts that enable the attachment of the swing to a tree or to branches.



OUTDOOR USE

This product is primarily intended for indoor use. For outdoor use follow these guidelines:

- The swing must always be placed under shelter, properly protected from rain.
- Sun and moisture will eventually cause changes in materials. These may appear as color changes, fractures or slight change in shape (particularly the wooden parts).
- Outdoor use weakens all parts and thus shortens the lifetime of the swing. As outdoor conditions are very varying, our warranty applies only for indoor use.
- If the swing is being used outdoors, always take the swing indoors when not in use.

SAFETY IN MIND

Safety shall always be taken very seriously.

1. Do a routine check of the swing before use. See: "Maintenance"
2. Ensure that the swing height is adjusted right, and that the swing is in symmetric balance.
3. Avoid hard speeds and sideway swinging.
4. Don't swing with a child in your arms.

NOTE

A careful use and maintenance of the swing according to this manual will extend the lifetime of the Lillagunga swing, and prevent possible accidents.

WARNING!

This a product intended for adults. If a child is using this swing it is on the responsibility of a parent.

CONTACT

We are happy to assist you in all matters related to Lillagunga. We do our best to respond to all incoming emails within 24 hours at: info@lillagunga.com

WARRANTY

INDOOR USE: 3 years on all wooden and metal parts, 2 years on ropes and leather parts. All related to material or workmanship defects.

This warranty does not apply to defects from normal wear and tear, product misuse, after market product alterations, or failure to follow instructions supplied with the product.

Uniq Works
lillagunga.com

