

# ALL-IN-ONE TORQUE DRIVER INSTRUCTIONS


FIX IT  
STICKS




Before use, confirm tool is at the "0" setting.

The tool is factory calibrated and requires no adjustment before use.


Do not attempt to adjust the collar — it is fixed in position by design.



- 1 Insert desired hex bit and All-in-one Torque Driver into any 1/4" handle. The tool should be at the "0" setting.

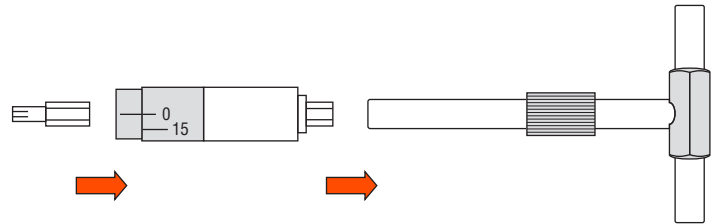


- 2 Turning the drive handle clockwise, carefully tighten the fastener until the target torque mark on the collar aligns with the fixed mark on the end of the tool. The bit end of the tool will remain stationary while the upper assembly rotates with the drive handle.

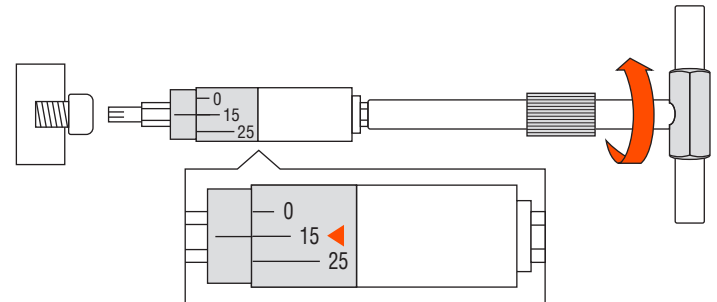

**Take care not to rotate beyond desired torque value. There will be no stop or "click" when torque setting is reached.**

Gently release pressure, and the torque driver will return to the "0" setting.



Do not attempt to rotate collar by hand.



Do not exceed 65 in/lbs.



Do not turn counter clockwise or use to loosen fastener



For more information and a short video demonstration go to:

[fixitsticks.com/blogs/how-to](https://fixitsticks.com/blogs/how-to)

Always follow manufacture torque specs. Failure to follow instructions may affect accuracy or result in damage to the tool.