

# Single Press Wheel Instruction Manual

## Parts Included

#### 1 x Single Press Wheel Includes:

1 x Wheel 1 x Main Frame 1 x Axle 2 x M12 50 x 80 U-Bolt 1 x M24 Nyloc Nut 4 x M12 Nyloc Nut 2 x Spacer

# Step 1:

Put the axle through the hole and lay the main frame down.


#### Step 2:

Take one bushing and place it over the axle. \*Tip: You can put anti seize inside the spacer to prevent it from rusting onto the axle.

## Step 3:

Place the wheel onto the axle and then put the remaining spacer on.





#### Step 4:

Fasten on the M24 nyloc nut and tighten. Do Not Over Tighten.

## Step 5:


Bolt your single press wheel to your bar using the U-bolts provided

BAR

#### We recommend 1 x vertical/extension bar set per 5 press wheels

\*Recommendation only. Some seeding bars require different configurations.

> If you have any questions about installing your Single Press Wheel please do not hesitate to give us a call on 08 9354 1111

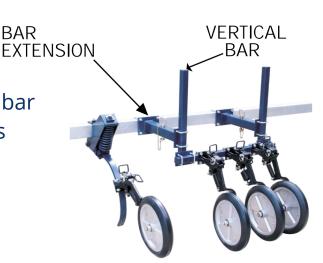



#### Reorder Part No.

Wheel	SP-1100
M12 50 x 80 U-Bolt	FA-0702
M24 Nyloc Nut	FA-0406
M12 Nyloc Nut	FA-0403
Spacers	FA-0871

We love seeing our products ready for action! Text a photo to **0499 225 219** along with your name and postage address and we will send you a FREE Maxipoint hot sauce!

