



# **PA 5740 - AUTOMOTIVE BATTERY SIMULATORS**

## **USER MANUAL**

601-309B

**PA 5740 - AUTOMOTIVE  
BATTERY SIMULATORS  
USER MANUAL**

# CONTENTS

<b>1</b>	<b>The PA 5740 Automotive battery simulator</b>	<b>5</b>
1.1	Introduction	5
1.2	Features	6
<b>2</b>	<b>Safety instructions</b>	<b>7</b>
2.1	Danger classification	7
2.2	Pictograms on Test System	8
2.3	Excess voltage category	9
2.4	Application area	9
2.5	Safety of operation	9
2.6	Operating personnel	10
2.7	Persons responsible for safety measures	10
2.8	Accident prevention regulations	10
2.9	Infringement of safety regulations	10
2.10	Proper use	10
<b>3</b>	<b>Installation/Set-Up</b>	<b>11</b>
3.1	Checking the shipment	11
3.2	Delivery contents	11
3.2.1	Standard accessories	11
3.2.2	Documentation	11
3.3	Set-Up	11
3.3.1	Operating position	12
3.3.2	Line voltage connection and grounding	12
3.4	PA 5740 Front panel connectors	13
3.4.1	The control connector	13
3.4.2	The output connectors	15
<b>4</b>	<b>Operation</b>	<b>16</b>
4.1	The compensation button	16
4.2	The gain button	17

4	4.3	The current limit LED	17
	4.4	The errors LEDs	17
	<b>5</b>	<b>Applications</b>	<b>19</b>
	5.1	Compliant with ISO 7637 (and similar) for transient immunity	19
	5.2	Voltage variations for starting profiles	19
	5.3	Fast rise time for challenging voltage dip applications	20
	5.4	Voltage ripple and sine wave noise simulations	20
	5.5	Example application with NSG 5500 and NSG 5600	21
	<b>6</b>	<b>Maintenance</b>	<b>22</b>
	6.1	Cleaning the equipment	22
	6.2	Moving and storing the amplifier	22
	6.3	Protection	23
	6.3.1	Fuses	23
	<b>7</b>	<b>Specifications</b>	<b>27</b>
	7.1	Environmental conditions	27
	7.3	Pictures	30
	7.3.1	Front view	30
	7.3.2	Rear view	30
	<b>8</b>	<b>Declaration of conformity (CE)</b>	<b>31</b>
	<b>9</b>	<b>Addresses</b>	<b>32</b>

# 1 THE PA 5740 AUTOMOTIVE BATTERY SIMULATOR



## 1.1 Introduction

The PA 5740 range of battery simulators is high performance power amplifier providing a stable and rugged power source for laboratory applications. The amplifier has been designed specifically to simulate battery supplies. Such as 12, 24 and 42 V vehicle electrical systems. It may be used on its own or integrated with the Teseq Automotive EMC Test System consisting of **NSG 5000, NSG 5200, NSG 5500, NSG 5600** (hereafter referred to as NSG 5000 series) and **AutoStar software**.

Designed to meet EMC (electromagnetic compatibility) immunity testing requirements for the automotive industry. Applicable standards include: ISO 7637, ISO 16750, JASO D001, MIL-STD-461E, SAE J1113 as well as automobile manufacturer specifications.

Types of testing include supply voltage variations, dips and drops, ISO pulses 2b and 4, load dump pulse, starting profiles, power cycling, battery recovery, reset behaviour, fuel pump transient, conducted sine waves, ground shift, jump start and over voltage, as well as providing a programmable DUT (device under test) power source during all phases of testing.

## 1.2 Features

The output is programmable over a minimum voltage range from - 60 to + 60 V which allows the simulation of a large range of pulses and voltage variations. A remote sensing input is provided to compensate for output cable voltage drop (up to 4 V). The output provides a wide bandwidth (DC to >150 kHz), a fast output slew rate and low source impedance (<10 mOhm).

All controls, displays and connections are located on the front panel for ease of access and visibility except the output connectors which are even located on both the front and the back panel. These facilities include: voltage input; current limit input, current limit indicator, current and voltage display, compensation mode, gain setting and output and sense connectors.

The voltage and current control and monitoring interface is realized with an integrated control D-type connector for direct connection to the Teseq **NSG 5000 series**.

The amplifier inputs are over voltage protected and outputs short circuit protected. The mains input voltage is selectable by Teseq factory/service points to accept world voltage supplies and is under voltage protected. Overtemperature protection is monitored on the internal heat sink and transformer.

There are three selectable ranges for compensation/bandwidth for the PA 5740. Bandwidths are high, allowing fast slew rates as required by numerous standards. The current limit is programmable from 10 to 100% of the output current capability.

## 2 SAFETY INSTUCTIONS



Be sure to observe the following safety precautions before you install the test system and put it into operation!

Also follow all safety instructions in the manuals of the connected peripheral devices.



### NOTE!






**Always keep operating instructions for future use!  
Store the operating instructions so that they are always accessible to all operating personnel.**

⇒ **Every operator must be informed exactly where the operating instructions have been stored.**

### 2.1 Danger classification



The safety precautions in the manual are always presented in the same format. They consist of the **signal word**, which contains information on **the type and source of the danger**, an explanation of the **preventative measures to be taken** and a standard **warning symbol**.

The following table gives you an overview of the signal words used, their allocation to specific dangers and their possible consequences.

Warning symbol	Signal word	Definition
	<b>DANGER!</b>	There exists a high risk of fatality or severe injury if the necessary preventative measures are not taken.
	<b>WARNING!</b>	Potentially dangerous situation that can result in injuries and serious damage to equipment if the necessary preventative measures are not taken.
	<b>CAUTION!</b>	Situations that could arise when objects or equipment are damaged if no measures are taken to prevent this.
	<b>NOTE!</b>	Information on important special features.
	<b>TIP!</b>	User tips and information.

## 2.2 Pictograms on Test System

Various warning symbols are applied to the test system. The following table provides you with an overview of the assignment of symbols (pictograms) and signal words to the specific danger.

Pictogramm	Definition
	Possibly dangerous situation that can result in injuries and serious damage to the equipment.
	Situation that can result in damage to the equipment.



### 2.3 Excess voltage category

The test equipment **PA 5740**, as described in this manual, is related to the **excess voltage category II** according IEC 60664.

### 2.4 Application area

These instructions apply to the entire system. Other safety regulations for components used or devices additionally installed in the test system are not voided by these instructions and are to be followed.

### 2.5 Safety of operation

Reliable function and safe operation of the test equipment are ensured only if the relevant general precautions as well as all safety instructions given in this manual are observed.

In particular, observe the following:

- Connect the device only to line voltage that confirms to the power specification given on the type label (on the back of the test equipment).
- Do not touch any conductive parts at the output connectors, the fixture and the test object during a test run.
- Disconnect the device from the mains before opening the casing for maintenance or repair.
- During the operation of the test equipment always observe the relevant rules of ESD (Electro Static Discharge) protection.
- To guarantee the EMC features of the device, the control computer must meet the requirements of the EN 50082, EN 55011, EN 61000 standard.
- Make sure the environmental conditions described in chapter 7.1 Environmental conditions exist.

## **2.6 Operating personnel**

The test system should only be operated by qualified personnel. Making settings, maintenance work and repairs on an opened device can only be carried out by the appropriately trained personnel. Teseq and its representatives will only guarantee for maintenance and repair when it has been carried out by its own service personnel.

## **2.7 Persons responsible for safety measures**

Those considered responsible for safety are the owner, the user and the operator. In addition, you are responsible for all safety measures that are indirectly linked to the test system. More relevant information can be found in the accident prevention regulations. Also observe all the safety measures for additional devices used together with the test system.

## **2.8 Accident prevention regulations**

When dealing with the test system observe the industrial health and safety standards pertaining to electrical test installations in your country.

## **2.9 Infringement of safety regulations**

If the system is not functioning as described or is visibly damaged, this can affect its safety status. If this is the case the system must be shut down immediately, and in such a way that it cannot be started up again accidentally by any third persons. Please inform the Service Department at Teseq or its representative.

## **2.10 Proper use**

The test system is exclusively for the testing of electrical devices and components in accordance with the test system specifications.

## 3 INSTALLATION/SET-UP



### 3.1 Checking the shipment

Upon receiving the shipment, first check the packaging and outer equipment for visible damage. Also, check packaging and casings of peripherals (if any). Record in writing any defects which were possibly caused in transit. If the shipment shows damage or is not complete, immediately advise the shipping agency and/or your dealer.

### 3.2 Delivery contents

The standard delivery contains the basic unit as well as several attachments and accessories.

#### 3.2.1 Standard accessories

- One power cable

#### 3.2.2 Documentation

The following manuals are supplied:

- This PA 5740 Automotive battery simulators hardware guide

### 3.3 Set-up



**CAUTION! Risk of damage by condensation!**  
When the equipment is brought from cold to warm environment, a dangerous conditions can result from condensation.

**Do not operate the system until all parts of the system have reached room temperature.**

12 The equipment may be set-up by qualified personnel only.

It is imperative to observe the **safety instructions** at the beginning of this manual.

The equipment will be safe to operate and perform to its specifications only under the environmental conditions found in chapter 7.1 Environmental conditions.

### 3.3.1 Operating position

The tester must be placed in upright position firmly and securely during operation. There must be enough space around the equipment to ensure a sufficient air flow for cooling. The ventilation grilles must be kept free.

### 3.3.2 Line voltage connection and grounding



#### **CAUTION! Risk of destruction by wrong main voltage!**

**If the voltage specified on the type label (on the back of the equipment) does not agree with the voltage in your local mains supply, the tester can be destroyed.**

**Make sure the voltage specified on the type label of the power supply agrees with your local mains voltage.**

**Do not use power supplies that deliver output voltage other than 100 V/12,5 A, 120 V/10 A or 230 V/6,3 A.**

The power cord of the equipment is located on the back of the equipment. The power input is secured with a delayed action fuse (for details, refer to chapter 5.3 Protection).

The power plug and outlet must have grounding contacts.




## **DANGER! Danger to life by interruption of the grounding!**

**If the grounding is interrupted inside or outside the equipment, the PA 5740 will become a source of danger.**

**Follow the regulations for the grounding of the system.**

### 3.4 PA 5740 Front panel connectors


#### 3.4.1 The control connector

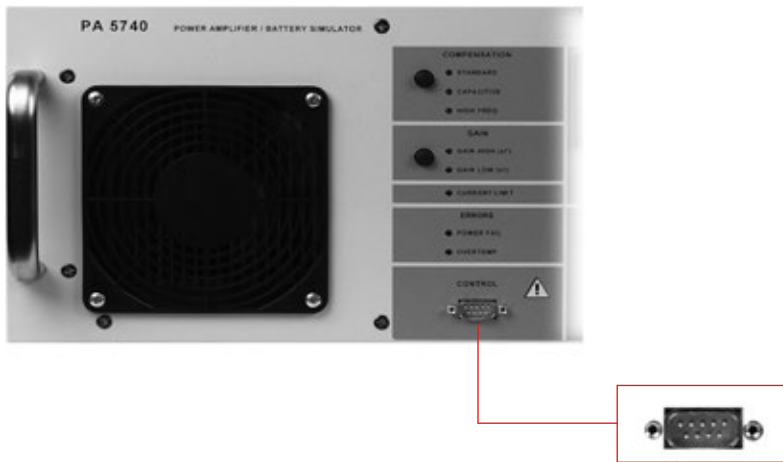

The “CONTROL” connector is an input port for the function generator; it can be directly connected to the appropriate connector at the function generator card of your **NSG series**.

To benefit from all advantages of the PA 5740 it is best controlled by your **NSG 5000 series**. But of course if the specifications described in chapter 3.4.1.2 CONTROL input specifications are considered, the PA 5740 can be controlled by any other analog function generator as well.

### 3.4.1.1 Pin count of the control I/O DSub connector

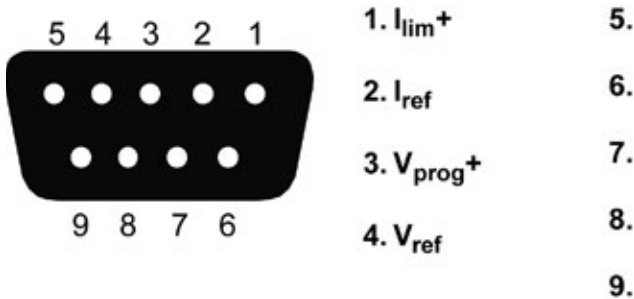

### 3.4.1.2 CONTROL input specifications

The  $V_{prog}^+$  pin of the connector is the voltage Input of the battery simulator. The output of the battery simulator can be described as  $U_{OUTPUT} = V_{prog}^+ \times \text{GAIN}$ . The **GAIN** can either be set to 7 or 1.

$I_{lim}^+$  is the analog control of the current limit. The input is 1-10 V which equals a current limit of 1-10 A.




#### CAUTION! Risk of destruction by wrong voltage!


If the PA 5740 is controlled by any alternative function generator it care has to be taken that the voltage at the  $I_{lim}^+$  pin must be at least +1 V.

Make sure the voltage at the  $I_{lim}^+$  pin is at least +1 V.

### 3.4.2 The output connectors

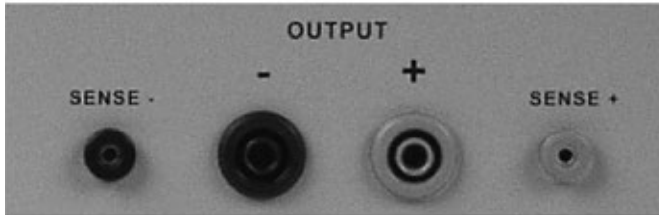

The output connectors of the PA 5740 series (front)

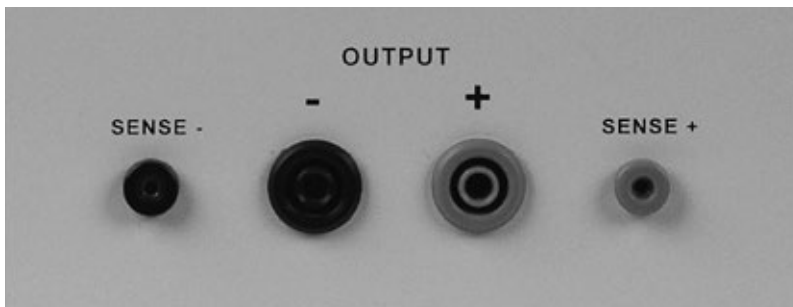

The output connectors of the PA 5740 series (back)

#### 3.4.2.1 The power output connectors

The "POSITIVE/NEGATIVE POWER" connectors are used to connect the output to the DUT or to the NSG 5000 series.



**NOTE!**

**Information about the power output connectors:  
See the hardware guide of the appropriate test system  
for more details.**

#### 3.4.2.2 The sense output connectors

The "SENSE" connectors may be connected to compensate for voltage drop of the cables to the DUT or to the NSG 5000 series.

## 4 OPERATION



### 4.1 The compensation button



Pressing this button toggles between the available compensation modes:

**STANDARD** This is the normal operating mode with a good compromise between stability and bandwidth. The bandwidth in this selection is approximately 40 kHz

**CAPACITIVE** This mode is specifically designed for capacitive and/or reactive loads. This reduced bandwidth, high stability mode is perfect for using during normal transient testing, conducted sine wave (CSW) testing. The bandwidth in this mode is limited to approximately 3 kHz.


**HIGH FREQ** This mode is for testing where high bandwidths are required. This mode allows frequencies up to 150 kHz.



**Risk of destruction of the DUT or couplers!**  
**Monitor the DUT to ensure no ringing or excessive overshoot is present.**  
**In case there is a question you should use the CAPACITIVE mode.**




## 4.2 The system stop button

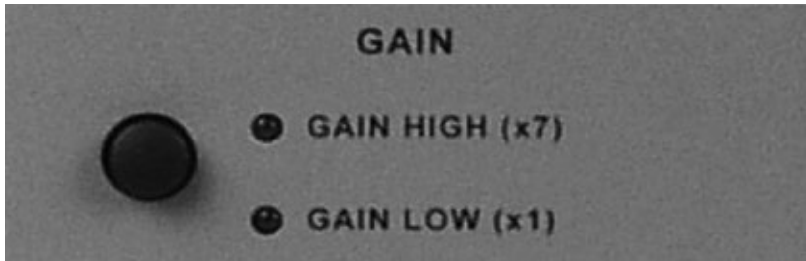

This button toggles between the available gain options of the amplifier:


- GAIN HIGH (x7)** Indicates a gain of seven. 1 V in will result in 7 V output voltage.
- GAIN LOW (x1)** Indicates a gain of one. 1 V in will result in 1 V output voltage.

## 4.3 The CURRENT LIMIT LED



This LED indicates that the current limit has been reached.

## 4.4 The ERRORS LEDs

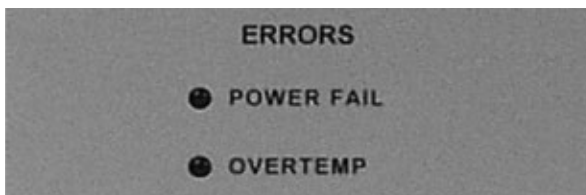

- POWER FAIL** This LED indicates if any of the system voltage check fails. It is blinking in case the power stage power supply unit fails and it stays constant if the auxiliary supply fails.

**OVERTEMP**

This LED blinks as a warning that the internal operation temperature is reaching a critical range. It stays constant if the operation temperature exceeds the critical range and the amplifier switches off the output signal but keep on the fan to cool down the amplifier.

**NOTE!**

**The active COMPENSATION and the active GAIN LED are blinking additionally.**

**If the output signal is switched off because the amplifier detected over temperature or a power error the active COMPENSATION LED and the active GAIN LED are blinking additionally.**

**NOTE!**

**Operation temperature.**

**If the operation temperature returns to the safe range, the output will switch back on automatically.**

**NOTE!**

**LED test.**

**During system power up the LEDs will be tested for approximately one second.**


## 5 APPLICATIONS



### 5.1 Compliant with ISO 7637 (and similar) for transient immunity

The PA 5740 is designed to act as the battery source for transient immunity tests. Most transients must be coupled onto battery voltage and the **NSG 5000 series** with its internal coupling couples the transient and the DC voltage as required by the standards. Designed with low internal resistance and low noise, the **PA 5740** is compliant with section 5.4 of ISO 7637-2:2004.


For this application please use compensation mode **CAPACITIVE**.

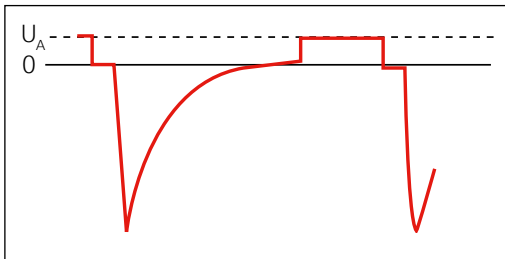

### 5.2 Voltage variations for starting profiles

The **PA 5740** series is often used for starting profile simulation (pulse 4 and variants). In addition, several standards require synchronized starting profiles. Utilizing the **NSG 5000 series** for control, the **PA 5740** (or the **PA 5840**) is the best solution for all known starting profiles with up to four synchronized starting profiles. The **PA 5840** is another automotive battery simulator from Teseq but for greater power. See the specifications of the **NSG 5000** series for details.

For this application please use compensation mode **CAPACITIVE**.

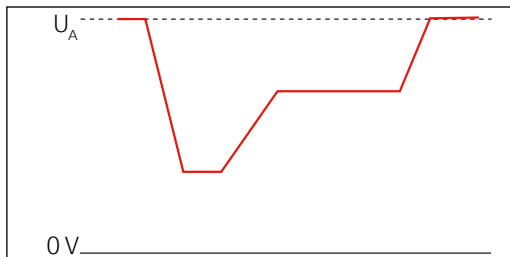

### 5.3 Fast rise time for challenging voltage dip applications


Certain standards, such as Ford ES-XW7T-1A278-AC specify  $\sim 10 \mu s$  rise and fall times for the battery simulator. The PA 5740 is designed to fully meet the relevant standards and is often used for dips and drops applications where  $< 10 \mu s$  rise times are specified.

For this application please use compensation mode STANDARD.

### 5.4 Voltage ripple and sine wave noise simulations

The PA 5740 is also commonly used to simulate sine wave noise on battery voltage. A user could, for example, simulate a 1 V p/p sine wave onto a 42 V network using high battery current. This is a common requirement of manufacturers' standards. For this application please use suitable compensation mode (as frequency required).

## 5.5 Example application with NSG 5500 and NSG 5600

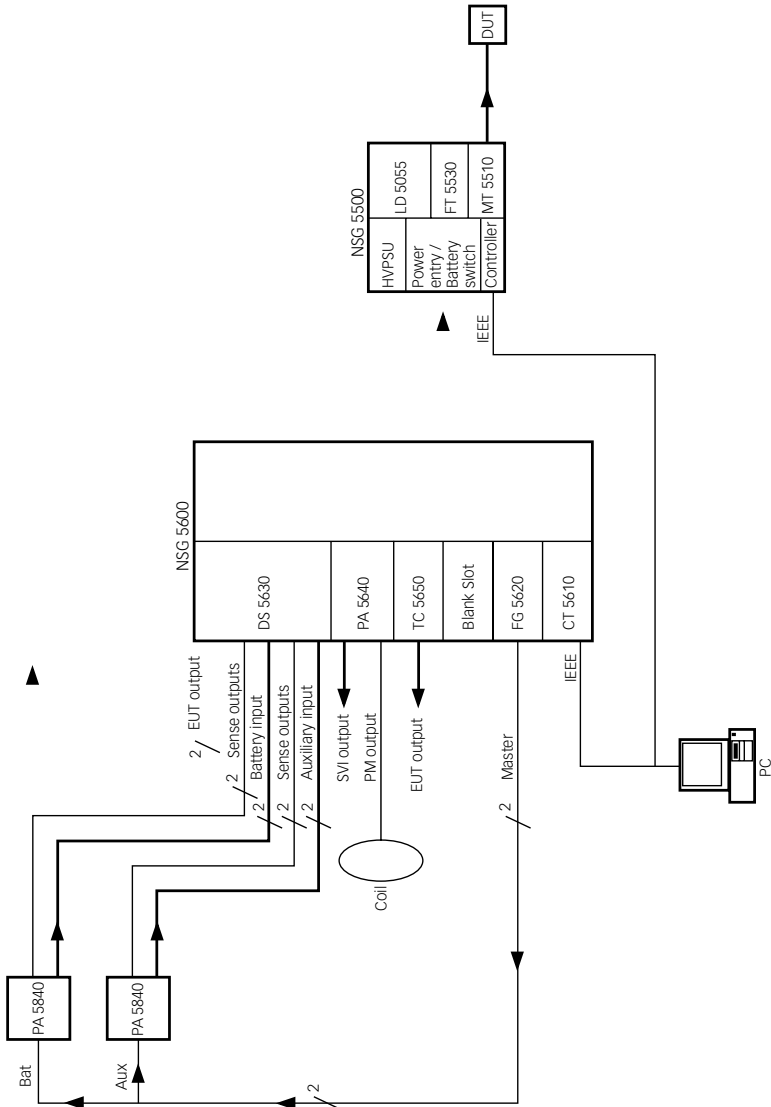

## 6 MAINTENANCE



Under normal conditions, it does not take much effort to keep your test equipment in good working order.



**CAUTION! Protect the equipment against moisture, heat and dust.**

### 6.1 Cleaning the equipment

To clean the equipment, use a dry, clean cloth. Never use water, any other liquid or detergent.

### 6.2 Moving and storing the amplifier

The amplifier must be installed/uninstalled only by qualified personnel. Before moving the equipment (even over a short distance), you must first turn it off and disconnect it from the mains. Remove any fixturing devices and/or test objects. Also, disconnect the amplifier from any peripherals. For longer transit, protect the equipment against humidity, dust and shock by proper packaging.

The equipment must be stored in upright (working) position. Make sure the equipment is protected against humidity, dust and dirt.

Observe the environmental conditions specified in chapter 7.1 Environmental conditions.

### 6.3 Protection

The PA 5740 Automotive battery simulators are protected with a slow-blow fuse. Dependent on the supply voltage a fuse with a different ampere rating is equipped:

Type	No of phases	Supply voltage $U_{\text{eff}}$	Primary current $I_{\text{eff}}$
PA 5740-75 / 100 V	1	100 V	12.5 A
PA 5740-75 / 120 V	1	120 V	10 A
PA 5740-75 / 230 V	1	230 V	6.3 A

#### 6.3.1 Fuses


The fuses are placed in the mains voltage selector. To exchange a fuse, proceed as follows:




**DANGER! Dangerous voltages and currents are present in the PA 5740!**

**Disconnect the amplifier from the mains by disconnecting the power cord before working on the mains voltage selector!**

- Carefully loosen the drawer from the input connector assembly using a screwdriver and turning it slightly in both directions as shown in the pictures below.

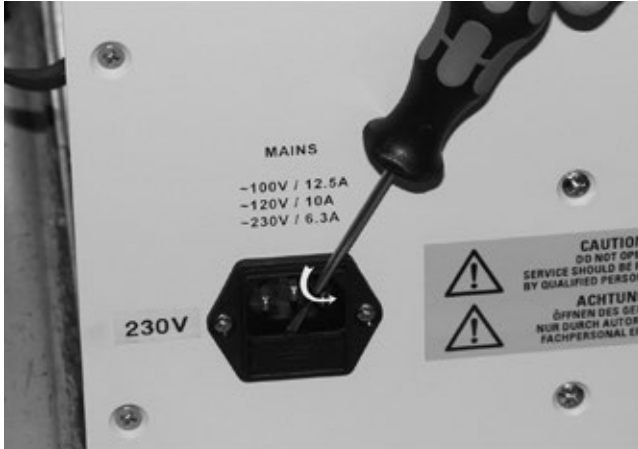


- Pull out the drawer from the input connector assembly.

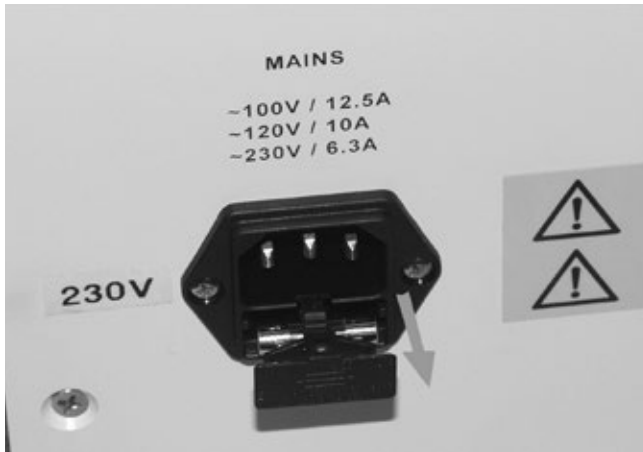



- Remove the defect fuse.

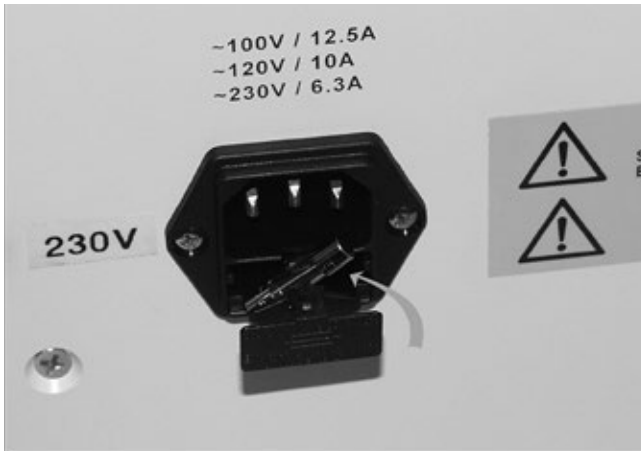

- Remove the defect fuse.




**CAUTION! Risk of destruction by wrong fuses!**

**Use the following fuse types 5 x 20 mm, 6 A, time-lag**

26

- Push the drawer back in until it is fixed to the input connector assembly again.

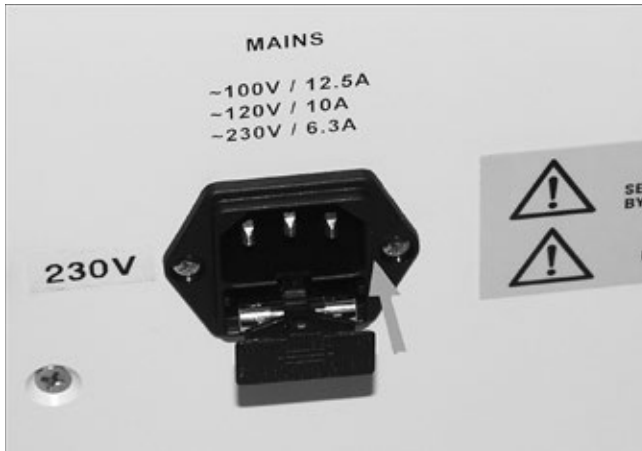

- Now reconnect the PA 5740 to the mains.

# 7 SPECIFICATIONS



## 7.1 Environmental conditions

<b>Temperature range:</b>	Operation at +10 to +40°C storage at -10 to +60°C
<b>Humidity:</b>	30 to 75% (non condensing)
<b>Air pressure:</b>	860 to 1060 hPa
<b>Protection class:</b>	IP20

## 7.2 Technical capabilities

<b>General</b>	<b>PA 5740</b>
Forward voltage gain (switchable)	7/1
Bandwidth (-3 dB)	DC to 40 kHz (standard) to 150 kHz (high freq)
Overtemperature shutdown	Thermal sensors trip at 80°C (warning) and 90°C (output shut off)
<b>Supply</b>	
Supply voltage	1 ph 100/120/230 V ± 10% L, N, PE
Supply frequency	47 to 63 Hz
Supply power	1.4 kVA
<b>Output</b>	
Output voltage range	-60 to +60 V
Max continuous output Current	±10 A
Output impedance	<10 mOhm
Output accuracy	Typical <1%

DC	< 2%
AC signals	< 2%
Load regulation, U <sub>out</sub>	0.2% max. with sense line
Long term drift, U <sub>out</sub>	0.1% max
Temperature drift, U <sub>out</sub>	0.02%/°C
Output ripple, U <sub>out</sub>	<10 mVrms for more details, and measurements methods, see the calibration report
Recovery	>90% of excursion within 25 $\mu$ s
Output rise time	<3 $\mu$ s (high freq)/<10 $\mu$ s (standard)
Remote sensing	Auto compensation for up to 4 V cable loss
<b>Control signals</b>	
Input impedance	10 kOhm
U Input	gain x1: 1 V = 1 V (output) gain x7: 1 V = 7 V (output)
I Input	10 V = 10 A
Display for output voltage (RMS)	0 to 60 V $\pm$ 1 digit $\pm$ 2% of Reading
Display for output current (RMS)	0 to 10 A continuous $\pm$ 1 digit $\pm$ 2% of reading
<b>Mechanical specification</b>	
Standard housing	19" cabinet
Style/construction	
Overall dimensions	188 x 484 x 560 mm
H x W x D	7.4 x 19 x 22.2"
Mass	35 kg/77 lbs
<b>Control panel</b>	
2 x Display 3½ digit red LED	Voltage, current RMS
1 x Connector 9-pole male D	U <sub>prog</sub> , I <sub>prog</sub>
<b>Front panel</b>	
Connector for output power	2 x 4 mm banana female
Connector for output power sense	2 x 2 mm banana female
Power switch	2 position OFF - ON

**Rear panel**

Electrical fuse	6,3 A, 10 or 12,5 A
Connector for line supply	1-phase socket
Connector for output power	2 x 4 mm banana female
Connector for output power sense	2 x 2 mm banana female

**Standard compliance**

Safety	IEC 1010-1
EMC	EN 50082-1, EN 55011

## 7.3 Pictures

### 7.3.1 Front view



### 7.3.2 Rear view



PA 5740 - Automotive battery simulators

# 8 DECLARATION OF CONFORMITY (CE)



Teseq AG Sternenhofstrasse 15 4153 Reinach Switzerland  
T +41 32 681 40 40 F +41 32 681 40 48 www.teseq.com

## Declaration of conformity



Manufacturer: Teseq AG  
Address: Sternenhofstrasse 15, 4153 Reinach, Switzerland

declares that the following products

Product: PA 5740 / 100  
PA 5740 / 120  
PA 5740 / 230

conforms to the following Directives and Regulations

EMC Directive 2014/30/EU  
LVD Directive 2014/35/EU


Generic standards: EN 61326-1:2013  
EN 61326-2-1:2013  
EN 61010-1:2011

The purpose of this instrument is the generation of defined interference signals for EMI immunity testing. Depending on the arrangement of the test rig, the configuration, the cabling and the properties of the EUT itself, a significant amount of electromagnetic radiation may result that could also affect other equipment and systems. The user himself or herself is ultimately responsible for the correct and controlled operation of the rig. In case of doubt, the tests should be carried out in a Faraday cage.

European representative  
AMETEK CTS Germany GmbH  
Lünenerstr. 211  
D 59174 Kamen  
Tel: +49 (0) 2307 / 26070-0  
Fax: +49 (0)2307 / 17050

Manufacturer  
Teseq AG  
Sternenhofstr. 15  
CH 4153 Reinach  
Tel: +41 61-7179191  
Fax: +41 61-7179199

By   
N. Holub  
General manager  
Kamen, Germany  
Date 07. April 2016

  
A. Burger  
Design and Research  
Reinach BL, Switzerland  
Date 07. April 2016



## AMETEK CTS Manufacturer:

### Switzerland

**EM TEST (Switzerland) GmbH**  
Sternenhofstrasse 15  
4153 Reinach, Schweiz  
info.conducted.cts@ametek.com

### Switzerland

**Teseq AG**  
Sternenhofstrasse 15  
4153 Reinach, Schweiz  
info.conducted.cts@ametek.com

### Germany

**Teseq GmbH**  
Landsberger Strasse 255  
12623 Berlin, Deutschland  
info.rf.cts@ametek.com

### United Kingdom

**Milmega Ltd.**  
Park Road  
Ryde, Isle of Wight  
PO33 2BE, Großbritannien  
Milmega.sales@ametek.co.uk

### USA

**IFI – Instruments For Industry**  
903 South Second Street  
Ronkonkoma  
New York 11779, USA  
sales@ifi.com

## Sales & Service Center

### China

**AMETEK Commercial Enterprise**  
(Shanghai) Co. Ltd. Beijing Branch  
Western Section, 2nd Floor  
Jing Dong Fang Building (B10)  
Chaoyang District  
Beijing, China, 100015  
T: +86 10 8526 2111  
chinasales@teseq.com

### Shanghai Office:

Part A1, A4, 2nd floor, Building  
No. 1  
No. 526 Fute 3rd Road East  
Pilot Free Trade Zone, Shanghai  
200131, China  
T: +86 21 5866 0969

### Guangzhou Office:

Room 1410-12, Yian Plaza  
33 Jian She Liu Ma Road  
Guangzhou, China  
T: +86 20 8363 4768

### Germany

**AMETEK CTS Germany GmbH**  
Lünener Straße 211  
59174 Kamen, Deutschland  
T: +49 2307 26070-0  
info.cts@ametek.de

### France

**AMETEK SAS**  
Rond Point de l'Épine des Champs  
Buroplus, Bat D  
78990 Elancourt, France  
T: +33 (0) 1 30 68 89 00  
info.france@ametek.com

### United Kingdom

**Teseq a trading division of AMETEK (GB) Limited**  
5 Ashville Way, Molly Millars Lane  
Wokingham Berkshire RG412PL  
Great Britain  
T: +44 845 074 0660  
sales.cts@ametek.co.uk

### Japan

**AMETEK Co. Ltd.**  
Tokyo office  
3rd floor, Shiba NBF Tower,  
1-1-30 Shiba-Daimon, Minato-ku  
Tokyo, 105-0012, Japan  
T: +81 3 6809 2401

### Nagoya Office

1-329 Kifune Meito-ku Nagoya-shi  
Aichi-ken, 465-0058, Japan  
T +81 52 709 5501  
cts-japan.sales@ametek.co.jp

### Poland

**AMETEK CTS Germany GmbH**  
ul. Ogrodowa 31/35  
00-893 Warszawa, Polen  
T: +48 518 643 512  
infopolska.emtest@ametek.com

### Singapore

**AMETEK Singapore Pte. Ltd.**  
No. 43 Changi South Avenue 2  
#04-01 Singapore 486164  
T: +65 6484 2388  
Singapore.sales.cts@ametek.com

### Taiwan

**AMETEK Taiwan Corp. Ltd.**  
10F-5, No. 120, Sec 2,  
GongDaoWu Rd.,  
Hsinchu City 30072, Taiwan  
T: +886 3 57 5099

### USA

**Teseq Inc. / AMETEK CTS**  
52 Mayfield Avenue  
Edison, New Jersey 08837, USA  
T +1 732 417 0501  
For free: +1 888 417 0501  
usasales.cts@ametek.com

To find your local partner within  
Teseq®'s global network, please go to  
[www.teseq.com](http://www.teseq.com)  
© April 2016 Teseq®

Specifications subject to change without  
notice. Teseq® is an ISO-registered company.  
Its products are designed and manufactured  
under the strict quality and environmental  
requirements of the ISO 9001. This document  
has been carefully checked. However, Teseq®  
does not assume any liability for errors or  
inaccuracies.