


In-Use Screen

After a Massage program is selected, In-use screen displays all settings to that program.

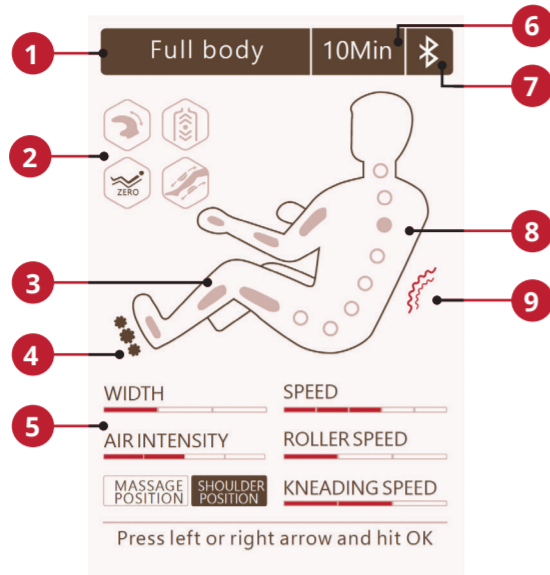

- 1 Program
- 2 Status icons
- 3 Active airbags
- 4 Active rollers
- 5 Indicators
- 6 Time left
- 7 Bluetooth connected
- 8 Back-roller position & direction
- 9 Back heat indicator

Intelligent Voice Commands

Awaken Intelligent Voice Commands by saying: 'Hi Kyoto' pronounced "Key-oh-ta", or press microphone key on remote control.

You may now give your chair any of the commands in the list below within 6 seconds. After 6 seconds the Intelligent Voice Command function will turn off automatically and must be awakened again.

You can also press the **Voice Command button** on your remote control, once to awaken Voice Command, or hold down for 3 seconds to turn off voice control listening.



Make sure to speak the command clearly and slowly.


Commands	Manual Commands
Quick	Change to Point Mode
Full Body	Go a Little Down
Rest and Relax	Go a Little Up
Recharge	
Recovery	
Stretch	
Neck and Shoulder	
Back Relief	
Lower Body	
Stress Relief	
Renew	
Athlete	
Turn Chair Off	

KYOTA The World's Most Advanced Massage Chairs®

72 Stard Road, Seabrook, NH 03874
(800) 242-0761
www.kyotamassagechairs.com
Version 1.6

KYOTA®

Quick Start Guide

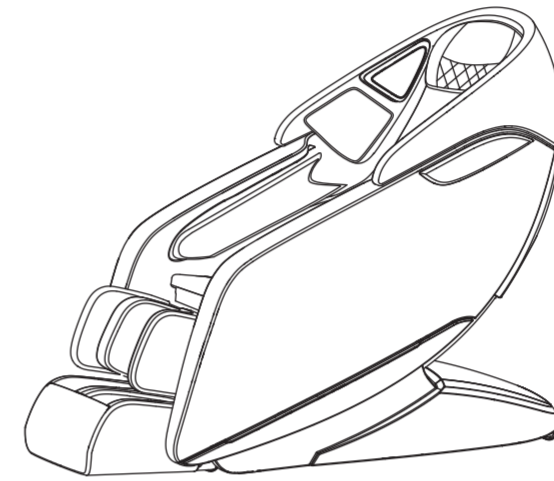

Genki M380 Massage Chair

KYOTA®

Multi-Functional Screen – Use the directional buttons below to navigate these menu screens. Then press OK to select.

Power – Powers up the remote or returns the chair to the exit position and powers down remote.

Directional Button – Press up, down, left or right to navigate the display screen.

Auto – Select from 12 pre-set massage programs.

Home – Shortcut to the home page of all menu screens.

Feet Adjust – Press and hold up arrow to bring foot rest up, press and hold down arrow to bring foot rest down.



Pause – Press to force stop the chair during a program and stop all functions. Press again to resume.

OK – After navigating to the command desired on the display, push OK to select.

Voice Command – Press once to awaken Intelligent Voice Command, hold down for 3 seconds to turn off Intelligent Voice Command.

Zero Gravity – Press once for zero gravity 1. Press twice for zero gravity 2. Press button again to return to zero gravity 1.

Foot Roller – Press once to turn off Foot rollers, press again to also turn off Calf rollers, press again to resume both.

Seat Back Position – Press and hold down arrow to recline the seat back and lift up footrest. Press and hold the up arrow to upright the seat back and lower footrest.