
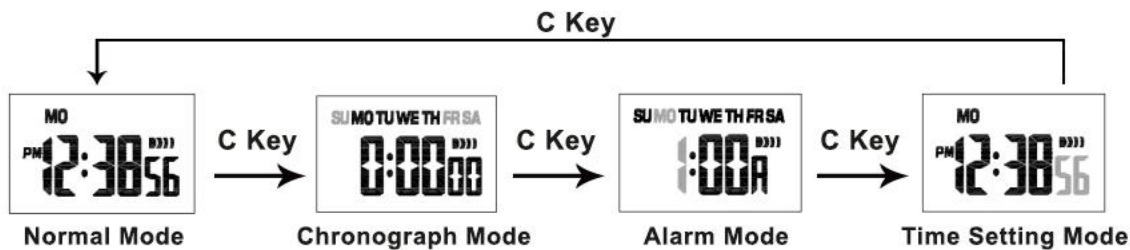


SKMEI 1596 OPERATION MANUAL

A. Features and Button Introduction

- 6 Digits LCD Display, Display Hour, Minute, Second, Week
- Chime hourly and Daily Alarm
- 12 / 24H format selectable, Auto Calendar
- 1/100 second Chronograph with split function
- EL backlight
- Led display
- A key: In any mode, press A key to start the function of the led display light. In the process of showing the function of the led display light, press A key to change the flashing direction of the led display light (forward or reverse). Press A key to view the date at the same time in normal mode; press A key to start timing in chronograph mode; press A key to adjust value in setting mode.
- B key: press B key in any mode to light EL backlight; press B key to check alarm time in normal mode; stop timing operation in chronograph mode; press B key to switch selected element values in setting mode.
- C key: press C key to convert mode.

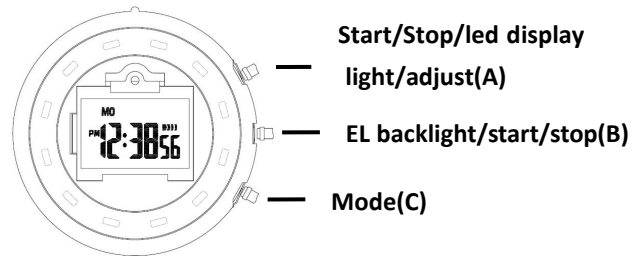

1. Function key combination operation

- In normal mode, press A+B key together to ON/OFF the alarm. When this symbol “**||||**” appears, it means the alarm is on.
- In normal mode, press and hold on B key, and then short press C key and if all the week icons (MO/TU/WE/TH/FR/SA/SU) appear, the Chime is on; if all the week icons disappear, the Chime is off.
- If all the week icons (MO/TU/WE/TH/FR/SA/SU) appear, the Chime is on; if all the week icons disappear, the Chime is off.

2. Chronograph function

- The display range of the chronograph is 23 hours, 59 minutes and 59.99 seconds.
- The chronograph starts in 0.01 seconds; 30 minutes later, time in seconds.
- In chronograph mode, press A key to start chronograph mode, press A key again to stop it, press B key to return to zero when chronograph mode stop.
- In chronograph mode, press A key to start timing, press B key to enter split functions, press A key to exit split functions and enter chronograph stop mode; when exit split functions, press B key to display the whole chronograph time, then press B key to return chronograph value to zero.
- When the chronograph is running, press C key to return to the time display mode, the chronograph is running behind.

3. Alarm Mode

- Alarm setting: In alarm mode, “Hour” flashing, press A key to adjust, then press B key “Minute” flashing, press A key to adjust.
- When alarm function is on and reach the setting time, it alarms 60s and stop automatically.
- When it alarms, press A key to open the snooze function, then it will alarms 60s each 5mins. Press B key to stop alarm.

4. Time Setting

- In time setting mode, “Second” flashing, press A key to adjust the “second” to zero. Press B key, the “Minute” flashing, then press B key to adjust “Hour”, “Day”, “Month”, “Week” in turn.
- When setting “Hour”, press A key to adjust to “A” or “P” appear, it means 12-hour format, when “H” appear, it means 24-hour format.
- When setting “Second”, if the value is between 30 to 59, then when second value back to zero, minute value will add 1 automatically. If the second value is between 00 to 29, then the minute is not changed.