



## In-Use Screen

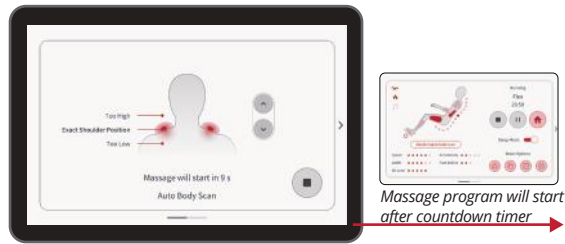


After a Massage program is selected, you will be taken to the **Body Scanning screen**. Here you can use the arrows to adjust the back mechanism up and down to match your specific shoulder height. After the countdown timer has elapsed, your massage will start.

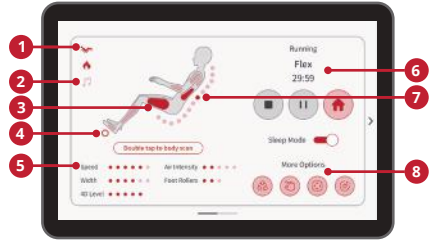

- 1 Zero Gravity Recline
- 2 Speakers Active
- 3 Active Airbags
- 4 Active Rollers
- 5 Indicators
- 6 Time Remaining
- 7 Back Roller Position
- 8 Main Menu Navigation


After adjusting your shoulder height, you will be taken to the **In-use screen** where you can observe all current settings and session information. To personalize your massage to your exact needs, swipe left on the touch screen to be taken to the Custom Selections screen.

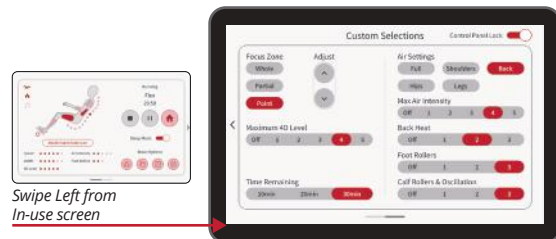

The **Custom Selections screen** can be used to tailor your massage exactly to your needs. Here you will have complete control over the duration, airbag settings/intensity, foot rollers, and back/leg heat. To return to the In-use screen, simply swipe right or tap the arrow on the Tablet Remote screen, which will take you to the home page, and then tap 'massage running screen' at the top center of your screen. If you slide on the **Control Panel Lock** (top right corner of screen), this screen will not revert back to the In-Use screen so you can make continuous adjustments. Slide off to unlock again.

## Quick Access Panel + Joystick Control

The Quick Access Panel + Joystick Control allows you to turn the chair on and off, control chair angles, turn on lights and sounds, adjust volume, pause your massage, select auto program's, and set and select your favorite massage programs.

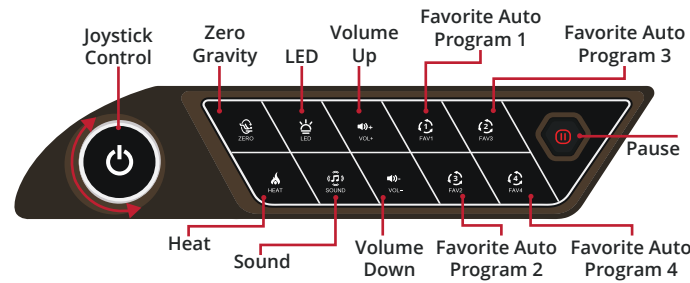

### Joystick Control:

- Turn dial left or right to recline/upright the massage chair.
- Long Press of power button turns massage chair on/off.
- Short Press of power button cycles through 6 different auto programs. Name of program is announced through speakers.

**Pause** - Press to pause massage program. Press again to resume massage program.

**Zero Gravity** - Press to enter Zero Gravity position 1, press again to enter Zero Gravity position 2, press again to return to upright position. Light color indicates current zero gravity position. White/green = Zero Gravity position 1, Blue = Zero Gravity position 2.

**Heat** - Press to turn on lumbar heat. Press again to increase heat level. Press again to turn heat off. Light color indicates current heat level. White = off, Yellow = low heat, Red = high heat.

**LED** - Press to turn on LED lights located next to your head on the speakers, and on the outside of the arm panels. Press once to turn on, press again to turn off. LED lights will resume the last settings you selected.

**Sound** - Press to turn on SootheMe™ Sound Therapy. Each additional press will cycle you through the 10 SootheMe™ sounds. The last press after cycling through the tenth sound will turn SootheMe™ Sound Therapy off.


**Volume Up** - Press to turn the volume up. Button will appear blue once maximum volume is reached.

**Volume Down** - Press to turn the volume down. Button will appear blue once minimum volume is reached.

**Favorite Auto Programs (1-4)** - Press and hold to set current massage program as favorite. Once set, press to start the favorite massage program. Change the program by repeating and the new favorite will overwrite the old.

# KYOTA®

## Quick Start Guide

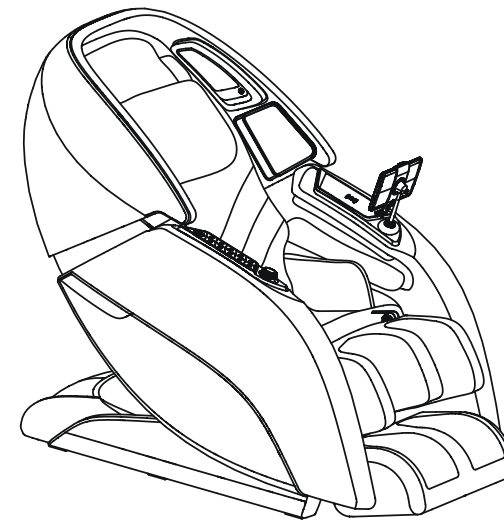


## Nokori M980 Massage Chair




**KYOTA** | The World's Most Advanced Massage Chairs®


# KYOTA®

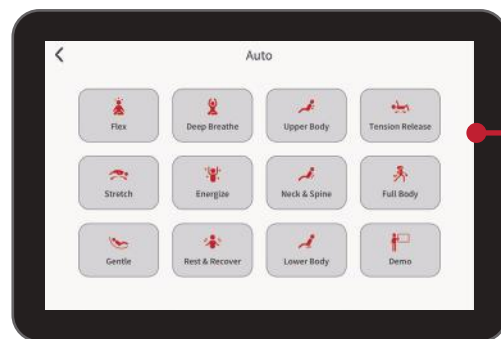

**Auto Programs** - Select from 12 pre-set auto programs. To select simply tap the auto program you wish to run.

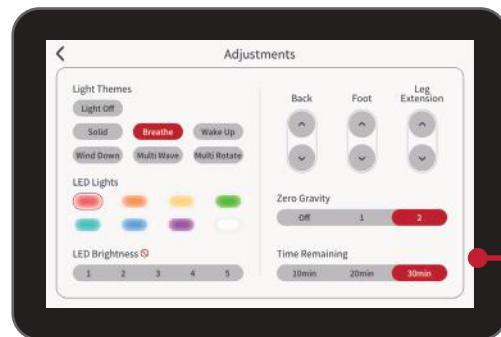


**Adjustments** - While your massage program is running, use this screen to make adjustments to lighting, chair angles, or time. To turn lights off simply de-select the activated light theme or select light off.

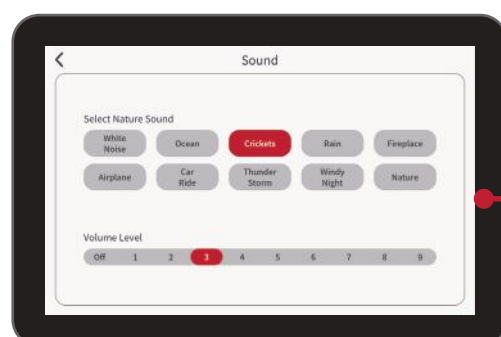


**Sound** - Use this screen to select and control the SootheMe™ Sound Therapy feature of your chair. The selected sound will play from the Intersound™ speakers. To turn SootheMe™ Nature Sounds off, de-select the activated sound.

**Home Page** - After turning on your chair, this is the first screen you will see on your tablet. Use this screen to navigate all menu options. To select, simply tap the screen with your finger.

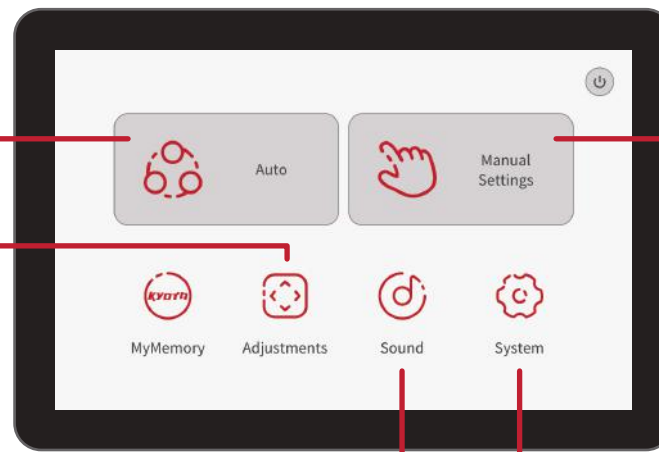

**System Settings** - Use this screen to adjust and personalize your chair and remote control settings. Swipe up to roll through the menu.

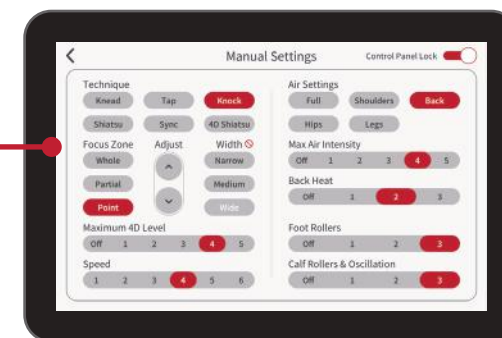

**Manual Settings** - Have a particular spot that needs more work? Take the power of massage into your own hands with Manual Settings. Use this screen to fully customize your own massage and find the perfect treatment for you. If you slide on the **Control Panel Lock** (top right corner of screen), this screen will not revert back to the In-Use screen so you can make continuous adjustments. Slide off to unlock again.

After you have set up the perfect selections you can tap **MyMemory** and **Save** the program to 1 of 3 Memory slots for recall later.

**Technique** - controls the massage technique of the back mechanism.

**Focus Zone** - controls the range of motion of the back mechanism, *Whole* travels the entire length of the track, *Partial* travels a short distance and reverses direction for focused relief, *Point* stops on the track for targeted relief.

**Adjust** - Partial and Point location can be fine tuned using the arrow up or arrow down buttons.

**Width** - increase or decrease width of back mechanism (width can't be adjusted when in Kneading, or Sync modes).

**Maximum 4D level** - increase or decrease intensity of 4D back mechanism.

**Speed** - increase or decrease speed of back mechanism (massage speed can't be adjusted when in Shiatsu Manual mode).

**Air Settings** - select your desired airbag region

**Max Air Intensity** - set the maximum airbag intensity for your desired airbag settings.

**Back Heat** - turn on back heat and control intensity.

**Foot Rollers** - turn on total sole foot reflexology rollers and control the speed of the rollers.

**Calf Rollers & Oscillation** - turn on calf rollers & oscillation and control the speed of the rollers.