



BRAZEN
SPORTS™

USER MANUAL

WELCOME TO BRAZEN SPORTS

Brazen Sports timepieces are dedicated to achieving your goals, and always striving to push past them. Our inaugural collection is engineered to complement the skill and dedication of action sports enthusiasts. With a patented flexible case design inspired from a round of ammunition, our timepieces highlight the targets we all aim for in life.


SCREW-DOWN CROWN

To properly maintain your timepiece, it is important to understand how a screw-down crown works:

1. To make the crown operational, unscrew it counter clockwise until released.
2. To reseal the crown, press it in against the case until the threads engage, and turn clockwise until tight.

SETTING TIME FOR SINGLE TIME RHONDA 513S

Pull out crown to position II to set time. When done, return crown to position I.

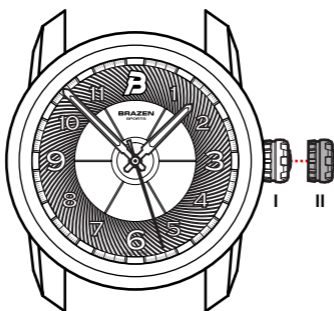


CHRONOGRAPH MODEL RHONDA 5021D

Pull out crown to position II to set date. Pull out crown to position III to set time. When done, return crown to position I.

ADJUSTING THE CHRONOGRAPH HANDS

1. Pull crown to position III. Press A and B simultaneously for 2 secs. Central second hand rotates 360° (corrective mode is activated).
2. Press A to single step central second hand. Press and hold A to advance central second hand. Press B to advance to next hand.
3. Press A to single step hour counter hand. Press and hold A to advance hour counter hand. Press B to advance to next hand. Press A to single step minute counter hand. Press and hold A to advance minute counter hand. Return crown to position I.

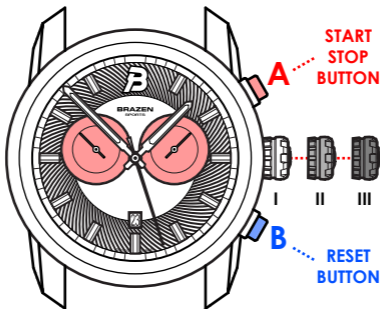

CHRONOGRAPH MODEL ETA 251.274

Pull out crown to position II to set date. Pull out crown to position III to set time. When done, return crown to position I.


To set counters to zero pull crown to position II. Press A to select a hand. Press B to correct position of hand selected.

TIMING MODE

Press A to start. Press A to stop. To reset to zero press B. To restart timing press A again before resetting to zero.

SPLIT-TIME or INTERMEDIATE TIME FUNCTION


Press A to start. To split 1 press B. To restart press B. To split 2 press B. To restart press B. Press A to stop. To reset to zero press B.

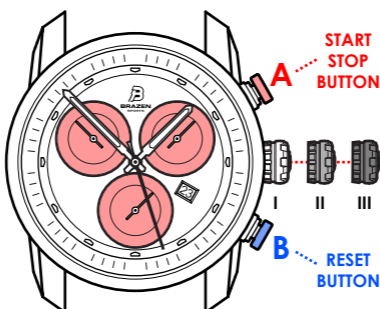



BRAZEN
SPORTS™

BATTERY REPLACEMENT STEPS

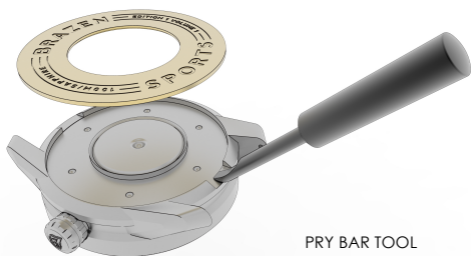

PRY BAR TOOL



HOROTEC MAS07.115

STEP 1: Remove strap

STEP 2: Remove disk utilizing case back pry bar tool or caseback opening tool Horotec MAS07.115.

STEP 3: Unscrew with case backwrench

STEP 4: Align disk to case back and use case press die:

- 48mm tapered nylon dye on bottom/crystal side
- 22mm tapered nylon dye center on top/disk

WATER RESISTANCE

Brazen Sports timepieces are water resistant to 100 meters, or 330 feet. The enclosure protects the movement of the watch from dust, moisture, and risk of damage when submerged in water. It is critical not to adjust any timekeeping functions when in contact with water. Doing so may cause damage to the watch from dust, moisture, and risk damage when submerged in water. Every Brazen Sports timepiece comes equipped with screw-down crowns. Please ensure the crown is properly tightened and checked regularly before coming in contact with water. It is also important not to engage the functions of the chronograph under water, as water may leak into the case and cause damage to the movement.

BRAZEN SPORTS LIMITED TWO (2) YEAR WARRANTY

Subject to the terms and conditions which can be found on the Brazen Sports website (www.brazensports.com), Brazen Sports warrants, for two (2) years that it will be free from faulty workmanship. In the event a defect arises, which defect is covered by this warranty, all components, unless excluded below, will be repaired or the watch will be replaced free of charge.

Exclusions and Limitations: Notwithstanding the foregoing, this warranty expressly excludes the following: All Leather, Rubber straps and buckles; Crystals; Batteries; Water damage unless the watch is specifically marked as water resistant.

BASIC FUNCTION (START/ STOP/ RESET)

Press button A to START. Press button A to STOP timing. Press button B to reset the two chronograph hands to the zero position.

ACUMULATED TIME

Press A to start timing. Press A to stop timing (e.g. 10 seconds). Press A to resume timing. Press A to stop timing (e.g. 40 seconds). The accumulated time is

50 seconds. Press B to reset the chronograph hands.

INTERMEDIATE OR INTERVAL TIMING

Press A to start timing. Press B to display interval (e.g. 10 seconds). Timing continues in the background. Press B to make up the measured time (the two chronograph hands are quickly advanced to the ongoing measured time). Press A to stop timing (e.g. 40 seconds). Press B to reset the chronograph hands. Press B to reset the chronograph hands.

CARE AND HANDLING

To protect your Brazen Sports timepiece, please follow these simple guidelines. Clean your watch with a soft cloth and water only. After saltwater use, rinse watch under tap water and wipe dry with a soft cloth.

Depending on usage, we advise having your timepiece serviced every 18 to 24 months to ensure trouble free operation. It is important to avoid extreme heat or cold, as well as prolonged periods of exposure to direct sunlight and exposure to wet conditions that exceed your timepiece's water rating.

END OF BATTERY LIFE (EOL)

Your watch is equipped with a feature to indicate when the battery level is low. When the battery gets to that stage, the second hand will jump 4 steps at a time, every 4 seconds. This behavior lowers the power consumption while still displaying the time accurately and letting you know that it is time to change the battery.

AUTHORIZED SERVICE CENTER BRAZEN SPORTS / REPAIR

Our authorized Service Center and watch repair form can be found on the Brazen Sports website (www.brazensports.com).