




# ***SAFEWAZE***

## **4-Point Plate Anchor 021-4076**

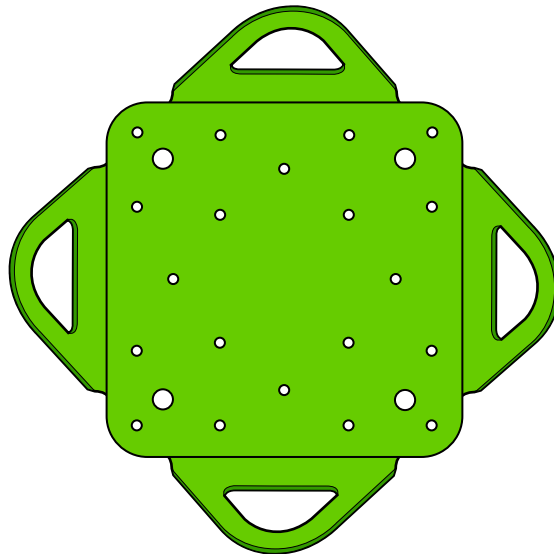

### **WARNING**



This product is part of a personal fall arrest, work positioning, or rescue system. The manufacturer's instructions must be provided to users of this equipment. The user must follow the manufacturer's instructions for each component of the system. The user must read and understand these instructions before using this equipment. Manufacturer's instructions must be followed for proper use and maintenance of this equipment. Alterations to this product, misuse of this product, or failure to follow instructions may result in serious injury or death.



### **IMPORTANT**

Questions regarding the use, care, or suitability of this equipment for your application? Contact Safewaze.



### **IMPORTANT**

Record identification information before using this product. Identification information may be found on the equipment label (p 9). This information should be recorded in the "Inspection and Maintenance Log" located at the back of this manual (p 10).

**OSHA 1926 Subpart M, OSHA 1910**

**This manual is intended to meet the manufacturer's instructions as required by ANSI Z359 and should be used as part of an employee training program as required by OSHA.**

**Do not throw away these instructions!  
Read and understand these instructions before using equipment!**

## INTRODUCTION

Thank you for purchasing a Safewaze Anchorage Connector. This manual must be read and understood in its entirety, and used as part of an employee training program as required by OSHA or any applicable state agency. This manual and any other instructional material must be available to the user of the equipment. The user must understand how to safely and effectively use these anchors, and all fall protection equipment used in conjunction with the anchor.

Date of First Use:	_____
Serial#:	_____
Trainer:	_____
User:	_____

## APPLICABLE SAFETY STANDARDS

When used according to instructions, Safewaze Anchors meet OSHA regulations for fall protection. Applicable standards and regulations depend on the type of work being done, and may include state-specific regulations. Refer to local, state, and federal (OSHA) requirements for additional information concerning the governing of occupational safety regarding Personal Fall Arrest Systems (PFAS).

## WORKER CLASSIFICATIONS

**Understand the definitions of those who work in proximity of or may be exposed to fall hazards.**

**Qualified Person:** “Qualified Person” means one who, by possession of a recognized degree, certificate, or professional standing, or who by extensive knowledge, training, and experience, has successfully demonstrated his ability to solve or resolve problems relating to the subject matter, the work, or the project.

**Competent Person:** “Competent Person” means one who is capable of identifying existing and predictable hazards in the surroundings or working conditions which are unsanitary, hazardous, or dangerous to employees, and who has authorization to take prompt corrective measures to eliminate them.

**Authorized Person:** “Authorized Person” means a person approved or assigned by the employer to perform a specific type of duty or duties or to be at a specific location or locations at the job site.

**It is the responsibility of a Qualified or Competent person to supervise the job site and ensure safety regulations are complied with.**

## PRODUCT SPECIFIC APPLICATIONS


**Purpose:** Safewaze Anchors are designed to be used as part of a Personal Fall Arrest System (PFAS).

- A competent person shall train users on this equipment in accordance with OSHA and ANSI.
- Never exceed a free fall distance of 6 ft. A free fall of more than 6 ft could cause excessive arrest forces that could result in serious injury or death.
- Safewaze Anchors have a maximum capacity of ANSI 310 lbs / OSHA 420 lbs including any tools, clothing, accessories, etc..., unless otherwise rated by Safewaze.
- Structures for attachment of Safewaze Anchors shall support a minimum 5,000 lbs or be designed with a safety factor of two by a Qualified Person.
- All Safewaze anchors must IMMEDIATELY be removed from service if subjected to fall arrest forces.
- Safewaze anchors shall be inspected by the end user prior to each usage and by a Competent Person other than the user at least annually. These inspections shall be documented.

## LIMITATIONS


**Fall Clearance:** There must be sufficient clearance below the anchorage connector to arrest a fall before the user strikes the ground or an obstruction. When calculating fall clearance, account for a MINIMUM 2' safety factor, deceleration distance, user height, length of lanyard/SRL, and all other applicable factors (See Figure 1).

FIGURE 1

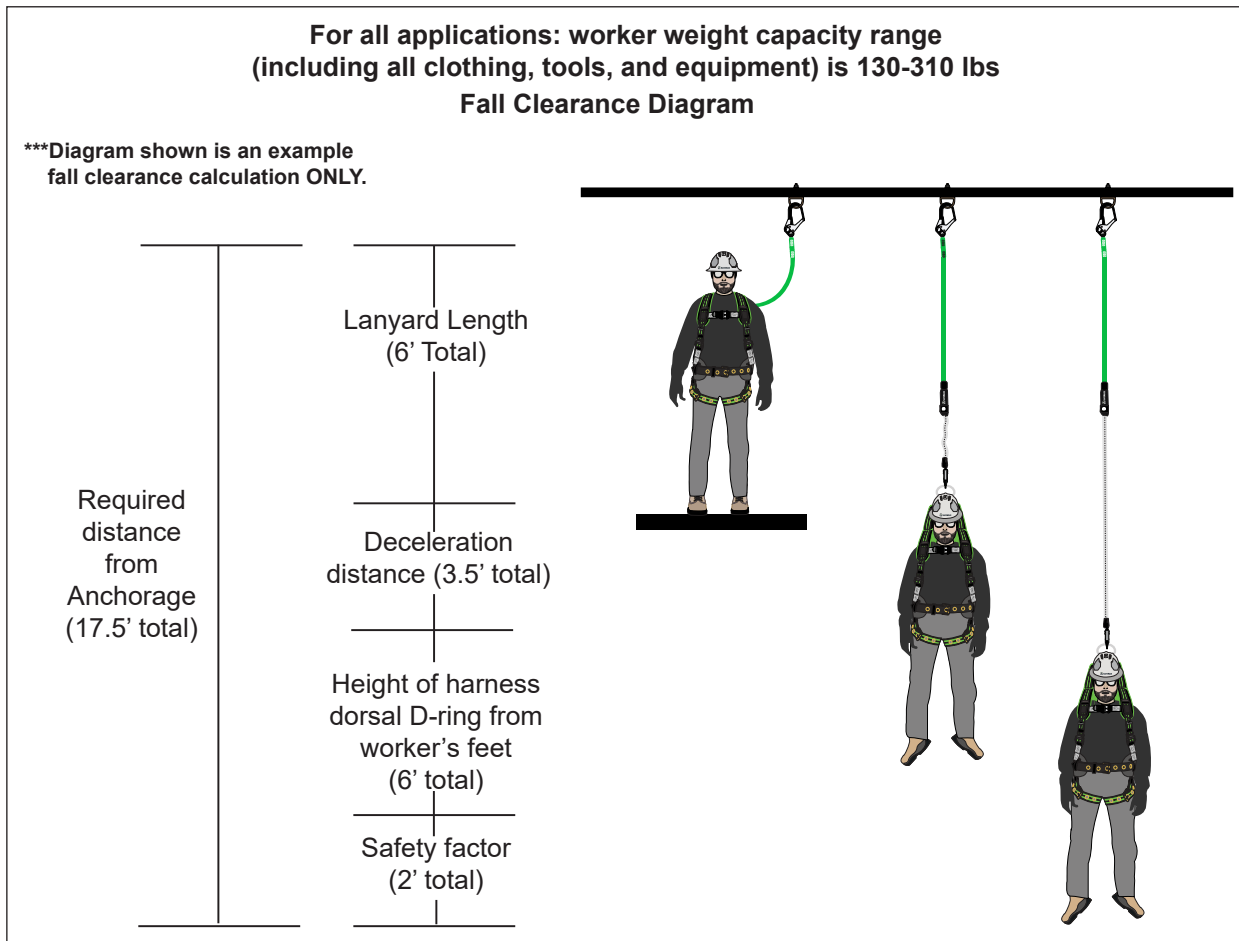

**Swing Falls:** Prior to installation or use, make considerations for eliminating or minimizing all swing fall hazards. Swing falls occur when the anchor is not directly above the location where a fall occurs. Always work as close to in line with the anchor point as possible. Swing falls significantly increase the likelihood of serious injury or death in the event of a fall (See Figure 2).

FIGURE 2

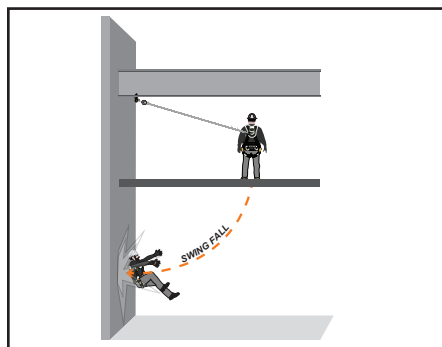

### COMPATIBILITY OF CONNECTORS


Connectors are compatible with connecting elements when they have been designed to work together in such a way that their sizes and shapes do not cause their gate mechanisms to inadvertently open regardless of how they become oriented. Connectors (hooks, carabiners, and D-rings) must be capable of supporting at least 5,000 lbs. (22.2 kN). Connectors must be compatible with the anchorage or other system components (see Figure 4). **Do not use equipment that is not compatible.** Non-compatible connectors may unintentionally disengage (see Figure 3). Connectors must be compatible in size, shape, and strength. Self-locking snap hooks and carabiners are required by ANSI Z359 and OSHA guidelines. Contact Safewaze if you have any questions about compatibility.




**NOTE:** SOME SPECIALITY CONNECTORS HAVE ADDITIONAL REQUIREMENTS. CONTACT SAFEWAZE WITH QUESTIONS.

**FIGURE 3 - UNINTENTIONAL DISENGAGEMENT**

1 - Non Compliant Part

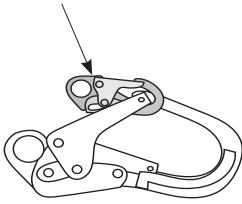


2 - Gate presses against non-compliant part

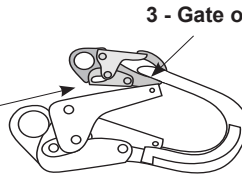

3 - Gate opens

4 - And parts disengage.

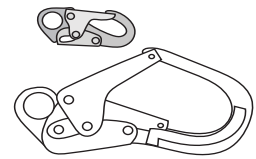

Using a connector that is undersized or irregular in shape (1) to connect a snap hook or carabiner could allow the connector to force open the gate of the snap hook or carabiner. When force is applied, the gate of the hook or carabiner presses against the non-compliant part (2) and forces open the gate (3). This allows the snap hook or carabiner to disengage (4) from the connection point.

**MAKING CONNECTIONS**

Snap hooks and carabiners used with this equipment must be double locking and/or twist lock. Ensure all connections are compatible in size, shape and strength. Do not use equipment that is not compatible. Ensure all connectors are fully closed and locked.

Safewaze connectors (snap hooks and carabiners) are designed to be used only as specified in each product's user's instructions. See figure 4 for examples of inappropriate connections. Do not connect snap hooks and carabiners:


- To a D-ring to which another connector is attached.
- In a manner that would result in a load on the gate (with the exception of tie back hooks). NOTE: Large snap hooks must not be connected to objects which will result in a load on the gate if the hook twists or rotates. Snap hooks marked with ANSI Z359.12 and are equipped with a 3,600 lb (16 kN) gate. Check the marking on your snap hook to verify its compatibility.



**NOTE:** Large throat snap hooks must not be connected to standard size D-rings or similar objects which will result in a load on the gate if the hook or D-ring twists or rotates, unless the snap hook complies with ANSI Z359.1-2007 or ANSI Z359.12 and is equipped with a 3,600 lb (16 kN) gate. Check the marking on your snap hook to verify that it is appropriate for your application.

- In a false engagement, where features that protrude from the snap hook or carabiner catch on the anchor, and without visual confirmation seems to be fully engaged to the anchor point.
- To each other.
- By wrapping the web lifeline around an anchor and securing to lifeline except as allowed for Tie Back models.
- To any object which is shaped or sized in a way that the snap hook or carabiner will not close and lock, or that roll-out could occur.
- In a manner that does not allow the connector to align properly while under load.


**FIGURE 4 - INAPPROPRIATE CONNECTIONS**

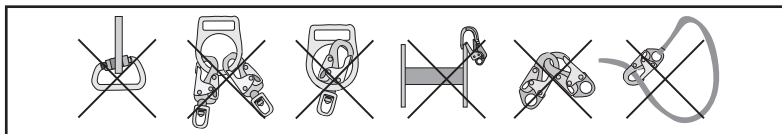


**SPECIFIC ANCHOR APPLICATIONS**




**Personal Fall Arrest:** Safewaze Anchors are designed as an anchor point to support a maximum of 1 Personal Fall Arrest System (PFAS) when utilized for fall protection applications. The structure to which the anchor is attached must withstand loads applied in the directions permitted by the system of at least 5,000 lbs. Maximum allowable free fall is 6'.

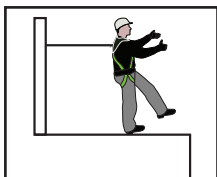

**Restraint:** Safewaze Anchors are authorized for use in Restraint applications. The structure to which the anchor is attached must withstand loads applied in the directions permitted by the system of at least 1,000 lbs NO free fall is permitted. Restraint systems may only be used on surfaces with slopes up to 4 / 12 (vertical / horizontal). For Restraint applications, the allowable attachment points to harness are Dorsal D-ring, Chest D-ring, Side D-rings, and Shoulder D-rings.

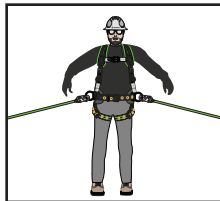

**Work Positioning:** Safewaze Anchors are authorized for use in Work Positioning applications. Work Positioning allows a worker to be supported during suspension while freeing both hands to conduct work operations. The structure to which the Anchor is attached must withstand loads applied in the directions permitted by the system of at least 3,000 lbs. Maximum allowable free fall is 2'. For positioning applications, the allowable attachment points to harness are the Side D-rings.

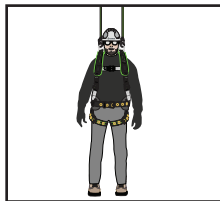


**Rescue/Confined Space:** Safewaze Anchors are authorized for use in Rescue/Confined Space applications. Rescue systems are utilized to safely recover a worker from a confined location or after exposure to a fall. Composition of rescue systems can vary based upon the type of rescue involved. The structure to which the Anchor is attached must withstand loads applied in the directions permitted by the system of at least 3,000 lbs. NO free fall is permitted. For rescue applications, the allowable attachment points to harness are Dorsal D-ring, Chest D-ring and Shoulder D-rings.

**All above referenced applications have a worker weight capacity range of ANSI 310 lbs / OSHA Up to 420 lbs (including all clothing, tools, and equipment).**

## ANCHOR COMPONENTS


FIGURE 5 - ANCHOR COMPONENTS

021-4076  
4 Point Plate Anchor

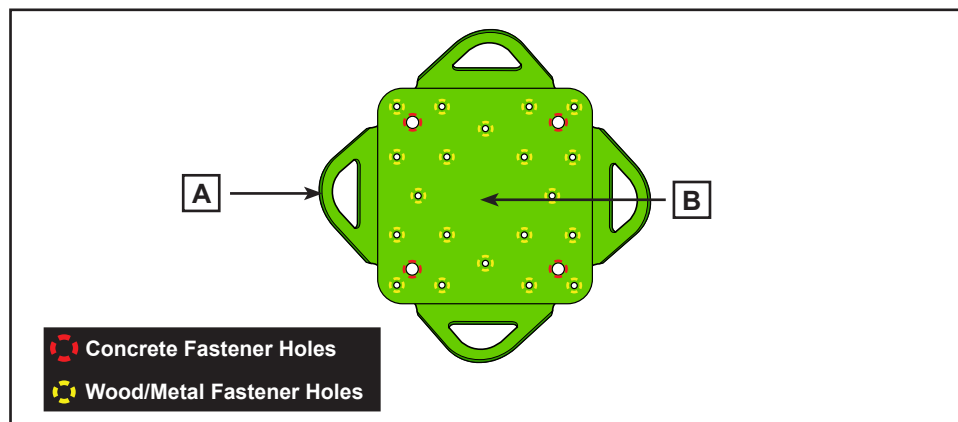

Anchor Components	
A	Fall Protection Connection Point
B	Anchor Body

FIGURE 6 - POSITIONING THE ANCHOR

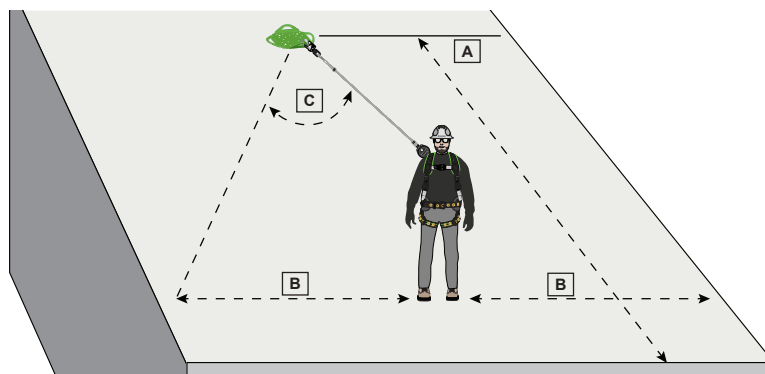

<b>A</b>	<b>B</b>	<b>C</b>
Anchor Distance From Leading Edge	Working Distance Along Roof Edge (Either Direction)	Working Angle From Perpendicular
6'	8'	53°
10'	9'-9"	45°
15'	11'-7"	38°
20'	13'-3"	33°
25'	14'-6"	30°
30'	16'	28°
35'	17'-2"	26°
40'	18'-3"	24°
45'	19'-4"	23°
50'	19'-10"	21°
55'	21'-4"	21°
60'	22'-3"	21°




## INSTALLATION

**TABLE 1 - FASTENERS**

Installation Fastener Requirements		
Substrate	Fastener Type	Qty.
Wood	#14 x 2.5" Hex Head Screws	20
Metal	#14 x 2.5" Self Tapping Hex Head Screws	20
Concrete	1/2" x 3-1/2" Concrete Wedge Anchors	4

**FIGURE 7 - WOOD INSTALLATION**


1. The 021-4076 must be installed in the center of a 48"x48" plywood sheet that is fastened to at least 3 top trusses (See Dwg. 1).
2. The plywood sheet must be a minimum of 1/2" thick and not in a severe state of deterioration. Wet spots, discoloration, excess age, obvious damage, or soft/spongy areas are examples of conditions that may effect the ability of the structure to withstand fall arrest forces.
3. Secure the plywood at all perimeter edges, 8" on center using deck screws. Installation also requires the use of a 3/4" thick backer board. Cut the backer board to fit between the inside width of the truss spacing (See Dwg. 2). Attach the backer board using the same 8" on center and deck screws.
4. Install the 021-4076 using (20) #14 x 2-1/2" Hex Head Screws. All fasteners must penetrate through both the plywood sheathing and the backer board. The installer must visually verify that all fasteners are properly installed.
5. For truss spacing of 24", center the anchor as indicated (See Dwg. 2). For truss spacing of less than 24" two backer boards must be used with the anchor centered over the truss (See Dwg.3).

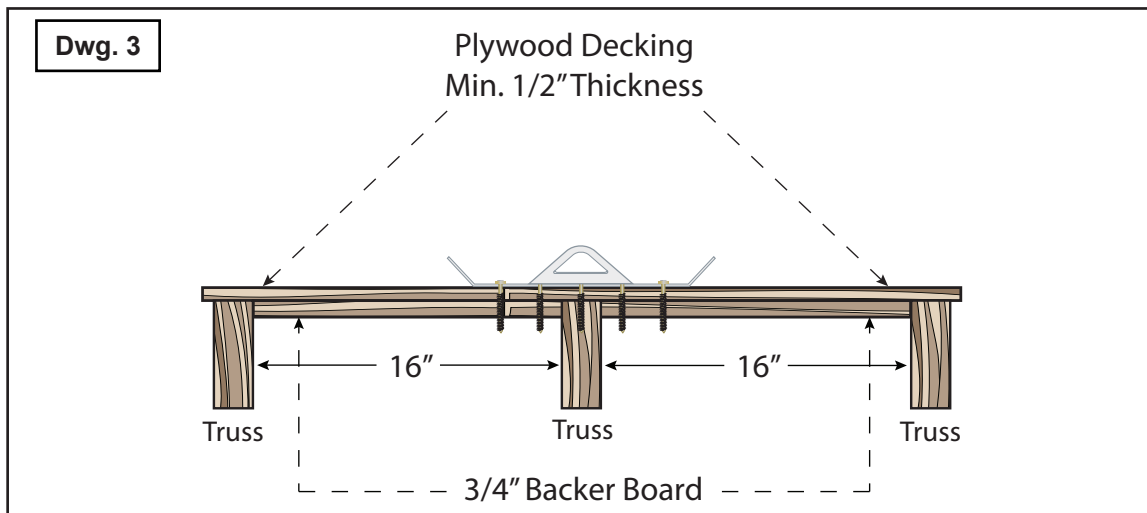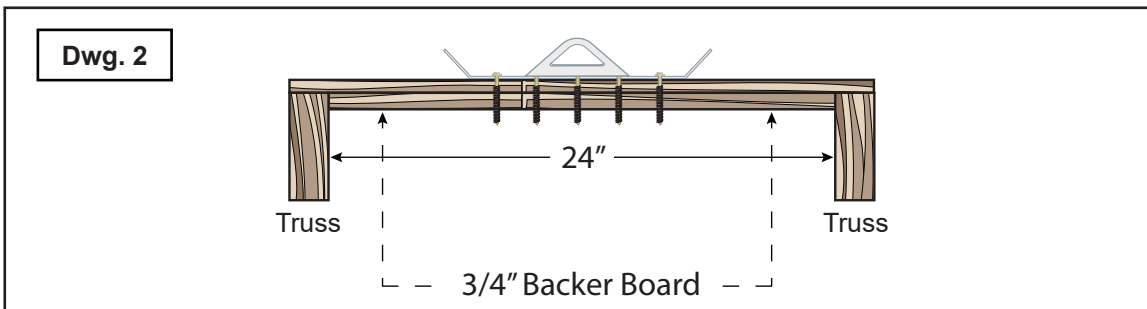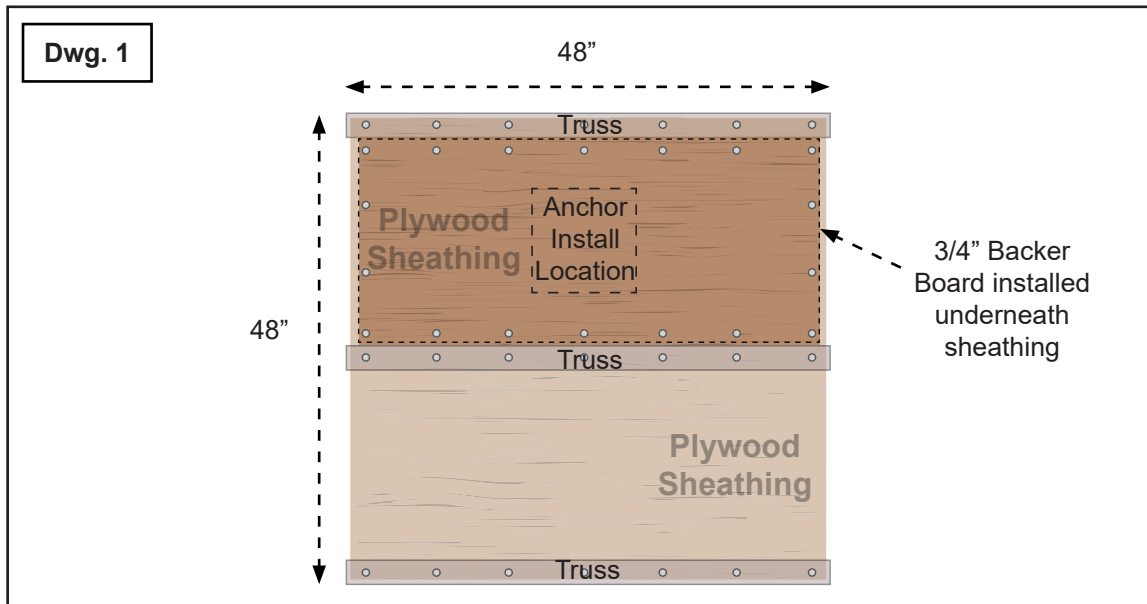

**FIGURE 8 - METAL INSTALLATION**


1. The 021-4076 can be installed onto metal decking that meets the minimum strength of 5,000 lbs. The steel decking must be a minimum of 22 gauge. Install by aligning the anchor fastener holes over the raised channels of the steel decking (See Dwg. 4).
2. The metal roof decking must be a minimum of 22 gauge and not in a severe state of deterioration. Excessive rust, heavy oxidation, holes, cracks, severe weathering, or excess age of the material are examples of conditions that may effect the ability of the structure to withstand fall arrest forces.
3. Attach the anchor to metal decking using (20) #14 x 2.5" self-tapping hex head screws (See Dwg. 4).

- For metal decking that is less than 22 gauge, the 021-4076 can still be utilized if a second layer of metal decking is attached. Install a 36" x 36" section of metal decking over the existing decking (See Dwg 5). Fasten the second layer of decking to the existing layer using #14 x 2.5" self-tapping hex head screws, 8" on center through all raised channels of the decking. The anchor can now be installed with fasteners penetrating both layers of metal decking.

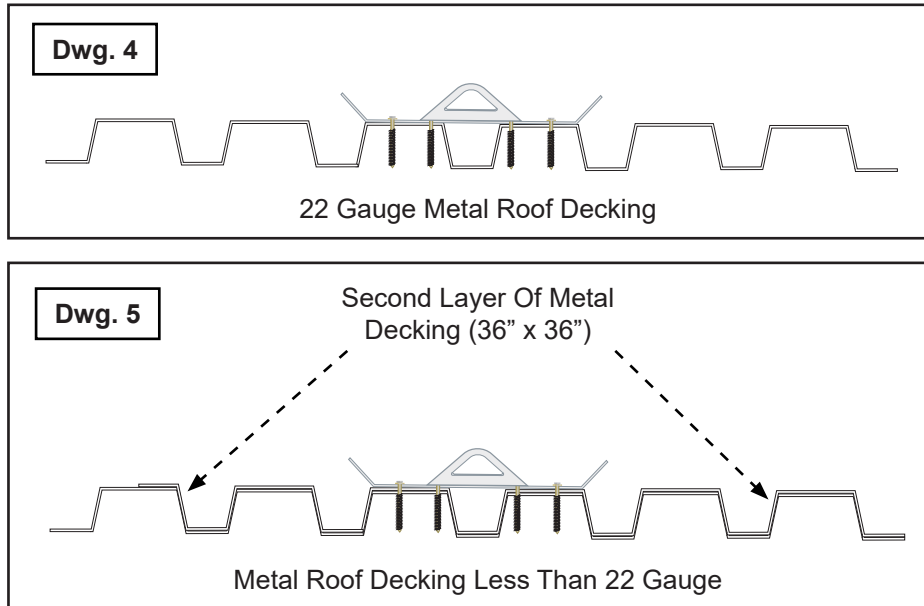

**FIGURE 9 - CONCRETE INSTALLATION**

- The 021-4076 can be installed onto concrete that is a minimum 2,000 psi, and a minimum of 4" thick.
- The concrete must be a minimum of 4" thick and at least 2,000 PSI. Severe cracking, excessive rust staining, holes, cracks, noticeable deterioration, or excess age of the material are examples of conditions that may effect the ability of the structure to withstand fall arrest forces.
- Attach the anchor to concrete using (4) 1/2" x 3-1/2" concrete wedge anchors (Safewaze recommends the 021-4057 Concrete Wedge Anchors). Wedge anchors must be rated at 6,000 lbs., and attached in alignment as indicated (See Dwg. 6). Wedge anchors must be installed with a minimum embedment of 3-1/2". Concrete must be fully cured prior to installation and use of the 021-4076.

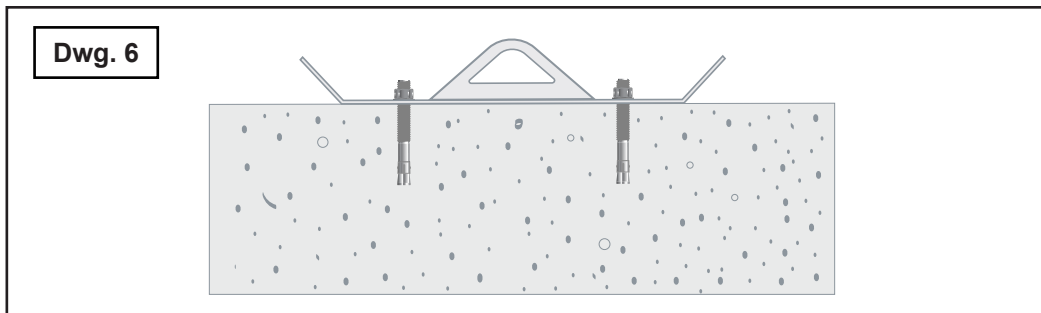

**WARNING:** The 021-4076 anchor is designed for a single user with a maximum weight of 420 lbs. including tools and equipment. NEVER connect more than one PFAS to the 021-4076. It is not engineered or intended for multiple users.



**WARNING**



- Users should consult with their doctor to verify ability to safely absorb the forces of a fall arrest event. Fitness level, age, and other health conditions can greatly affect an individuals ability to withstand fall arrest forces. Women who are pregnant, individuals considered minors must not use any Safewaze equipment.
- Never alter any part of an anchor or add/remove components. Safewaze shall not be held responsible for injury or death due to tampering.



- Anchors that are exposed to fall arrest forces **MUST** be **IMMEDIATELY** removed from service and destroyed.
- Failure to follow these instructions and warnings could result in serious injury or death in the event of a fall.
- A preplanned rescue procedure in the event of a fall is required. The rescue plan must be specific to the project. The rescue plan must allow for employees to rescue themselves, or to be promptly rescued by alternative means.
- Harnesses or connectors selected for use with any Safewaze anchor must be compatible in size and configuration. User must ensure compatibility of snap hooks, carabiners and other connectors. Any connection which could allow disengagement must be eliminated. Snap hooks and carabiners must be self locking and self closing and must never be hooked to each other.
- A Competent Person must conduct an analysis of the workplace and anticipate where workers will be conducting their duties, the route they will take to reach their work, and the existing and potential fall hazards they may be exposed to. The Competent Person must choose the fall protection equipment to be utilized.
- Do not misuse equipment.
- Equipment designated for fall protection must never be used to lift, hang, support or hoist tools or equipment unless specifically certified for such use.

## INSPECTION

- Safewaze Anchors shall be inspected prior to each use by the user, and at least annually by a Competent Person other than the user. Annual inspections shall be documented. Severity of conditions during use may necessitate increased frequency of documented inspections.
- Anchors that fail inspection **MUST** be removed from service.
- Prior to each use, inspect the anchor for deficiencies or damage, including, but not limited to, sharp edges, rough edges, deformations, corrosion, pits, burrs, chemical exposure, extreme heat exposure, kinked, bird nested, or otherwise damaged cable, and damaged, missing or illegible labels. If any deficiencies or defects are found, the anchor must **IMMEDIATELY** be removed from service.
- The anchor must be inspected at least annually by a Competent Person other than the user. Competent person inspections must be recorded in the inspection log included in this manual and on the inspection grid label on the anchor.

## WARRANTY

Safewaze warrants its products are free from defects in materials and construction under normal use and service. Liability is not accepted for abuse, modification, improper use, destructive activity and contaminated exposure.


## MAINTENANCE & STORAGE

Anchor can be cleaned with water and mild soap if necessary. User should remove all dirt, possible corrosives, and contaminants from the anchor prior to, and after each use. Never use any type of corrosive substance to clean the anchor.

Excess water should be blown out with compressed air. Hardware can be wiped off with a clean, dry cloth.

When not in use, store the anchor in a cool dry area where it will not be exposed to extreme light, extreme heat, excessive moisture, or possibly corrosive chemicals or materials.

## LABELS

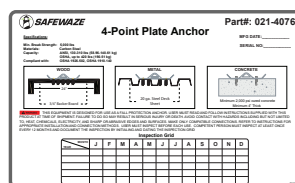



Manufacturer: \_\_\_\_\_

Company: \_\_\_\_\_

Model Number: \_\_\_\_\_

Name of Inspector: \_\_\_\_\_

Description: \_\_\_\_\_

Signature: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Date of Inspection: \_\_\_\_\_

Lot Number: \_\_\_\_\_

In-Service Date: \_\_\_\_\_

Date of Manufacture: \_\_\_\_\_

Anchor  Galvanized Steel  Stainless Steel  Aluminum

Material:  Zinc-Plated Steel Other: \_\_\_\_\_

### LABELS & MARKINGS

PASS FAIL NOTE

	PASS	FAIL	NOTE
Label (Intact and Legible)			
Appropriate ANSI / OSHA / CSA Markings			
Inspections are Current / Up-to-Date			
Date of First Use			

### HARDWARE (If Applicable)

PASS FAIL NOTE


	PASS	FAIL	NOTE
Signs of Deformity			
D-Ring / Connection Points			
Hook Gate / Rivets (if applicable)			
Corrosion / Pitting / Nicks			

### ANCHORAGE CONNECTOR


PASS FAIL NOTE

	PASS	FAIL	NOTE
Termination (Stitch, Splice, or Swage)			
Deterioration / Corrosion			
Cuts / Burns / Holes			
Integrity of Welds / Rivets			
Paint Contamination			
Stitching / Wire Condition			
Heat Corrosion / UV Damage			
Separation / Bird-Caging			


#### CABLE ANCHOR

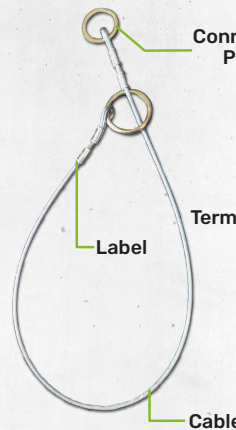


#### CROSS ARM STRAP

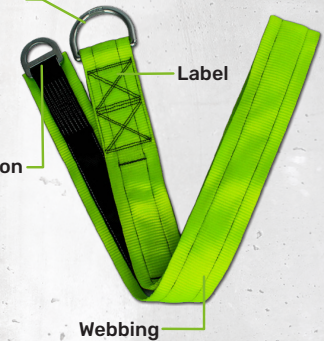

#### ROOF ANCHOR

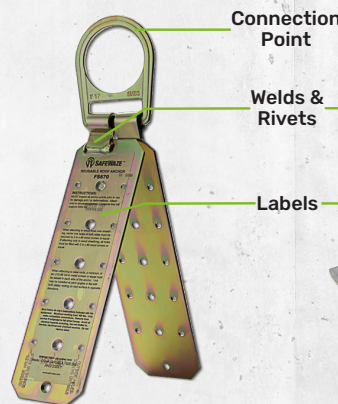

#### POST ANCHOR

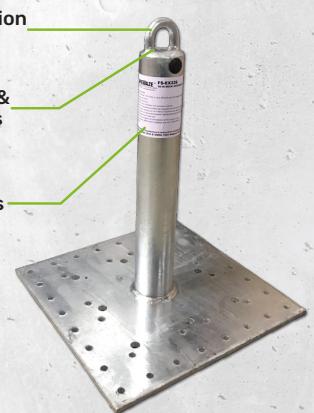

### NOTES

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

