

JETSON


Magma

All-Terrain Hoverboard.

A guide for your ride.

IMPORTANT: READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE.

MODELS: JMGMA-BLK | JMGMA-RED | JMGMA-OS-BLK | JMGMA-OS-RED

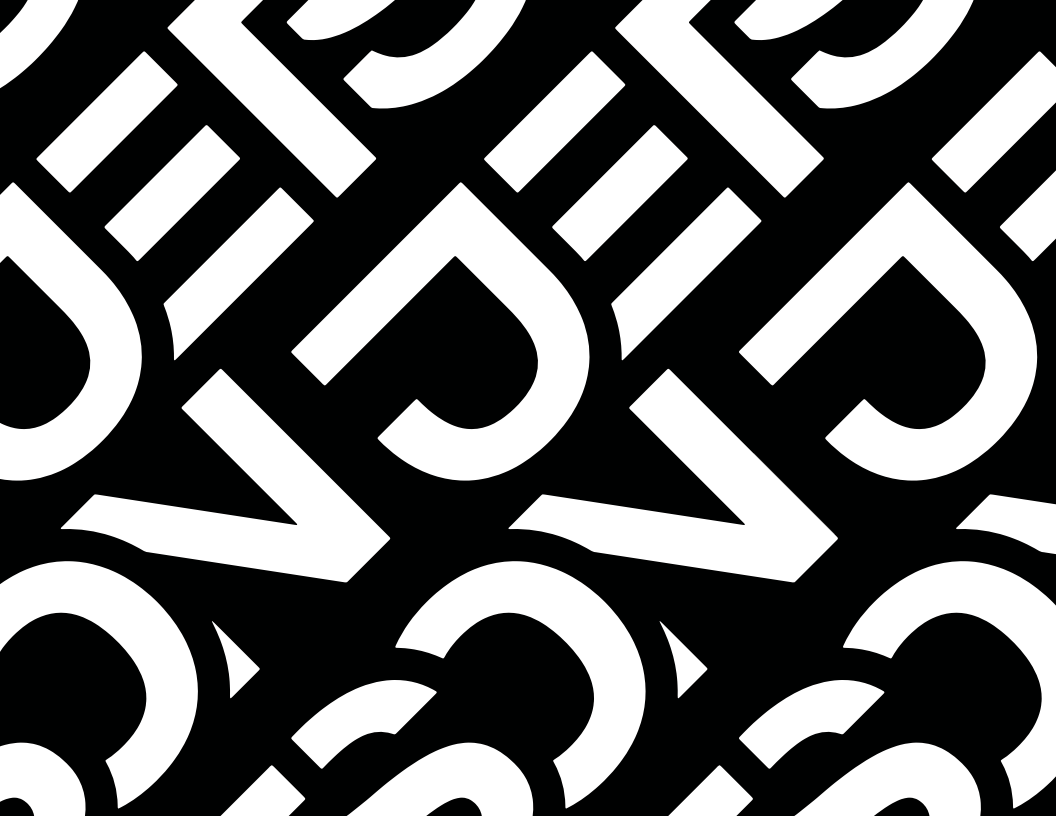

**Jetson's top two riding rules:
Be safe. Have fun!**

Table of Contents

Safety Warnings	4
Product Overview	7
Specs & Features	9
Charging the Battery	11
Understanding the Indicator Lights	12
Low Battery Alerts	13
Changing the Lighting	13
Powering On and Off	13
Recalibrating	14
Riding the Hoverboard	15
Helmet Safety	18
Care & Maintenance	19

Safety Warnings

- Before use, please read the user manual and safety warnings carefully, and make sure you understand and accept all the safety instructions. The user will be responsible for any loss or damage caused by improper use.
- Before each cycle of operation, the operator shall perform the preoperation checks specified by the manufacturer: That all guards and pads originally supplied by the manufacturer are in proper place and in serviceable condition; That the braking system is functioning properly; That any and all axle guards, chain guards, or other covers or guards supplied by the manufacturer are in place and in serviceable condition; That tires are in good condition, inflated properly, and have sufficient tread remaining; The area that the product is to be operated should be safe and suitable for safe operation.
- Components shall be maintained and repaired in accordance with the manufacturer's specifications and using only the manufacturer's authorized replacement parts with installation performed by dealers or other skilled persons.
- Warning against recharging non-rechargeable batteries.
- Don't allow hands, feet, hair, body parts, clothing, or similar articles to come in contact with moving parts, wheels, or drive train, while the motor is running.
- This product should not be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction (IEC 60335-1/A2:2006).
- Unsupervised children should not play with the product (IEC 60335-1/A2:2006).
- Adult supervision is required.
- The rider should not exceed 200 lb.
- Units shall not be operated to perform racing, stunt riding, or other maneuvers, which may cause loss of control, or may cause uncontrolled operator/passenger actions or reactions.
- Never use near motor vehicles.
- Avoid sharp bumps, drainage grates, and sudden surface changes. Scooter may suddenly stop.
- Avoid streets and surfaces with water, sand, gravel, dirt, leaves, and other debris. Wet weather impairs traction, braking, and visibility.
- Avoid riding around flammable gas, steam, liquid, or dust that could cause fire.
- Operators shall adhere to all of the manufacturer's recommendations and instructions, as well as comply with all laws and ordinances: Units without headlights shall be operated only with adequate daylight conditions of visibility, and; Owners shall be encouraged to highlight (for conspicuity) using lighting, reflectors, and for low-riding units, signal flags on flexible poles.
- Persons with the following conditions shall be cautioned not to operate: Those with heart conditions; Pregnant women; Persons with head, back, or neck ailments, or prior surgeries to those areas of the body; and persons with any mental or physical conditions that may make them susceptible to injury or impair their physical dexterity or mental capabilities to recognize, understand, and perform all of the safety instructions and to be able to assume the hazards inherent in unit use.
- Do not ride at night.
- Do not ride after drinking or taking prescription medication.
- Do not carry items when riding.
- Never operate the product barefooted.
- Always wear shoes and keep shoelaces tied.
- Make sure your feet are always placed securely on the deck.
- Operators always shall use appropriate protective clothing, including but not limited to a helmet, with appropriate certification, and any other equipment recommended by the manufacturer: Always wear protective equipment such as helmet, knee pads, and elbow pads.
- Always give way to pedestrians.
- Be alert to things in front and far away from you.
- Do not allow distractions when riding, such as answering the phone or engaging in any other activities.
- The product cannot be ridden by more than one person.
- When you ride the product along with other riders, always keep a safe distance to avoid a collision.
- When turning, be sure to maintain your balance.
- Riding with improperly adjusted brakes is dangerous and can result in serious injury or death.
- The brake may become hot while operating, do not touch the brake with your bare skin.

- Applying brakes too hard or too suddenly can lock up a wheel, which could cause you to lose control and fall. Sudden or excessive application of the brake may result in injury or death.
- If the brake loosens, please adjust with the hexagon wrench, or please contact the Jetson Care Team.
- Replace worn or broken parts immediately.
- Check whether all safety labels are in place and understood before riding.
- The owner shall allow the use and operation of the unit after a demonstration that such operators can understand and operate all components of the unit before use.
- Do not ride without proper training. Do not ride at high speeds, on uneven terrain, or on slopes. Do not perform stunts or turn abruptly.
- Recommended for indoor use.
- Prolonged exposure to UV rays, rain and the elements may damage the enclosure materials, store indoors when not in use.

California Proposition 65

WARNING

This product can expose you to chemicals including Cadmium, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov.


MODIFICATIONS

Do not attempt to disassemble, modify, repair, or replace the unit or any components of the unit without instruction from the Jetson Care Team. This will void any warranty, and can lead to malfunctions which may cause injury.

ADDITIONAL OPERATION PRECAUTIONS

Do not lift the product off the ground while it is on and the wheels are in motion. This can result in freely spinning wheels, which may cause injury to yourself or others nearby. Do not jump on or off the product, and do not jump while using it. Always keep your feet firmly planted on the foot rest while in operation. Always check the battery charge before using.

DISPOSAL OF USED BATTERY

 Battery may contain hazardous substances which could endanger the environment and human health. This symbol marked on the battery and/or packaging indicates that used battery shall not be treated as municipal waste. Batteries should be disposed of at an appropriate collection point for recycling. By ensuring the used batteries are disposed of correctly, you will help preventing potential negative consequences for the environment and human health. The recycling of materials will help to conserve natural resources. For more information about recycling of used batteries, please contact your local municipality waste disposal service.


ONE-YEAR GENERAL LIMITED WARRANTY

All new Jetson products, excluding parts and accessories, are warranted against defects in materials and workmanship for a period of one year from the date of original retail purchase when used in accordance with Jetson's user manuals (refer to ridejetson.com/support).


Under this warranty, you will be able to direct your claims to Jetson even in situations where you purchased the Jetson Product from one of our authorized retailers.

To read the full terms of our warranty, visit ridejetson.com/warranty.

Product Overview

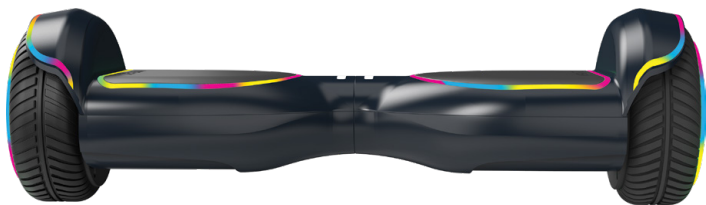

FRONT VIEW

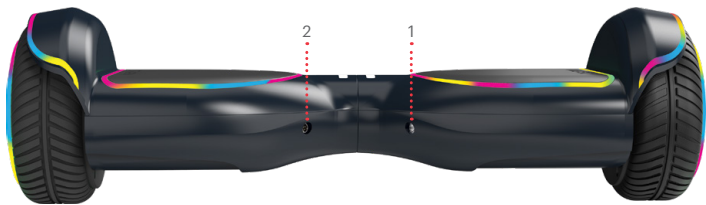

REAR VIEW



3

1. POWER BUTTON
2. CHARGING PORT
3. CHARGER

PLEASE NOTE: IMAGES MAY NOT REFLECT EXACT APPEARANCE OF ACTUAL PRODUCT.

Specs & Features

- MAX SPEED: 10 MPH
- MAX RANGE: 8 MILES
- BATTERY: 36V, 2.0AH LITHIUM-ION
- MOTOR: 400W, DUAL HUB
- MAX CLIMBING ANGLE: 15°
- PRODUCT WEIGHT: 16 LBS
- TIRES: 6.5" ALL-TERRAIN
- PRODUCT DIMENSIONS: 23.5" x 7.3" x 7"
- CHARGER: UL LISTED, 100-240V
- CHARGING TIME: UP TO 5 HOURS
- WEIGHT LIMIT: 200 LBS
- RECOMMENDED AGE: 12+

* ADULTS MUST ASSIST CHILDREN IN THE INITIAL ADJUSTMENT PROCEDURES OF THE PRODUCT.


1. Getting Started

1.1 Charging the Battery


- ONLY USE THE INCLUDED CHARGER.
- PLUG THE CHARGER INTO THE WALL BEFORE THE CHARGING PORT.
- DO NOT TURN ON THE MAGMA WHILE IT IS CHARGING.
- CHARGE THE BATTERY UNTIL IT IS FULLY CHARGED - UP TO 5 HOURS.
- REPLACE THE COVER OVER THE CHARGING PORT WHEN DONE.
- NEVER LEAVE THE MAGMA CHARGING OVERNIGHT.



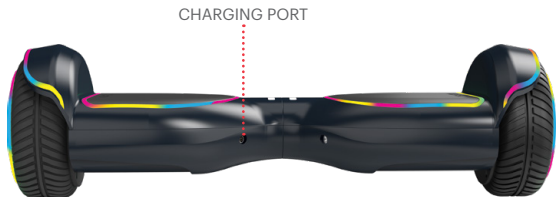


CHARGER INDICATOR LIGHT:

- - CHARGING
- - CHARGE COMPLETE

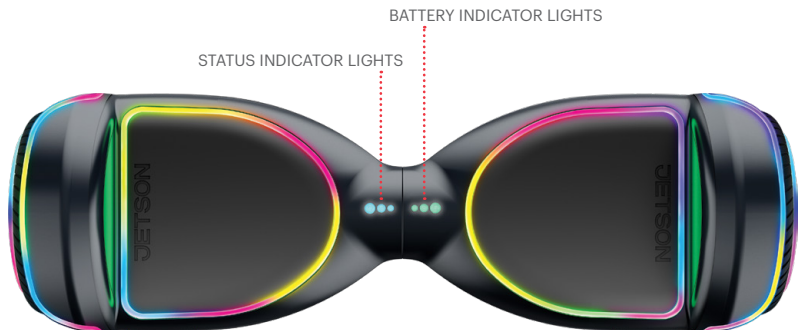

1.2 Understanding the Indicator Lights



BATTERY INDICATOR LIGHTS			
STATUS INDICATOR LIGHT			
STATUS	YOUR MAGMA IS ALL SET.	RECALIBRATE YOUR MAGMA. (SEE PAGE 14 OF THIS MANUAL.)	

MUST CHARGE HOVERBOARD TO 100%—UP TO 5 HOURS.

1.3 Low Battery Alerts

WHEN THE HOVERBOARD BATTERY CHARGE NEARS DEPLETION, THE HOVERBOARD WILL ALERT YOU AS FOLLOWS:


- **BELOW 9% CHARGE** - ONLY ONE BATTERY INDICATOR LIGHT WILL ILLUMINATE AND IT WILL BLINK CONTINUOUSLY WITH A LONG BEEPING SOUND IN 2 SECOND INTERVALS.
- **BELOW 4% CHARGE** - ONLY ONE BATTERY INDICATOR LIGHT WILL ILLUMINATE AND IT WILL BLINK CONTINUOUSLY WITH CONTINUOUS BEEPING SOUNDS.

1.4 Changing the Lighting

- THE DEFAULT LIGHTING MODE WILL DISPLAY WHEN THE MAGMA IS POWERED ON.
- SHORT-PRESS THE POWER BUTTON TO SWITCH BETWEEN DIFFERENT LIGHTING EFFECTS.


1.5 Powering On and Off

SHORT-PRESS THE POWER BUTTON TO THE THE MAGMA ON. LONG-PRESS THE POWER BUTTON TO TURN THE MAGMA OFF.

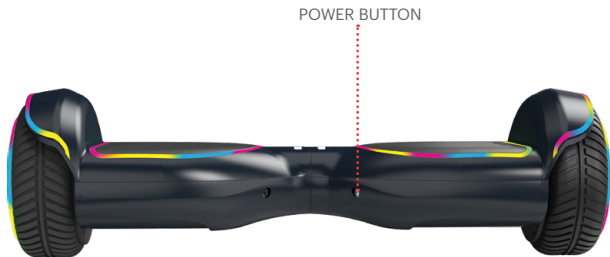

1.6 Recalibrating

YOUR HOVERBOARD'S INTERNAL BALANCE MECHANISMS SOMETIMES NEED TO BE RESET, OR "RECALIBRATED."

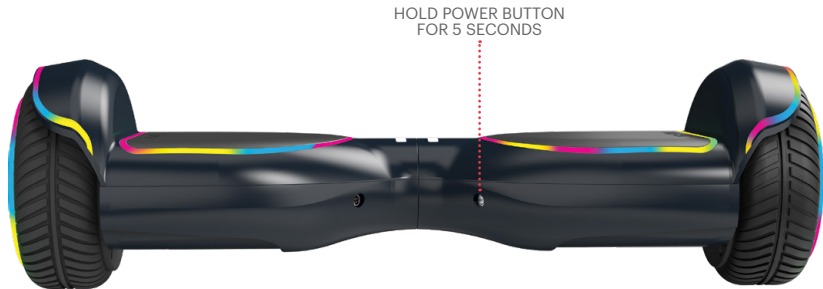

FOLLOW THESE 3 SIMPLE STEPS:

1. POWER OFF THE HOVERBOARD. PLACE IT ON A FLAT SURFACE AND, IF NECESSARY, TILT THE FOOTBEDS SO THEY ARE ALIGNED AND PARALLEL TO THE GROUND.
2. HOLD THE POWER BUTTON FOR 5 SECONDS. RELEASE THE BUTTON AFTER YOU HEAR A SHORT MUSICAL TUNE.
3. LONG-PRESS THE POWER BUTTON TO TURN THE MAGMA OFF.
4. QUICK-PRESS THE POWER BUTTON AGAIN TO TURN IT BACK ON. RECALIBRATION IS NOW COMPLETE.

*** KEEP THE HOVERBOARD LEVELED AND STILL THROUGHOUT THE RECALIBRATION PROCESS.**

*** DO NOT LEAN OR APPLY ANY WEIGHT ON THE HOVERBOARD WHILE RECALIBRATING.**


*** YOU MAY HAVE TO REPEAT THE PROCESS UP TO THREE TIMES TO FULLY RECALIBRATE YOUR HOVERBOARD.**

2. Making Moves


2.1 Riding the Hoverboard

TO MOVE FORWARD, APPLY EQUAL PRESSURE TO THE FRONT OF EACH FOOTBED.


TO MOVE BACKARDS, APPLY PRESSURE TO THE BACK OF EACH FOOTBED.

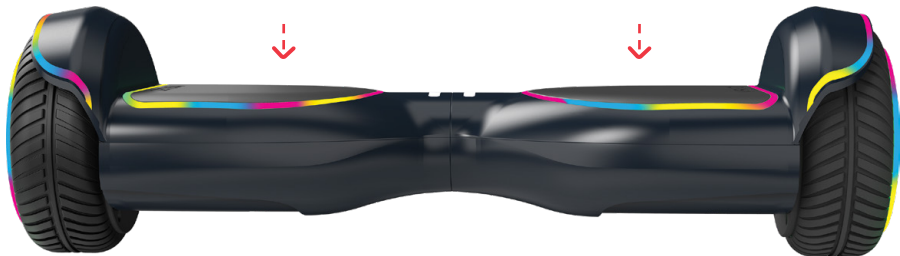

TO TURN LEFT, APPLY EXTRA PRESSURE TO THE FRONT OF THE LEFT FOOTBED WITH THE FRONT OF YOUR LEFT FOOT.

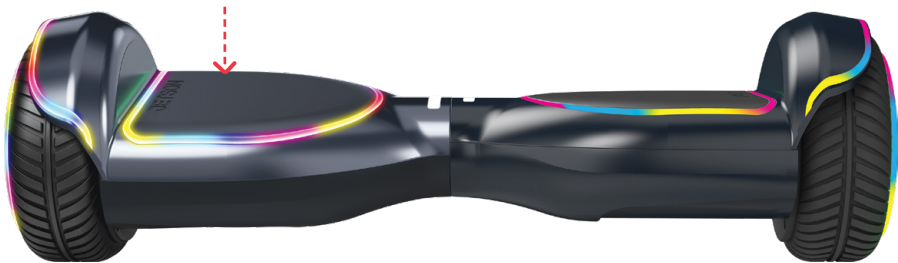

TO TURN RIGHT, APPLY EXTRA PRESSURE TO THE FRONT OF THE RIGHT FOOTBED WITH THE FRONT OF YOUR RIGHT FOOT.

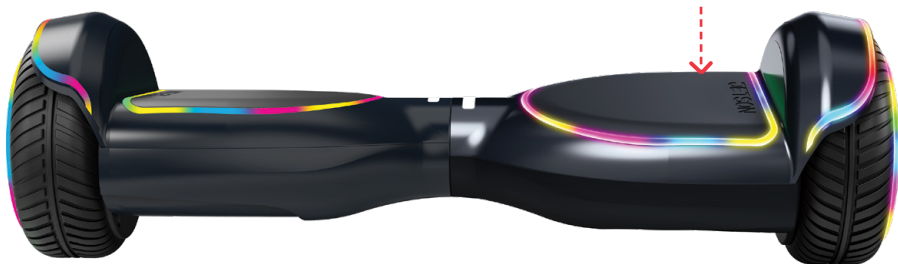

2.2 Helmet Safety



**PROPER POSITIONING:
THE FOREHEAD IS COVERED
BY THE HELMET.**



**IMPROPER POSITIONING:
THE FOREHEAD IS EXPOSED.
A FALL COULD RESULT IN SERIOUS INJURY.**

* WEAR A HELMET, APPROPRIATE CLOTHING, SHOES, AND SAFETY GEAR. AVOID CLOTHING THAT CAN GET CAUGHT INTO OR UNDER THE WHEELS. CLOSED-TOE, FLAT SHOES ARE RECOMMENDED. WEAR AN ASTM F1492 APPROVED HELMET AND PROTECTIVE GEAR TO PREVENT INJURY IN THE EVENT OF AN ACCIDENT.

Care & Maintenance

RIDING RANGE

THE MAXIMUM RANGE IS 8 MILES. HOWEVER, MANY FACTORS WILL AFFECT HOW FAR YOU CAN GO PER CHARGE.

- RIDING SURFACE: A SMOOTH, FLAT SURFACE WILL INCREASE RIDING RANGE.
- WEIGHT: MORE WEIGHT MEANS LESS DISTANCE.
- TEMPERATURE: RIDE, STORE, AND CHARGE THE MAGMA ABOVE 50°F.
- MAINTENANCE: TIMELY BATTERY CHARGING AFTER EVERY RIDE WILL INCREASE RIDING DISTANCE.
- RIDING STYLE: FREQUENT STARTING AND STOPPING WILL REDUCE RIDING RANGE.

CLEANING THE MAGMA

- TO CLEAN THE MAGMA, CAREFULLY WIPE WITH A DAMP CLOTH AND THEN DRY WITH A DRY CLOTH.
- DO NOT APPLY WATER DIRECTLY TO THE MAGMA, AS THE ELECTRICAL AND ELECTRONIC SYSTEMS MAY GET WET, WHICH COULD LEAD TO A MALFUNCTION OF THE MAGMA THAT PUTS RIDER SAFETY AT RISK.
- IF THE ELECTRICAL PARTS OR BATTERY GET WET, DO NOT POWER ON THE MAGMA. CONTACT THE JETSON CARE TEAM FOR ASSISTANCE.

BATTERY

- KEEP AWAY FROM FIRE AND EXCESSIVE HEAT.
- AVOID INTENSE PHYSICAL IMPACT AND/OR SEVERE VIBRATION.
- PROTECT FROM WATER OR MOISTURE.
- DO NOT DISASSEMBLE THE MAGMA OR ITS BATTERY.
- CONTACT THE JETSON CARE TEAM IF THERE ARE ANY ISSUES WITH THE BATTERY.

STORAGE

- FULLY CHARGE THE BATTERY BEFORE STORING.
- THE BATTERY SHOULD BE FULLY CHARGED ONCE A MONTH WHILE IN STORAGE.
- COVER THE MAGMA TO PROTECT IT FROM DUST.
- STORE THE MAGMA INDOORS AND IN A DRY PLACE.

Stay connected.

Be sure to follow **@ridejetson** on social media to learn about fantastic offers, giveaways, and all the latest Jetson news.



Loving your ride?

Then be sure to leave a review at ridejetson.com/reviews.
We can't wait to hear from you!

JETSON

#MakeMoves

Questions? Let us know.

ridejetson.com/support
ridejetson.com/chat

To exercise your product's
1-year limited warranty
or inquire about warranty
coverage, contact us directly.

US/CANADA: 1-888-976-9904
MEX: +001 888 976 9904
UK: +44 (0)33 0838 2551

Manufactured in Yueyang, China
Imported by Jetson Electric Bikes LLC.

P.O. Box 320149, 775 4th Ave #2, Brooklyn, NY 11232

www.ridejetson.com



Made in China

Date Code: 06/2022

© 2022, JETSON. ALL RIGHTS RESERVED. Manufactured by JETSON ELECTRIC BIKES LLC.
No portion of this document, including shape, copy, graphics, and design,
may be reproduced or transmitted in any form or by any means.