



**Adanac 8000 Stopwatch**  
**Model ST083021**  
**User Manual**

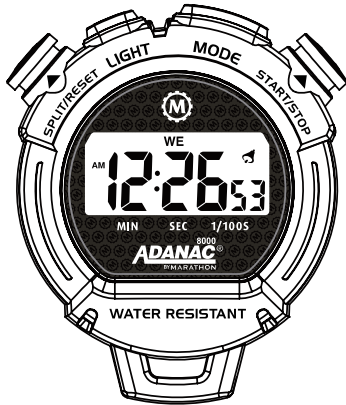

**MAIN FEATURES**

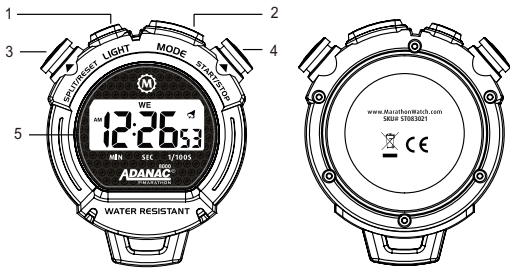

**1. LIGHT KEY**

- Press to turn on the display backlight for five seconds.

**2. MODE KEY**

- Press to switch between normal time mode, stopwatch mode, alarm setting mode and time setting mode.

**3. SPLIT/RESET KEY**

- In normal time mode, press to show the alarm time.
- In stopwatch mode, press to reset values or to show split time.
- In alarm setting mode, press to switch between hour and minute setting.
- In time setting mode, press to switch between time and date setting.

**4. START/STOP KEY**

- In normal time mode, press and hold to show the date.
- In stopwatch mode, press to start or stop the counting.
- In alarm or time setting mode, press to adjust the setting value.

**5. LIQUID CRYSTAL DISPLAY (LCD)**

**MODE SELECTION**

This stopwatch includes four modes that can be accessed by pressing the MODE key. The sequence is: NORMAL TIME MODE → STOPWATCH MODE → ALARM SETTING MODE → TIME SETTING MODE.

**NORMAL TIME MODE**

The current time will be displayed in normal time mode.

Press and hold the SPLIT/RESET key to show the alarm time.

Press and hold the START/STOP key to show the month and the day.

In normal time mode, press and hold the SPLIT/RESET, then press the START/STOP key to turn the alarm on or off.

**STOP WATCH MODE**

In stopwatch mode, time is measured to the 1/100th second. The different functions can be operated with the SPLIT/RESET and START/STOP keys.

**Accumulated elapsed time measurement:**

- Press the START/STOP key to start.
- Press the START/STOP key again to stop.
- Press the START/STOP key again to restart.
- Press the START/STOP key again to stop again.
- Press the SPLIT/RESET key to reset the time displayed.

**Split time measurement:**

- Press the START/STOP key to start.
- Press the SPLIT/RESET key to split.
- Press the SPLIT/RESET key again to split and release.
- Press the START/STOP key again to stop.
- Press the SPLIT/RESET key again to reset the time displayed.

**Measurement between two competitors:**

- Press the START/STOP key to start.
- Press the SPLIT/RESET key to split.
- Press the START/STOP key to stop.
- Press the SPLIT/RESET key to split and release.
- Press the SPLIT/RESET key again to reset the time displayed.
- Press the MODE key to return to the normal time mode.

**ALARM SETTING MODE**

An alarm time can be set on this stopwatch by following the steps below:

1. In normal time mode, press the MODE key twice to enter the alarm setting mode.
2. Press the SPLIT/RESET key to select hour or minute.
3. Press the START/STOP key to adjust the value.
4. When done, press the MODE key to return to the normal time mode.

**NOTE:**

When the clock reaches the alarm time, the alarm will sound.

- The alarm will stop automatically after one minute if no buttons are pressed and it will sound again at the same time the next day.
- Press the START/STOP key to snooze the alarm. It will sound again five minutes.
- Press the SPLIT/RESET key to stop the alarm. The alarm will be heard at the same time the next day.
- Simultaneously press both the START/STOP and SPLIT/RESET keys to turn off the alarm. You will see a bell icon appear or disappear indicating whether the alarm is on or off.

**TIME SETTING MODE**

Follow the steps below to set the time:

1. In normal time mode, press the MODE key three times to enter the time setting mode.
2. Press the SPLIT/RESET key to select the values to set. The setting sequence is: second → minute → hour → date → month → weekday.

## TIME SETTING MODE-CONTINUED

- Press the START/STOP key to adjust the value.
- When done, press the MODE key to return to the normal time mode.

### NOTE:

- When setting the seconds, if the value is more than or equal to 30 seconds, pressing the START/STOP key can increase it to one minute and if the value is less than 30 seconds, pressing the START/STOP key can reset the value to "00."
- The 12/24-hour format can be selected when setting the hour. The icon "H" on the LCD indicates the 24-hour format, while the icon "A" (AM) or "P" (PM) represents the 12-hour format.

## HOURLY CHIME

When the hourly chime function is activated, a chime will be heard on the hour. It can be activated or deactivated by following the steps below:

- In normal time mode, press and hold the SPLIT/RESET key.
- Press the MODE key to activate or deactivate the hourly chime. (If the day of the week icons are displayed, then the hourly chime function is activated, if they are not visible, then this function is deactivated).



Hourly chime off    Hourly chime on

- Release the SPLIT/RESET key to return to normal time mode.

## BATTERY REPLACEMENT

If nothing is visible on the LCD, or if it is dim, the battery needs to be replaced. Remove the screws at the back of the unit, remove the battery and insert a new CR2032 battery according to the polarity mark.

### NOTE:

Attention! Please dispose of used batteries and main unit in an ecologically safe manner.

## PRECAUTIONS

- Do not subject the unit to excessive force or shock.
- Avoid contact with corrosive materials.
- Do not dispose of this unit in a fire as it may explode.
- Do not recharge the batteries and do not dispose of them in a fire.

## SPECIFICATIONS

Operating temperature:	-5 °C to 50 °C (-40 °F to 140 °F)
Operating humidity:	10% to 90%
Water resistance level:	IPX4
Main power:	One CR2032 battery
Dimensions:	66.5 (W) x 77 (H) x 19 (T) mm



Marathon Watch Company Ltd.  
www.MarathonWatch.com

Designed in Canada / Conçu au Canada / Diseñado en Canadá  
Made in China / Fabriqué en Chine / Hecho en China

2 YEAR  
warranty  
Garantie  
de 2 ANS  
2 años de  
garantía