



AVIATOR

QUICK START GUIDE



1

Attach the handle bars by placing them into the appropriate sockets and twist them in the correct direction.



2 HANDLE BARS



COUNTER-CLOCKWISE



COUNTER-CLOCKWISE

2

Fully charge your Aviator for up to 5 hours before using it for the first time.



CHARGER



CHARGING PORT

3

To fold/unfold your scooter, press the blue button on the release lever, then pull the lever. Raise or lower the steering column and lock into place.


RELEASE LEVER



RAISE OR LOWER
STEERING COLUMN

4

Before turning on your Aviator, ride it like a normal kick scooter to get comfortable with the device before using it with the motor.

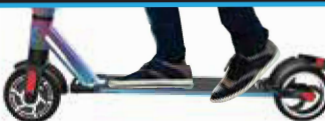

5

When comfortable riding the scooter, power it on. **You must first kick off the ground** and then press the throttle **for the motor to start**. To slow down the scooter, press the electric brake.




ELECTRIC BRAKE

POWER BUTTON (Press & Hold)


THROTTLE

You must first kick off the ground for the motor to start.

CONTROLS AND DISPLAY

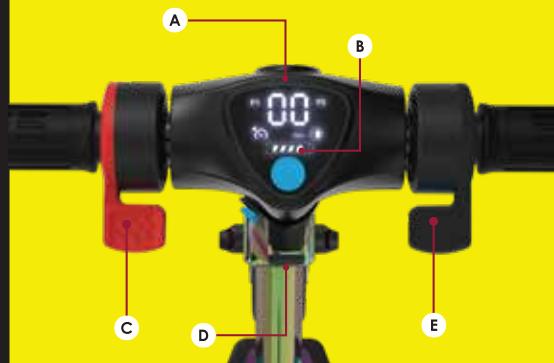

- A Display:** Shows current speed, speed level, and battery life.
- B Power / Function Button:** Press and hold 3 seconds to power ON. Once the scooter display is on, press twice to turn on headlights. Press once to switch high speed / low speed mode:
P1 - Low speed mode **P2** - High speed mode
- C Electric Brake:** Reduces your speed by slowing down the motor.
- D Folding Clip:** Clips to the foot brake above the back wheel.
- E Throttle:** Accelerates the scooter.

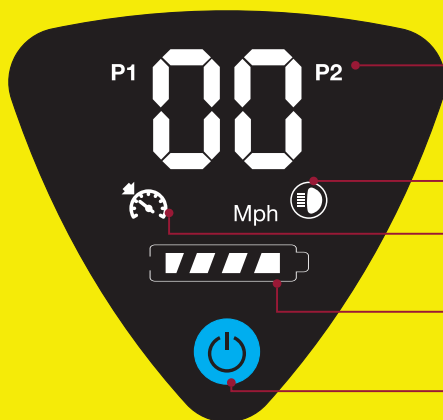

LED DISPLAY

- Speed Indicator (mph)**
1 **P1** - Low speed mode **P2** - High speed mode
 Under low speed mode, the max speed is 9mph, under high speed mode, the max speed is 15mph.
- 2 Headlight Icon**
- 3 Cruise Control Icon**
- 4 Battery Life Indicator**
- 5 Power/Function Button**