

ALLPAX[®]
GASKET CUTTER SYSTEMS


Guide to Perfect Gaskets

POWER PUNCH KIT PUNCH BOLT HOLES 1/4" – 1" DIAMETER



www.allpaxcorp.com

PUNCHING OUT BOLT HOLES

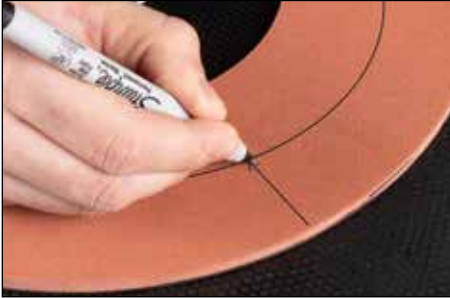

1. Mark center point of bolt holes on gasket material.



2. Use Power Punch centering pin to pierce material at each center point.



3. Select desired cutting head.



4. Slide sleeve back on punch handle. Insert cutting head. Release sleeve to lock in place. Power Punch is ready to use.



5. Slide centering pin through punch handle. Locate target center point.



















6. Hold Power Punch firmly against gasket material. Remove centering pin.



7. Strike Power Punch with dead blow hammer.

POWER PUNCHES



PARTS			AX1860	AX1861
PRODUCT	PART #	DESCRIPTION		
	AX1870	1/4" Power Punch Cutting Head	1	1
	AX1871	5/16" Power Punch Cutting Head	1	1
	AX1872	3/8" Power Punch Cutting Head	0	1
	AX1873	7/16" Power Punch Cutting Head	0	1
	AX1874	1/2" Power Punch Cutting Head	1	1
	AX1875	9/16" Power Punch Cutting Head	1	1
	AX1876	5/8" Power Punch Cutting Head	1	1
	AX1877	11/16" Power Punch Cutting Head	0	1
	AX1878	3/4" Power Punch Cutting Head	0	1
	AX1879	13/16" Power Punch Cutting Head	1	1
	AX1880	7/8" Power Punch Cutting Head	1	1
	AX1881	15/16" Power Punch Cutting Head	0	1
	AX1882	1" Power Punch Cutting Head	0	1
	AX1884	Power Punch Centering Pin	1	1
	AX1885	Power Punch Handle	1	1
	AX1883	3 1/2" x 7 1/2" Power Punch Pad	1	1
	AX1886	7 1/2" x 7 1/2" Power Punch Pad	0	0

ALLPAX[®]
GASKET CUTTER SYSTEMS

47 VETERANS DRIVE
CHICOPEE, MA 01022
U.S.A.

TEL: (413) 594-4400
FAX: (413) 594-4884

www.allpaxcorp.com

A DIVISION OF
GUARDAIR[®]
CORPORATION

