


# Mat Install Guide

TRAMPOLINEPRO



 We recommend using 2 people to simplify the installation, as new trampoline mats can be tight.

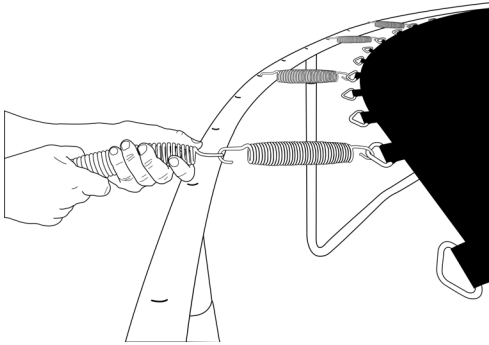


**Tip:** An extra spring can function as a spring installation tool if needed.

## Step 1:

- Center your replacement mat on the ground inside your metal trampoline frame.
- Using the provided spring tool, attach a spring's crook end to any ring on your new trampoline mat.
- Connect the first spring's hook end to any spring hole in the outer frame.

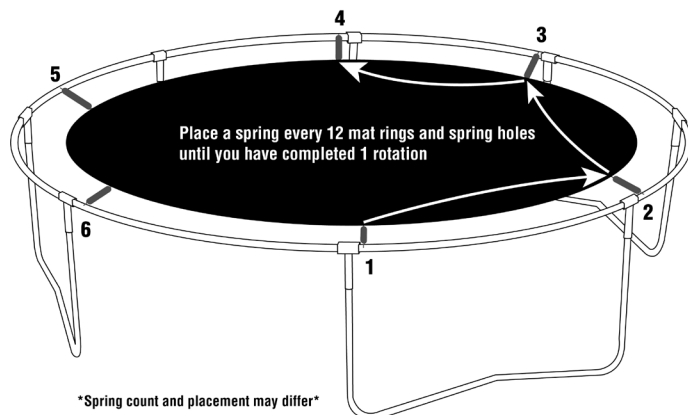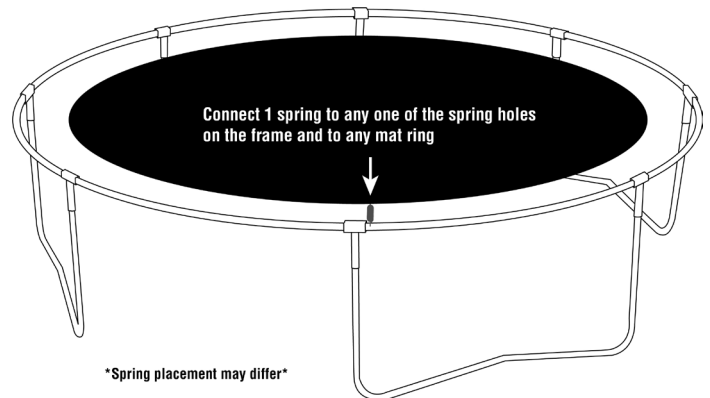


## Step 2:

- Using the spring tool, attach a new spring every 12 frame slots and mat rings until 6 to 10 springs have been placed. (this number depends on the size of trampoline purchased)
  - \*\*\*Alternatively, you can count 10 or 11 frame slots and mat rings depending on the total number of slots in your trampoline frame.
-  \*\*\*The final two springs will be harder to install due to the force of the other springs.

## Step 3:

- Once you have between 6 and 10 springs attached evenly around the entire frame, you can now attach the rest. We suggest springs at every 3rd or 4th frame slot to distribute the tension evenly on your new trampoline mat. If you have a partner helping you, have them connect the springs directly opposite from you (across the frame).
- Use the remaining springs to connect all open frame slots to their matching mat rings.




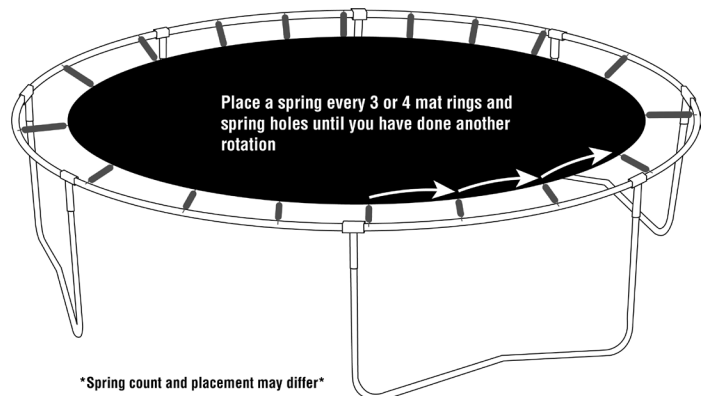


 New mats may be stiffer than the original mat and will relax over time.

If you bought the wrong size mat please refer to the flow chart on the other side of this page for frame size, spring size, mat size, and mat ring count combinations. You can also contact us at 1-800-473-5867 or [CustomerService@TrampolinePro.com](mailto:CustomerService@TrampolinePro.com).

## Frame Size

(Measure outside frame to outside frame)

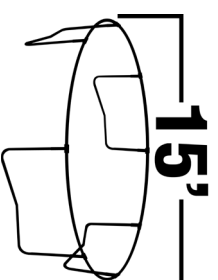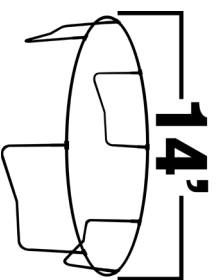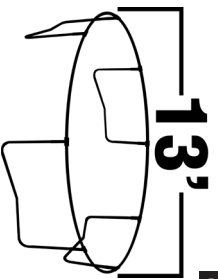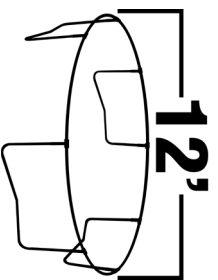

## Spring Size

(Measure hook end to hook end)  
(Ruler Below)



Measure

## Mat Size

(Measure from sewn edge to sewn edge)



Measure

## Ring Count


(Total number of rings on jumping mat)

Frame Size	Spring Size	Mat Size	Ring Count	Count: SKU
12'	5.5"	6.5"	127" or 10'7"	72: 521207
			125" or 10'5"	72: 521211
			124" or 10'4"	80: 521208
13'	5.5"	7.0"	139" or 11'7"	72: 521206
			137" or 11'5"	72: 521304
			137" or 11'5"	84: 521303
14'	7.0" or 6.5"	5.5"	150" or 12'6"	72: 521410
			147" or 12'3"	72: 521405
			144" or 12'	84: 521411
15'	6.5"	8.5"	161" or 13'5"	84: 521406
			159" or 13'3"	96: 521401
			156" or 13'	96: 521501
15'	7.0"	6.5"	161" or 13'5"	96: 521501
			159" or 13'3"	90: 521507
			156" or 13'	96: 521504

- Measure from outside frame edge to outside frame edge in two directions (North to South, East to West)
- In order to measure spring correctly disconnect it from trampoline mat and frame
- Measure spring without any spacing between the coils
- Common spring sizes are 5.5", 6.5", 7", 7.5", 8.5"
- This chart shows most popular sizes but not all sizes



How to measure your Trampoline video  
[https://youtu.be/EKgcTfu\\_PE](https://youtu.be/EKgcTfu_PE)



\*Ruler is to scale

# TRAMPOLINEPRO