

# EZ CLEAN FLUSH MOUNT BULKHEAD

## INVENTORY



MAIN BODY



COLLAR

NUT



DIP TUBE



O-RING

## INSTALLING YOUR BULKHEAD



NUT



COLLAR



O-RING




MAIN BODY

KETTLE WALL


1. Remove the nut and collar from the main body. Do not remove the o-ring.
2. Feed the main body of the bulkhead, from the inside, through the drilled port in the kettle. If the kettle has two holes, install the bulkhead on the bottom hole. The o-ring should be pressed against the inside of the kettle.
3. Slide the collar, from the outside, onto the main body. Position the small notch in the collar so it is facing straight up. The notch indicates the curved side of the collar to ensure it sits flush against the curvature of the kettle.
4. Thread the nut onto the bulkhead and tighten against the collar. Hand-tighten. If desired, use a wrench to tighten.
5. Apply a few wraps of teflon tape to the external threads of the bulkhead before installing a 1/2" NPT ball valve.

## INSTALLING ACCESSORIES

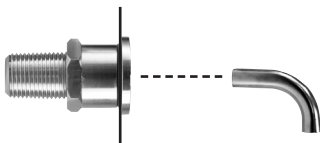

### DIP TUBE

Insert the long end of the dip tube into the bulkhead on the inside of the kettle. Push it in until both o-rings are engaged.

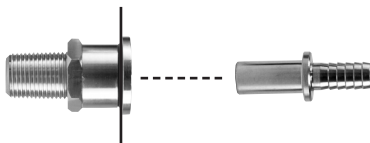

### FALSE BOTTOM BARB

Insert the smooth end of the barb into the bulkhead on the inside of the kettle. Push it in until both o-rings are engaged.

**TIP:** Wetting the o-rings prior to installation will help prevent damage to the o-rings.