



Change the way you think about time



# INSTRUCTION MANUAL



..... Button A


..... Button B

# 1. How to read the time

- This watch uses an LCD “always on” display to show the time.
- You can illuminate the display for a short time with the EL backlight by pressing button A. This function works best at night time.
- The time is displayed digitally in negative space with hours in the upper half of the screen and minutes in the lower half of the screen.
- Press button B to reveal the time in on a plain background.
  - \* Press button B three times to revert back to maze mode.

## Example

Maze mode

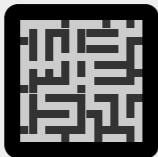

12:57

Number mode




12:57

## 2. How to read the date

- In maze mode, press button B twice to display the date
- The date icons indicate that you are in date mode.
- You can illuminate the display for a short time with the EL backlight by pressing button A. This function works best at night time.
- The date is displayed digitally in negative space with the month in the upper half of the screen and date in the lower half of the screen.
- The display will change back to maze mode after a short time.

Example

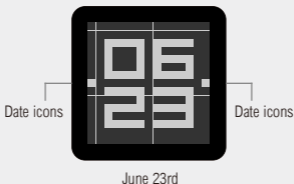


### 3. How to check the alarm time

- In maze mode, press button B three times to display the alarm time.
- The alarm mode icons (a dot in each corner of the display) indicate that you are in alarm mode.


Example

AM indicator

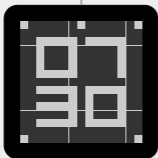

07:30 AM alarm on

10:25 PM alarm on

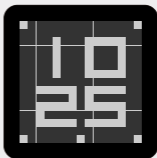

PM indicator



Alarm off

alarm mode icons:  
a dot in each corner  
of the display.

## 4. How to set the time

- In maze mode, press and hold button A for 3 seconds to enter setting mode.  
\*Note after 5 seconds of inactivity setting mode will deactivate

### I. Setting the hour

- The hour digits will flash when you are in hour setting mode.
- The AM or PM indicator in setting mode indicates that you are setting the time in AM or PM.
- The AM indicator is a dot at the top in the center of the display. The PM indicator is a dot at the bottom in the center of the display.
- Press button B to increase the hour as required.
- Press button A to confirm and move to the minutes.

### II. Setting the minutes

- The minute digits will flash when you are in minute setting mode.
- Press button B to increase the minutes as required.
- Press button A to confirm and move to the animation.

### III. Setting the animation

- The display will either flash or animate when you are in animation setting mode.
- Press button B to turn the animation on or off. When the animation is off, the display will flash, when the animation is on, the display will animate.
- Press button A to confirm and exit setting mode.

## 5. How to set the date

- In date mode, press and hold button A for 3 seconds to enter setting mode.  
\*Note after 5 seconds of inactivity setting mode will deactivate

### I. Setting the year

- The year digits will flash when you are in year setting mode.
- The date icons indicate that you are in date setting mode.
- Press button B to increase the year as required.
- Press button A to confirm and move to the month.

### II. Setting the month

- The month digits will flash when you are in month setting mode.
- Press button B to increase the month as required.
- Press button A to confirm and move to the date.

### III. Setting the date


- The date digits will flash when you are in date setting mode.
- Press button B to increase the date as required.
- Press button A to confirm and exit setting mode.

## 6. How to set the alarm

- In alarm mode, press and hold button A for 3 seconds to enter alarm setting mode.  
\*Note after 10 seconds of inactivity setting mode will deactivate
- The alarm mode icons indicate that you are in alarm setting mode.
- Press button B to turn the alarm ON or OFF.
- Press button A to confirm and move to the alarm hour.
- Press button B to increase the alarm hour as required.
- The AM or PM icon in alarm setting mode indicates that you are setting the alarm time in AM or PM.
- The AM indicator is a dot at the top in the center of the display. The PM indicator is a dot at the bottom in the center of the display.
- Press button A to confirm and move to the alarm minutes.
- Press button B to increase the alarm minutes as required.
- Press button A to confirm and exit alarm setting mode.

Example

AM indicator

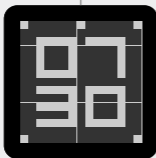

7:30 AM alarm on

alarm mode icons:  
a dot in each corner  
of the display.



## 7. User information

### I. Battery

- This watch uses a CR2025 replaceable watch battery.
- Battery lifetime will vary depending on use, but is estimated to last for at least one year.
- To maximize battery life you should limit use of the EL backlight.

### II. Warranty

- This watch is covered by a 1 year warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

### III. Caution

- This watch is water resistant to 3ATM. Please do not use the watch in the shower, for swimming or for other water related activities.

## SPECIFICATIONS

Case Material	Stainless Steel
Strap Material	Stainless Steel
Case Dimensions	36 mm x 36 mm x 10.5 mm
Finish	Brushed
Maximum Fit Wrist Size	210mm (approx.)
Weight	130g
Display	LCD with EL backlight
Battery	CR2025
Water Resistance	3ATM

