



Change the way you think about time

# ON AIR

## INSTRUCTION MANUAL




*touch sensitive screen*

# 1. How to read the time

- This watch uses an LCD "always on" display to show the time.
- Minutes are displayed by numbers on the face of the watch. Hours are indicated by position of the numbers which point to the current hour like the hand on a clock.

Example 1:

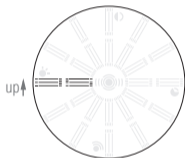

09:35

Example 2:



12:28

Example 3:



01:47

Example 4:




06:13

## 2. Operating the basic functions

### I. Unlocking the display

- You can operate the LED backlight and stop the alarm from sounding when the display is locked but for all other functions you need to unlock the display.
- To unlock the display slide your finger from button D to button B. (The 4 indicators will appear.)
- The display will automatically lock after 15 seconds.

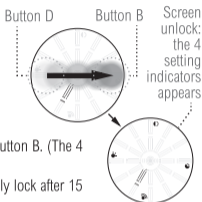

### II. Turning on the backlight

- To turn the backlight on, touch button D.
- The backlight will illuminate the display for 7 seconds.

Note: In setting mode you cannot operate the LED backlight.

touch Button D



### III. Turning the display sound on or off

- Unlock the screen.
- To turn the display sound on or off, hold button D for 3 seconds.


Note: Turning the display sound off doesn't affect the alarm sound.

hold Button D




### 3. How to read the date 🕒


- Unlock the screen (see “operating the basic functions”).
- Touch button A 🕒 once (the date indicator will appear on the screen).

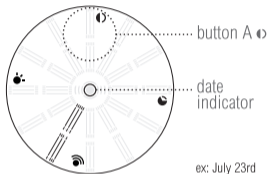

- The month is displayed in the same position as the hour and the date is displayed by numbers in the same position as the minutes.

## 4. How to check the alarm time

- Unlock the screen (see “operating the basic functions”).
- Touch button C  to display the alarm time (the alarm indicator will appear on the screen).

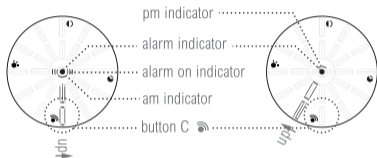

ex 1: alarm time 6:30 am alarm on

ex 2: alarm time 7:20 pm alarm off


- The alarm time is displayed in the same way as the time.
- The alarm on indicator will be displayed when the alarm is on and will not be displayed when the alarm is off.
- The AM or PM indicator shows that the alarm time is set to AM or PM.
- When the alarm sounds, you can turn it off by touching any button.

## 5. How to set the time and animation


- To make time setting easier, it is recommended that you turn the display sound on. (see “operating the basic functions”).
- Unlock the screen (see “operating the basic functions”).
- Hold button B for 3 seconds to enter setting mode.  
Note: after 7 seconds of inactivity, setting mode will deactivate.

### I. Setting the hour

- The time setting indicator will start flashing.
- Move your finger around the screen in a clock wise direction to increase the hour or in a counter clock wise direction to decrease the hour as required.

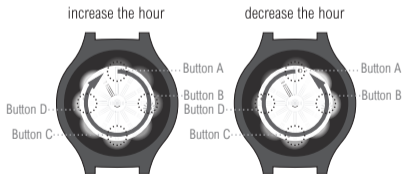


- If the display sound is on, there will be a beep each time you increase or decrease the time by an hour.

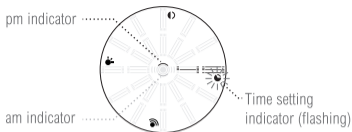

- The AM or PM indicator will be displayed to indicate that you are setting the time in AM or PM.
- Hold button B for 3 seconds to confirm and move to minutes setting.

## II. Setting the minutes

- The minute digits will flash when you are in minute setting mode.

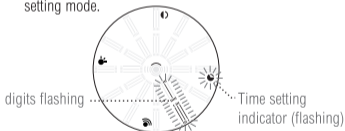


- Move your finger around the screen in a clock wise direction to increase the minutes or in a counter clock wise direction to decrease the minutes as required.
- Hold button B for 3 seconds to confirm and move to the animation setting mode.



### III. Turning the animation on/off

- In setting mode, when the animation feature is on, the display will animate. When the animation is off, the display will flash.
- Slide your finger from A to D to turn the animation on or off.

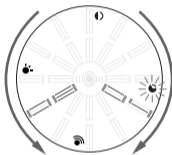

Display Animating: Animation On



Display Flashing: Animation Off

- Hold button B for 3 seconds to confirm and exit setting mode.

## 6. How to set the date

- To make date setting easier, it is recommended that you turn the display sound on. (see “operating the basic functions”).
- Unlock the screen (see “operating the basic functions”).
- Hold button A for 3 seconds to enter date setting mode.  
Note: after 7 seconds of inactivity setting mode will deactivate
- The date indicator will be lit and the date setting indicator will blink when you are in date setting mode.

### I. Setting the month


- The month is displayed in the same position as the hour.
- Move your finger around the screen in a clock wise direction to increase the month or in a counter clock wise direction to decrease the month as required.
- Hold button A for 3 seconds to confirm and move to the date.

### II. Setting the date

- The date is displayed in the same position as minutes.
- Move your finger around the screen in a clock wise direction to increase the date or in a counter clock wise direction to decrease the date as required.
- Hold button A for 3 seconds to confirm and exit setting mode.

date setting .....  
indicator (flashing)

date indicator .....




ex: setting the minutes  
January 25th

## 7. How to set the alarm

- To make alarm setting easier, it is recommended that you turn the display sound on. (see “operating the basic functions”).
- Unlock the screen (see “operating the basic functions”).
- Touch button C to display the alarm time (the alarm indicator will appear on the screen).
- Hold button C for 3 seconds to enter alarm setting mode.  
Note: after 7 seconds of inactivity setting mode will deactivate.
- The alarm indicator will be lit and the alarm setting indicator will blink when you are in alarm setting mode.

### I. Turning the alarm on/off

- Touch button B to turn the alarm on or off.
- When the alarm is on, the “alarm on” indicator will be displayed.

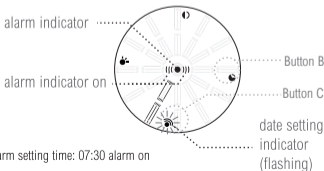

ex: alarm setting time: 07:30 alarm on

## II. Setting the alarm hour

- The alarm time is displayed in the same way as the time.
- Move your finger around the screen in a clock wise direction to increase the alarm hour or in a counter clock wise direction to decrease the alarm hour as required.
- The AM or PM indicator shows that the alarm time is set to AM or PM.
- Hold button B for 3 seconds to confirm and move to alarm minutes setting mode.

## III. Setting the alarm minutes

- The minutes will blink when you are in alarm minute setting mode.
- Move your finger around the screen in a clock wise direction to increase the alarm minutes or in a counter clock wise direction to decrease the alarm minutes as required.
- Hold button C for 3 seconds to confirm and leave the alarm setting mode.

## 8. User information

### I. Battery

- This watch uses a CR2025 replaceable watch battery.
- Battery lifetime will vary depending on use, but is estimated to last for at least one year.
- To maximize battery life you should limit use of the LED backlight.

### II. Warranty

- This watch is covered by a 1 year warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

### III. Caution

- This watch is water resistant to 3ATM. Please do not use the watch in the shower, for swimming or for other water related activities.

## SPECIFICATIONS

Case Materials	Stainless Steel
Strap Materials	Stainless Steel
Case Dimensions	44 x 51 x 12.6 mm
Finish	brushed
Maximum Fit Wrist Size	210mm (approx.)
Weight	120g
Display	LCD with LED backlight
Battery	CR2025
Water Resistance	3ATM

