



Change the way you think about time

polygon


INSTRUCTION MANUAL



1. How to read the time

- This watch uses an “always on” LCD display to show the time.
- You can illuminate the display for a short time with the EL backlight by pressing button A. This function works best at night time.
- Hours are shown by the outer ring of small triangles. The center point of the two mirrored triangles points to the hour mark, in the same position as a regular clock.
- Minutes in groups of 10 are displayed by the large triangles and point to 10, 20, 30, 40, 50, 00, in the same position as a regular clock.
- Single minutes 1-9 are shown by a digit in the center.

Example

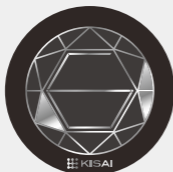

3:46




10:24

2. How to read the date

- Press button B to display the date.
- The date icon indicates that you are in date mode.
- You can illuminate the display for a short time with the EL backlight by pressing button A. This function works best at night time.
- The date is displayed in the same way as the time, with the month in the hour position, the first digit of the date in the 10 minute group position and the second digit of the date in the single minute position.
- The display will change back to time mode after a short time.

Example

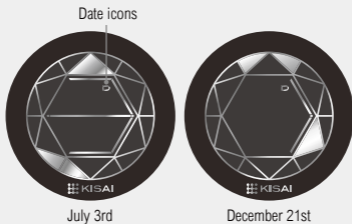

3. How to check the alarm time

- Press button B twice to display the alarm time.
- The 'alarm on' icon indicates that you are in alarm mode.
- The PM icon will be lit when the alarm time is set to PM.

Example

8:00 AM alarm on



alarm mode icon

alarm on icon

10:30 PM alarm on



4. How to set the time

- When the time is displayed, press and hold button A for 3 seconds to enter setting mode.

*Note after 10 seconds of inactivity setting mode will deactivate

I. Setting the hour

- The hour segments will flash when you are in hour setting mode.
- The PM icon in setting mode indicates that you are setting the time in PM.
- The PM icon only appears in time setting mode.
- Press button B to increase the hour as required.
- Press button A to confirm and move to the minutes.

II. Setting the minutes

- The minute segments and central minute digit will flash when you are in minute setting mode.
- Press button B to increase the minutes as required.
- Press button A to confirm and move to the animation.

III. Setting the animation

- The display will either flash or animate when you are in animation setting mode.
- When the animation is off, the display will flash, when the animation is on, the display will animate.
- Press button B to turn the animation on or off.
- The animation will appear on 00, 15, 30 and 45 minutes past each hour.
- Press button A to confirm and exit setting mode.

5. How to set the date

- When the date is displayed, press and hold button A for 3 seconds to enter setting mode.

*Note after 10 seconds of inactivity setting mode will deactivate

I. Setting the year

- The year segments and digit will flash when you are in year setting mode.
- The Y icons indicates that you are setting the year.
- You set only the second two digits of the year, e.g. 2012 = 12.
- Press button B to increase the year as required.
- Press button A to confirm and move to the month.

Example



10+2 = 12 = 2012

II. Setting the month

- The month segments will flash when you are in month setting mode.
- The month is shown in the same position as the hour.
- Press button B to increase the month as required.
- Press button A to confirm and move to the date.

III. Setting the date


- The date segments and digit will flash when you are in date setting mode.
- Press button B to increase the date as required.
- The first digit of the date is displayed in the 10 minute group position and the second digit of the date is displayed in the single minute position.
- Press button A to confirm and exit setting mode.

6. How to set the alarm

- When the alarm time is displayed, press and hold button A for 3 seconds to enter alarm setting mode.
*Note after 10 seconds of inactivity setting mode will deactivate
- The alarm mode icon indicates that you are in alarm setting mode.
- Press button B to turn the alarm ON or OFF.
- The 'alarm on' icon indicates that the alarm is on.
- Press button A to confirm and move to the alarm hour.
- The PM icon only appears in alarm time setting mode.
- Press button B to increase the alarm hour as required.
- Press button A to confirm and move to the alarm minutes.
- Press button B to increase the alarm minutes as required.
- Press button A to confirm and exit alarm setting mode.

Example

3:45 AM alarm on

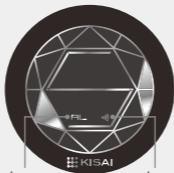

alarm mode icon

alarm on icon

7. User information

I. Battery

- This watch uses a CR2025 replaceable watch battery.
- Battery lifetime will vary depending on use, but is estimated to last for at least one year.
- To maximize battery life you should limit use of the EL backlight.

II. Warranty

- This watch is covered by a 1 year warranty. This warranty does not cover water damage, accidental damage, neglect or unauthorized repair.

III. Caution

- This watch is water resistant to 3ATM. Please do not use the watch in the shower, for swimming or for other water related activities.

SPECIFICATIONS

Case Material	Stainless Steel
Strap Material	Stainless Steel
Case Dimensions	41 mm x 48 mm x 10.5 mm
Finish	Brushed
Maximum Fit Wrist Size	210mm (approx.)
Weight	130g
Display	LCD with EL backlight
Battery	CR2025
Water Resistance	3ATM

