

Massage Chair BP-7909B Function Introduction


- With intelligent soft 3D massage in back, it feels similar to hands massaging the neck, shoulders, and the back. Soothing ancient massage methods, imitating traditional massage methods, allows you to enjoy the feeling of a professional Massage therapist, in addition, it has a very unique shoulder pressing function.
- 2. With acupuncture point tracking detecting function. It can supply exact massage according to different people with different body height and shape.
- 3. Soothing heat therapy in seat and legs helps promote blood circulation and ease discomfort.
- 4. Developed with human body engineering research and development with a super long L. Shaped curved track to provide an intimate massage from head to feet, quickly alleviate pressure of the spine with Zero Gravity.
- 5. One button to quickly achieve zero gravity lie down function. It can effectively alleviate the pressure on spine and joints, allowing you to experience the benefits of zero gravity.
- The forward sliding function of 10cm from the wall. The backrest and seat frame move together, allowing you to take full advantage of space around you. Designed with you in mind to give you the ultimate massage.
- 7. With advanced wireless Bluetooth® technology, play your own soothing music from your phone or tablet, as well as answering or ending a phone call while being massaged. Enjoy the nice foot scrapping function, with rollers in the feet. It is also combined with air
- bags to stimulate the soles of your feet.
 The built in leg rest is fully equipped with multiple airbags. These perform a pulsing air
- 9. pressure to promote blood circulation and restore vitality to tired legs.
- 10. Soothing air pressure to gently squeeze your arms to help promote blood circulation of the blood capillaries.
- 11. Multiple airbags in back and seat, which are great to sooth the back, buttocks and thighs. Enjoy the alternative air squeezing massage on different parts to help alleviate tiredness.
- 12. The leg rest can be adjusted to any angle. It can extend and retract within the range of 15 cm to meet, making it suitable for many to use.
- 13. Easy to use colorful LCD controller. Shows you all the the body parts to massage. Choose the massaging methods and your status.

Thank you for choosing the BackPlus Massage Chair BP-7909B.
 Please read this manual carefully before using the massage chair.

3. Please keep this manual in a safe place for further reference. 4. Please pay attention to SAFETY INSTRUCTIONS.

+

Note: We reserve the right for design modification. It is subject to change without notice. The pictures in this manual are only for reference. Please refer to the actual product.




Preparation	Safety instructions External structure parts	е с, С, С,
1	Installation	E)
uਤsage o:ੁ∽.⊸ਯn	The adjustment before massage	C9 Q;
Maintenance	Clean and maintenance	22
Others	Trouble Shooting guide e Technical data- e	

Please keep this manual in a safe place for future reference.

SafetYr instructions

Safety instructions

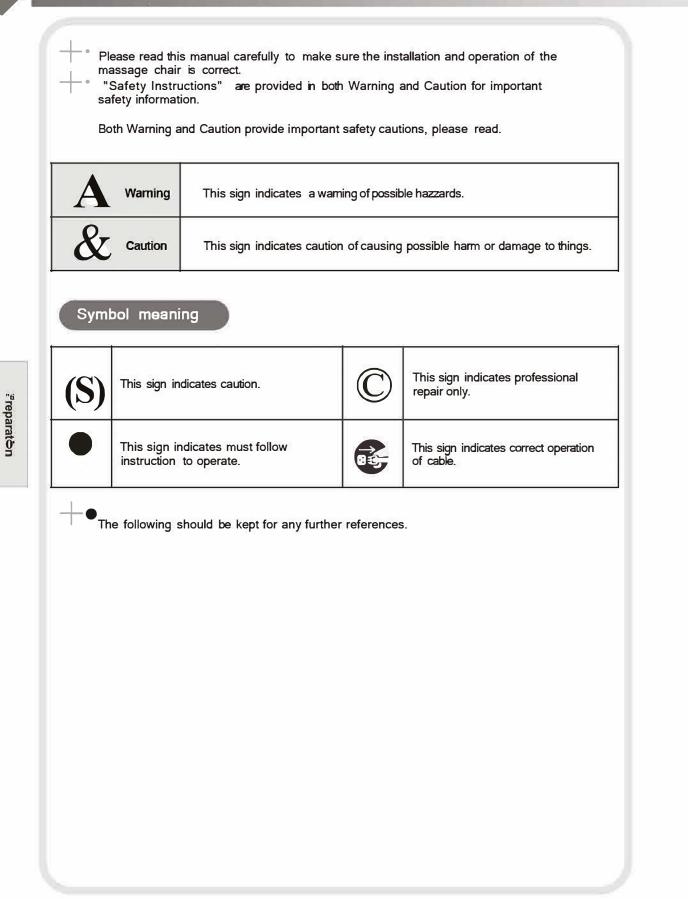

	Warning	1
	 Osteoporosis patient. People with heart disease including embedded pacemaker or other medical electronic device inside the body. For pregnant women or people not healthy, please consult doctor before use. Patients with a high fever should not use this machine. Perceptual disabilities patients should not use this machine. People over 80 years old should not use this machine. Kids and impaired people should not use the chair. Please don't sleep in the chair. Don't use the chair when your body is wet. 	People who are not suiteble to use the chair
•	 Make sure there are no kids or pets or other objects around (under, behind or in front of) the chair at the moment of backrest, leg-rest up/down or leg-rest retraction/extension from reclining position. During operation, if you have discomfort please stop the operation and consult your physician. Do not attempt massage on the head. Do not massage belly or knees, be careful when massage neck. Children or pets are not allowed to play on the chair especially during massage. Do not Stand or sit on the back or armrest as this will damage the chair. Those who are not sensitive to the heat or allergic to the heat must be careful when using it, or do not use. 	lnjury
	 Insert the plug of the chair into correct and suitable power socket. Make sure the plug is completely inserted into the socket to reduce short circuit or fire risk. Unplug the power when not in use, stop all massage functions and turn off on/off key before unplugging. 	Fire and electric shock
	 It is prohibited to use the massage chiar while any items covered the massage chair ventilation holes. Massage cushions of the chair should not be folded for storage. The machine should not be run for extended periods of time. 	Accident
\oslash	 Power cord, plug, socket can't be used in broken or loose contact condition. Don't use other electric power except rated voltage to prevent fire, electric shock or any breakdown. Any broken, knotted or twisted power cord or pressed under heavy cargo will damage the chair. 	Fire and electric shock
C	 If the chair is dysfunctional, or is broken, splashed with water or falls into water, please have it repaired by professional repairman or send the chair to assigned service agent. Self-modification, disassembly or maintenance is forbidden. If power cord or plug is damaged, please don't replace it yourself, please contact us or appointed dealer for replacement. To avoid electric shock or injury, please don't open or disassemble any part of the chair, there is not any attached part of the chair for maintenance by consumers. Check leather or cloth material on the back and other areas for damage. If damaged even if it is small, please stop using the chair, unplug the power and have it repaired 	Disassembly and maintenance

2

Safety instructions

Safety instructions 4

	Caution		
	Please operate the chair on a flat or level surface	To avoid sudden falling.	
	Position the chair 10cm from the wall sufficient space to recline up	To make sure the back lying.	
	 The maximum suggested operating time is 20mins. 5mins for each position beginning with the slight- step massage. Along continuous massage in the same position may cause uncomfortable feeling. 	Too long time massage is bad for your body.	
	 Before sitting on the chair to avoid injury please inspect everything to confirm that the massage heads are in the correct position. 		
	 Remote control should be put in the pocket or on the bracket. Do not put the remote control anywhere casually in case of remote control damage. 	To avoid accidental injury.	
	Please make sure that the power switch is at the "OFF" position before inserting the plug into the socket.		
	• Turn offall controls before removing plug from outlet.	To avoid the accident when turn or the power.	
	• Make sure the plug is completely in the socket.	To reduce short circuits and any fire hazard.	
	Checking whether any damage on wire, make sure no water or rubbish on wire.		
	■ Install plug in is correct. The plug must be inserted into socket with ground prong, the ground prong souldn't be bend or cut off.	To avoid electric shock in any leakage or breakdown.	
(S)	 Don't press with hands or step on the massage heads with feet. Don't put hands between the working massage heads. Don't put hands or feet in the gap of mechanical parts. Don't drop or place anything into the slot of massage chair. Don't stand or sit or put anything on the backrest, armrest or leg-rest. Don't stand on the chair during operation. Don't put lout the plug or turn off the power during operation. Don't put your hands or head between leg-rest or beneath. Don't put your hands or head between leg-rest or beneath. Don't use the massage chair while wearing hair ornaments. Don't put hand things in pocket when take buttocks and huckle massage. Don't use on bare skin or were thin clothes, thin clothes may achieve better massage effect, but it also may cause irritation to the skin or burns. 	To avoid accidents or injury	
Ŋ	 Keep the chair away from heat, wet, sharp things and corrosive, inflammable, explosive environment. To use electric blanket or other heating products on the chair is not reccomended Don't put in areas with dust or corrosive gas environments, Don't put the chair in a small space places or use in the poor air circulation places. Keep the chair away from stove or other heating products. Don't put the chair directly in sun or other high temperature places. 	To avoid fade, discoloring of upholstery, hardening or deteriorated on PU.	
	• Don't use the chair outdoor.		

	& Caution	
	 Don't use or store the chair in the wet environment like near the swimming pool, or bathroom. Keep the chair and remote control dry all the time. 	To avoid leakage or electric shock.
	 Make sure to install the ground prong in correct way(Incorrect install may cause electric shock. If you don't know how to install, please find a professional electrician) Don't use plug adapter (If the enclosed plug doesn't match with socket, please don't change the plug by yourself and find a professional electrician to install a matched socket.) 	To avoid electric shock.
	 Unplug the power before cleaning the chair. Unplug the power after using the chair. 	
	 Unplug the power when any damage. 	To avoid electric shock or fire harzard.
æ	Hold the plug to unplug the power so not try to pull the wire to unplug the power.	
	Please turn off the power switch and unplug the power after massage.	To avoid accidents
	• Unplug the power immediately when electricity goes off.	To avoid damage or accidents when power on again.

Grounding insbuction

%iThe chair is equipped with a cord having an grounding conductor. The plug must be plugged into an appropriate socket that is properly installed and matched with the plug.

Replace fuse

+

%iWhen the fuse is burned out, please turn off the switch and unplug the power. Opening the lid covered the fuse which is located in the switch box. Using a same size fuse to replace the old one, then cover the lid. Or you can find an electrician to replace the fuse.



Ground prong is not allowed to be in these places


Gas pipe: probably cause explosion or fire. Phone wire and lightning rod: probably cause electric shock and fire when thundering. Water pipe: ground prong is useless when in water

Internal structure parts

External structure parts

5




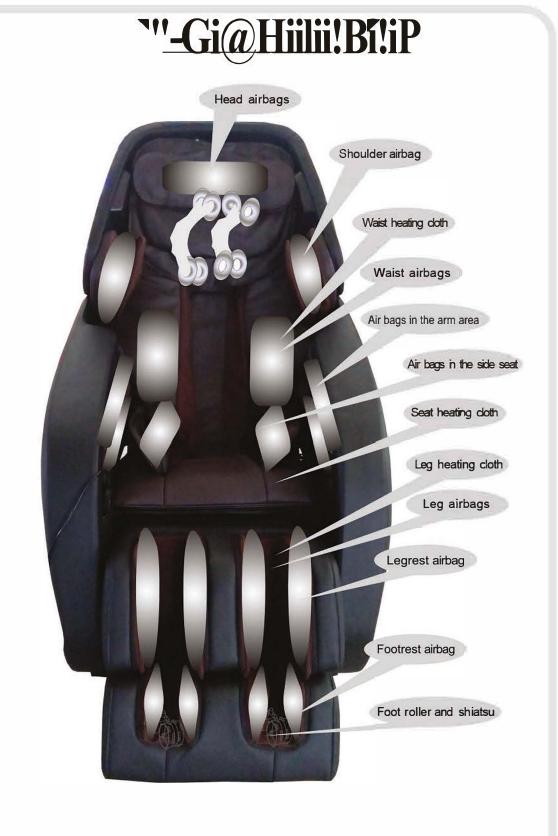

6

Mechanical components aiagrtaITTil

Preparation

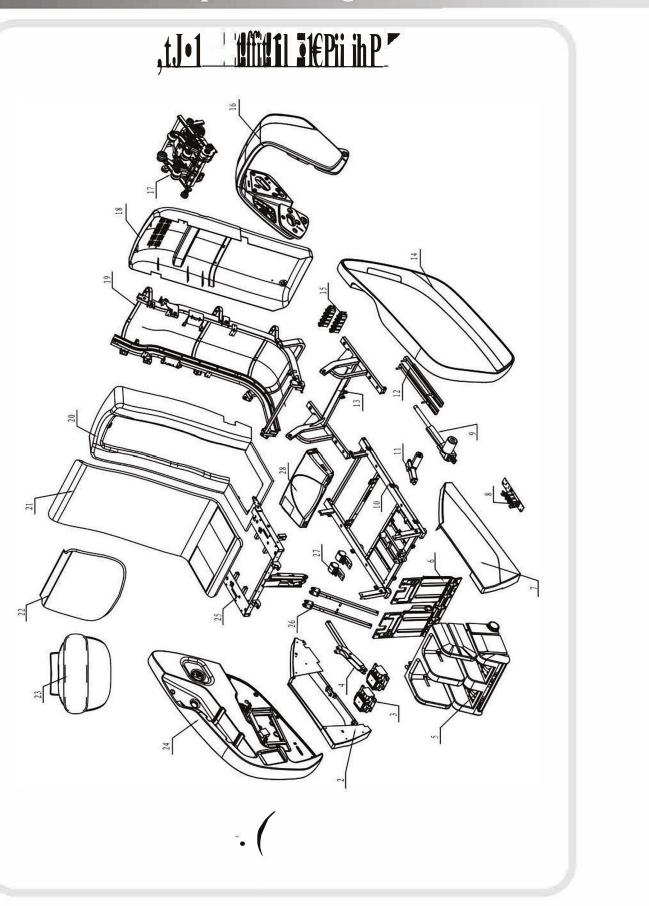

NO.	Name	Q' ty	NO.	Name	Qʻt
1	Remote control	1	22	Shoulder pads	1
2	Right side fender	1	23	Pillow	1
3	Air pump assembly	1	24	Right armrest assembly	1
4	connecting rod	1	25	Seat frame surface assembly	1
5	Legrest & footrest	1	26	Seat support bar	1
6	Front fender	1	27	Castor	2
7	Left side fender	1	28	Power case assembly	2
8	Electric magnetic valve	1			1
9	Backrest electric actuator	1			
10	Bottom seat frame assembly	1			
11	Footrest electric actuator	1			
12	Sliding rail	2			
13	Top seat frame assembly	1			
14	Left amrest assembly	1			
15	Electric magnetic valve	2			
16	Shoulder massage device	1			
17	Massage machine	1			
18	Back cover assembly	1			
19	Back frame assemly	1			
20	Backrest plastic front cover and seat plate assembly	1			
21	Back and seat cushion	1			

Installatio@

9

Installation


Installation 10



Instal lation

Installation 12

Installation

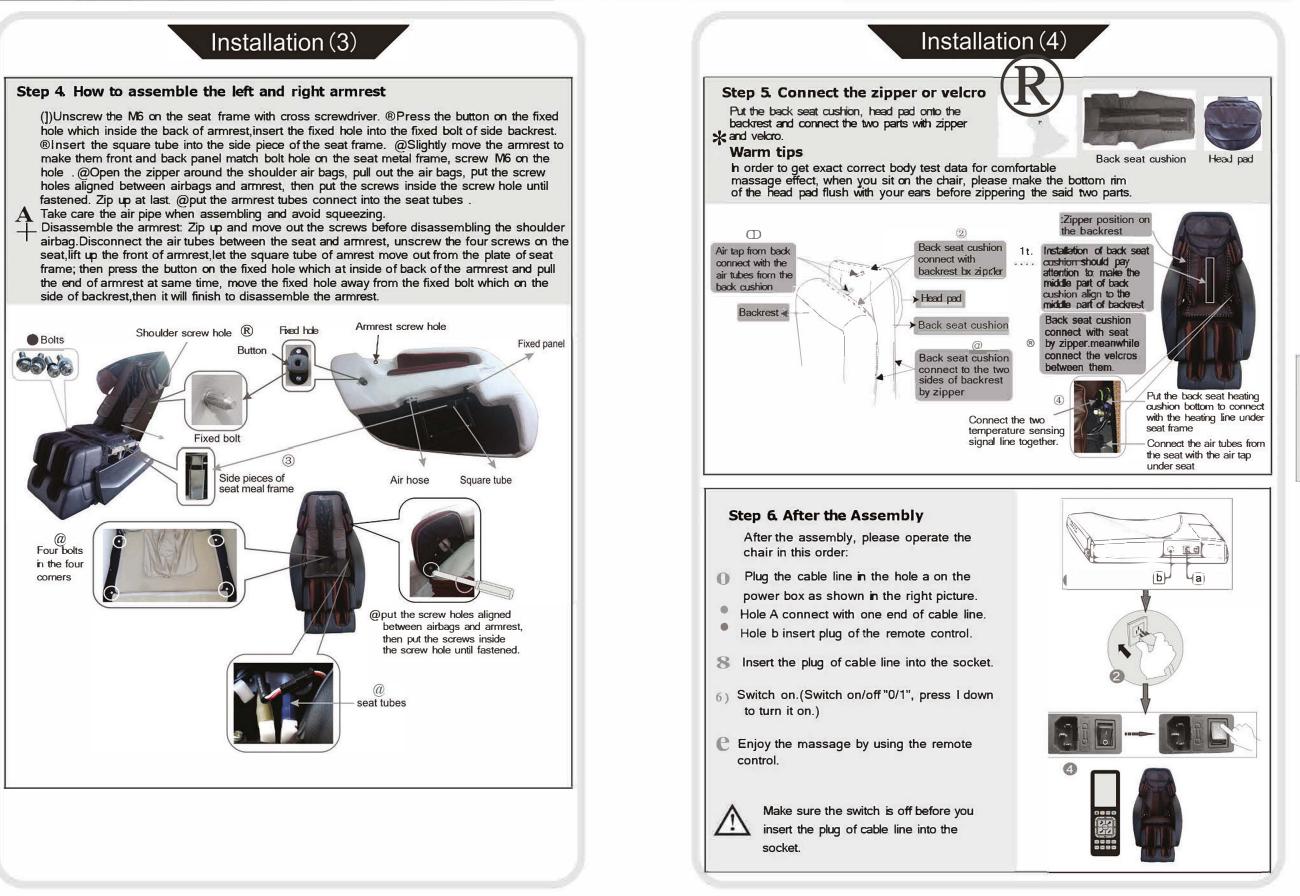

The adjustment before massage



Caution Don't use the chair in wet places like near swimming pool, bath room to avoid leakage or electric shock.

Istery deteriorated.

Environment

Don't use under sunlight or near stove or other heating place to avoid upho-

Please use chair in flat place to avoid

around.

chair falling or noise or other unexpected trouble.

1VP

S)

Check places in front Check the areas when back and leg extending, make sure no people, pets or other things



- Check power cable, plug (1) Clean the dust on plug on time. (using dry cloth).
- (2) No damage, re-do, bend, stretch, tie or press with heavy thing(especially can't be pressed by the chair) on power cable.





At least 10cm from wall.

- · At least 30cm in front of the leg:
- Check surroundings When the backrest or legrest reclines or extends, please pay attention to:

(1) Check any person or things in every direction. (2) Check the space size.





How to move massage chair

A Caution

Don't move chair when it's working in case of accidents or damage


Howtomove

- Bind the cables and put them in the seat to avoid damage when moving.
- * If you plump the chair, it may damage the inner parts of the chair .
- Don't use the castor if the floor is wooden or other easy damaged material. It will need 2 or more persons to lift the chair.
- * Make sure the power is off and the plug doesn't touch the floor(It's better to let the chair in standing status to avoid theback crashing the floor)

Normally

0 Lift up the legrest to make the gravity fall on the castor. Then push chair to destination and set it down.





Adjustment before massage

- **Before adjustment** Please make sure the massage head in the
- seat part before sitting on the chair. To avoid injure caused by

wrong position of the

massage head.



- Acupuncture point tracking detecting
 - When doing acupuncture point position detecting, if massage head can't detect the effective shoulder height position, the actual shoulder height position was default to the middle part of back.
 - Right position: Your back cling to the chair back, the head clings to the pillow. The remote control
 - gives "beep" sound after acupuncture point tracking detecting finished.when micro-adjustment is needed, just press up/down key on the remote control.
 - Avoid for the massage head detecting your acupunctuer point postion not right otherwise you won't get good massage.



Kind suggestion

 When you feel the intensity isn't strong enough.take off the pillow or cushion.

Because the chair is heavy, it may ruin your floor in long time setting. Please put a blanket or other soft things to protect your floor.



15 Manual control

Manual control 16


Massage operation

Manual control	Ċ	1, Press power switch button under standby status, massage chair enters ON status. Press Menu or button to choose auto massage program or manual overall massage, then the massage machine starts shoulder height detection and starts to massage. In ON status, press power switch button, massage chair will turn off and return, massage machine automatic reset to the seat position, legrest stays in the lowest position, backrest stays in the highest position, the controller will turn off after the massage chair reset completely. Power off automatically if no selection in ON status after 30 minutes.
		 h ON status, press it to stop all the on-going massage immediately. If user wants to continue massage, press this key to <i>recover</i> massage. Auto power off after pause 30minutes.
	Timing	 A ON status, press this key to choose massage time. 5mins, 10mins, 15mins, 20mins, 25mins, 30mins in turn.
Speed: 1111 🦉 20 min Width: 111		4, h ON status, when the mobile connect to massage chair via blue-tooth, the blue-tooth icon is bright. Press this key to answer or end the calls.
Heat: 111 Heat: 111 II Bluetooth	7	5, Keep pressing this button, backrest go down, legrest go up, release this button, backrest and legrest stop moving. When adjusting sitting position, it shows seat position adjusting in controller screen.
	rén,	6, Keep pressing this button, backrest goes up, legrest goes down, release it, backrest and legrest stop moving. Controller screen will show position adjusting when adjusting the position of massage chair.
	الحبر ا	7, Keep pressing this button, legrest goes down, release it, legrest stop moving. Controller screen will show position adjusting when adjusting the position of massage chair.
Set function by pressing Menu key.	الغ	8, Keep pressing this button, legrest goes up, release it, legrest stop moving. Controller screen will show position adjusting when adjusting the position of massage chair.
	ОК	9, h ON status and under Menu mode, press it to confirm menu choice and enter next menu.
Power On/Off CONTINUE C	< >	10, Navigation button has 4 buttons, they are Up, Down, Left and Right. In Menu interface, it is navigator button, user can press Up or Down to choose menu fast, and press Left or Right to enter previous or next menu. In Manual mode, Up and Down button can be used to adjust massage machine position in shoulder height detecting and fixed point massage. In Speed, Width, intensity and heat setting: Left and Right button can be used to adjust the level.
Backrest down	Heat	 h ON status, press this button to tum on/off the heating function. There are 7 heating position and program for your choice: waist- seat-legrest- waist &seat, seat & legrest- overall - stop, cyclic heating.
Towards left adjust button Confirm button Legrest down	Intensity	12, h ON status, press this button to adjust the massage speed, intensity and heating temperature. Select the desired mode, and relative screen display is glittering, and then you can press left/ right button to adjust the massage speed, intensity and heating temperature.
Downward adjust button	Width	13, h ON status, press this button to adjust the massage width, and relative screen display is glittering on the controller, and then you can press left/right button to adjust the massage width.
Heat button — Heat Intensity Width Roller Foot roller button	Roller	14, h ON status, press this button to adjust foot roller massage speed: fast ,soft and stop.
Intensity adjust button Width adjust button Width adjust button Auto Manual Air pressure Zero Zero Zero -G button	Auto	15, h ON status, press this button to enter auto program menu.
Manual button Air pressure button	Manual	16, h ON status, press this button to enter manual program menu.
	Air pressure	17, h ON status, press this button to enter air massage menu
	Zero	 h ON or standby status, press this button, massage chair will go into zero-gravity position, press it again to return to default position.

Manual control

Massage operation


Manual control 18

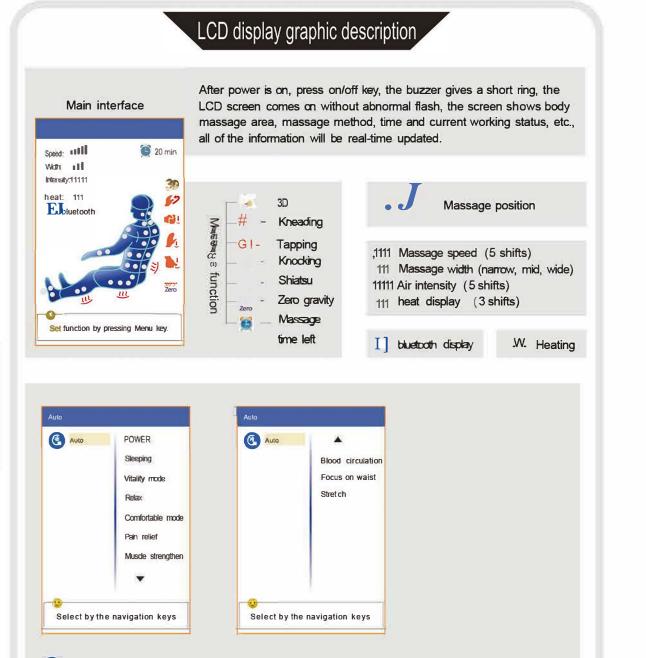

Auto massage: press "auto" in the main interface, the screen will turn to auto massage interface, there are 10 massage programs for option: power, sleeping, vitality mode, relax, comfortable mode, pain relief, muscle strengthen, blood circulation, focus on waist, stretch.

The above 10 programs have shoulder height detection function, as long as the shoulder height test is completed, choose any one of the 10 programs, shoulder height detection is not needed any more.

Back/seat angle can be adjusted automatically: During auto massage, the back/seat angle will be automatically changed (interval is a little long).

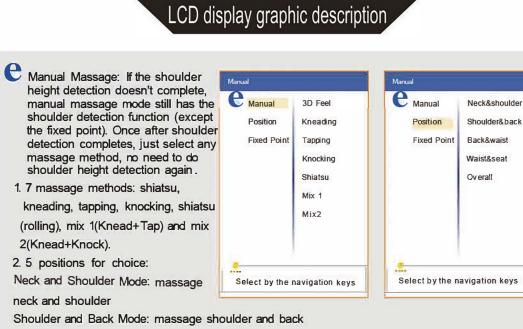

Back and Waist Mode: massage back and waist Waist and Seat Mode: massage waist and seat Whole Body Mode: massage the whole body

During 3D Feel mode, only three positions are available, neck and shoulder mode, shoulder and back mode, back and waist mode.

3. Fixed Point

1. When select massage method, the default mode is whole body.

2. Select massage method before choosing the position or fixed point.


3. Select Manual mode, all air pressure massage shall tum off.

Air Massage	Shoulder+Arm Waist+Pelvis Leg+Foot Head Shoulder+Foot Arm+Pelvis Waist+Foot	Air Massage	 Upper Body Lower Body Whole Body	J Air Massage: Ten air massage modes for you to choose, Shoulder+Arm, Waist+Pelvis, Leg+Foot, Head, Shoulder+ Foot, Arm+Pelvis, Waist+Foot Upper Body, Lower Body, Whole Body Mode. Once air massage is activated, the mechanical massage of the
Select by the r	navigation keys	Select by the r	navigation keys	back massage machine shall stop.

Operation instruction and function illustriatio

Ogeriation instruction and function illustration 20


Massage operation

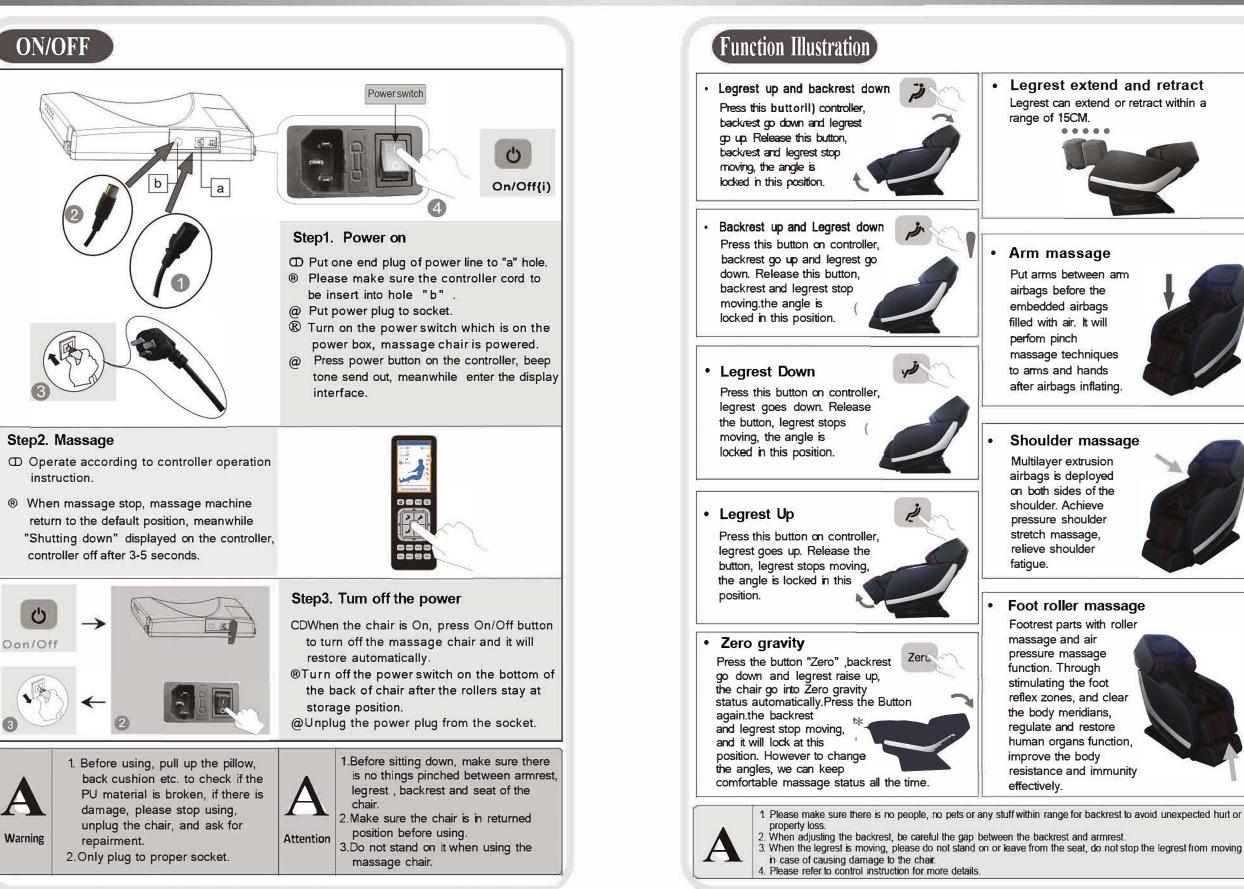

After massage

Clean and Maintenance <22

Maintenance

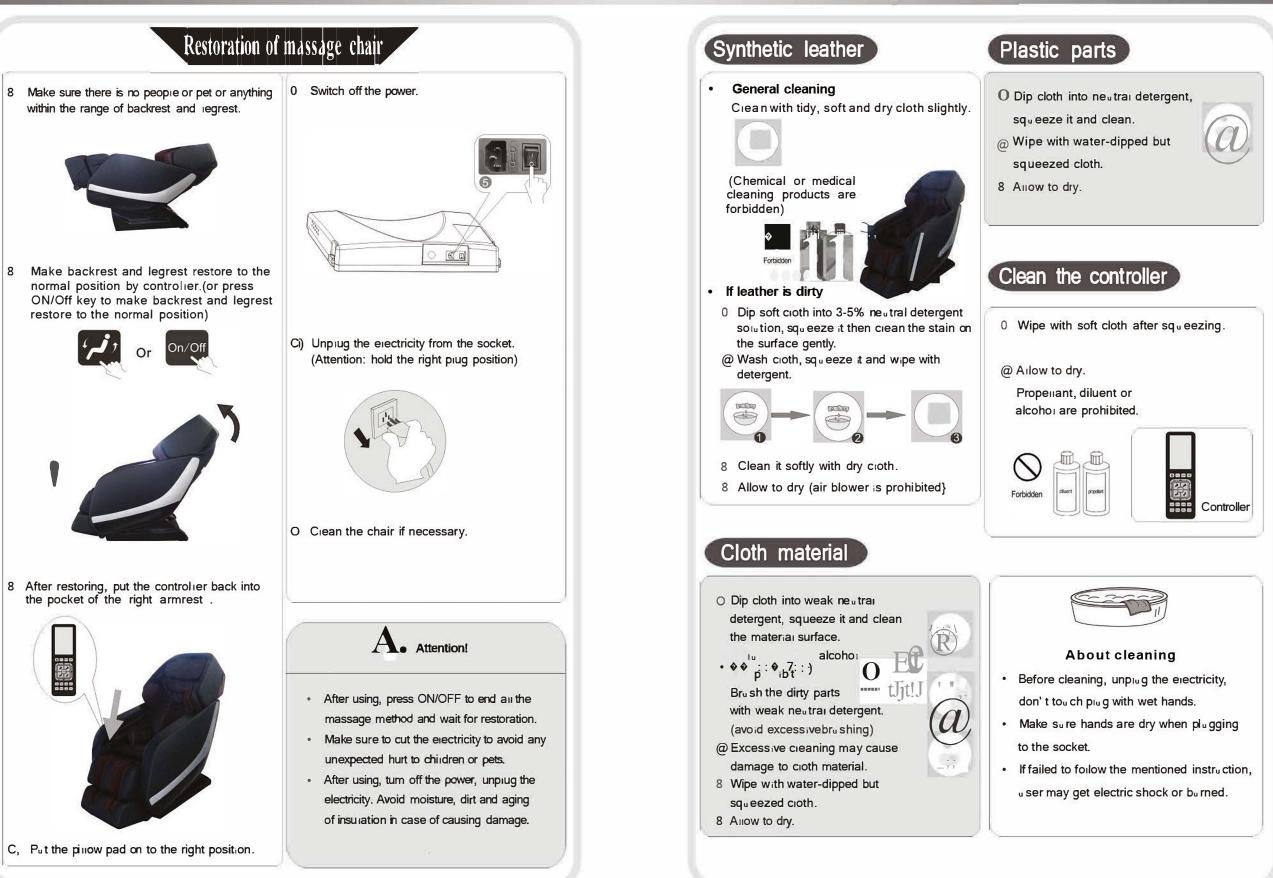

Malfunction guide

Technical data 24

Other

FAO	and	Trout	ples	hoot	inc
ING	and	nour		1001	

Trouble	Possible reason	Troubleshooting		
	Check if the control is on or not.	Open control switch		
	Not choose massage function	Choose massage function		
-	Check whether the plug and socket in poor contact.	Make sure plug and socket are connected.		
The massage chair can't work after power is on.	Wire or plug has damaged.	Please ask manufacturer or appointed or authorized maintenance man for checking and replacement.		
	The fuse burned out.	Replace fuse of same specification.		
	Something wrong with inner circuit	Please ask appointed or authorized maintenance man for checking and repairing.		
There is beep sound inside the massager while working.	It is sound of air pump, motor and mechanical parts.	Normal sound, no need to pay attention to it.		
Different height of the left roller and right roller.	Massage rollers work on shifts.	Normal, no need to pay attention to it.		
Sound suddenly becomes	Check if it is due to long time working.	Turn off the power to have the massager rest for over half an hour before next turn working.		
much louder while working.	Inner parts fretted away due to long time work. It's normal	Please ask appointed or authorized maintenance man for checking and repairing.		
	Suddenly power-down	Connect the electricity power again		
Massage function suddenly stops while working.	Setting time is up.	Turn off the power to have the massager rest for over half an hour before next turn working.		
Neither the backrest nor the legrest can be lay down.	Check if there are any obstacles; the chair overloads; for the sake of safety, sometimes the massage machine may automatically stop working.	Remove the obstacles; turn off the power to have the massager rest for over half an hour before next turn working.		
The chair can't return to its original position.	Excessive operation; setting time is up.	Please ask manufacturer or appointed or authorized maintenance man for checking and replacement.		
Electric wire or plug	lt may work overload	Tum off the power to have the massager rest for over half an hour before next round working.		
give out heat	Other abnormal case	Stop using, and ask appointed maintenance man for help.		

\triangle

Note: If the troubles are not caused by above reasons, please turn off the power switch and cut off the power, then contact the manufacturer or service agent to repair your chair.

Name	Massage Chair	Power	200W
Model	BP-7909B	NW/GW	Main body :78/102 kg Armrest : 15.5122kg
Input voltage DAC120V, 60Hz DAC220V, 50/60Hz DAC240V, 50Hz		Legrest &footrest : 15/17 .5kg Main body: 1510x790x1030 mm	
Safety design Class I		Packing size	Armrest: 1245x41 Qx655 mm Legrest &footrest 530 x 445 x 540 r (LXWXH)

Technical data

23