Dear user

Thank you for choosing REDRAGON product. To protect your rights and for better customer service, please read the following warranty rules carefully.

1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.

1

OS Support

WinXP /Vista/Win7/Win8/Win10 /Win11/Mac OS

How to connect the keyboard with multi-ple devices

Wired Connection
1. Slide the 2.4G/OFF/BT switch on bottom of the keyboard to OFF.
2. Take out the USB A to USB Type C cable in the package and connect the keyboard with your computer, the computer will recognize and configure the keyboard automatically.
3. Once the keyboard is powered up, charging begins. The LED marked with "**M**" lights on red. It will turn to white when keyboard is fully recharged.

2.4G Wireless Connection
1. Slide the 2.4G/OFF/BT switch on bottom of keyboard to 2.4G.
2. press [FN]+[4] for about 3 seconds, the LED marked with "**M**" flashes quickly in green, plug the USB receiver into any available USB port on your computer within 20 seconds. The computer will recognize and configure the keyboard automatically.
3. The indicator will flash on Red when the battery is low. Please recharge the keyboard in time by plug type C cable into computer or it will turn off automatically soon, Please note LED marked with "**M**" will be light on Red while charging, it turn to Green when charging completed(In 2.4g connecting mode)

Bluetooth Connection
1. Slide the 2.4G/OFF/BT switch on left side of keyboard to BT.
2. Press [FN]+[1](or [2]/[3] for other Bluetooth devices), the LED marked with "**M**" flashes in blue (or cyan/magenta for the others)
3. Turn on Bluetooth and scan for available devices on your computer or smart phone. It will find "BT 3.0 Keyboard or BT 5.0 Keyboard" device. Select one of them to get connected with it automatically.

2

4. The indicator will flash in Red when the battery is low. Please recharge the keyboard in time by plug type C cable into computer or it will turn off automatically soon, Please note LED marked with "**M**" will be light on Red while charging, it turn to cyan/magenta when charging completed(In Bluetooth connecting mode).

Function Introduction

1. With standard USB and 2.4G/BT connections, the keyboard can be used on computer without any software or driver installation.
2. There are 20 backlight effects.
3. Commands of key combinations with [FN] key
[FN]+[N]: Change backlight mode. There are 20 backlight effects.
[FN]+[M]: Change back light color.
[FN] + [←]: Slow down the running speed of backlight .
[FN] + [→]: Add up the running speed of backlight.
[FN] + [Win]: Disable or enable the [Win] key.
[FN] + [1]: Select Bluetooth device one (for Bluetooth connection).
[FN] + [2]: Select Bluetooth device two (for Bluetooth connection).
[FN] + [3]: Select Bluetooth device three (for Bluetooth connection).
[FN] + [4]: Change to 2.4G wireless connection. Press and hold the [FN]+[4] for 3 seconds to pair the keyboard with its receiver.
[FN] + [ESC]: Set the keyboard to default setting.
[FN]+[PrtSC]: Turn ON/OFF backlight
[FN]+O: ScrLK
[FN]+P: Pause
[FN]+[[ ]: INSERT
[FN]+[ ]]: DELETE
[FN]+[;]: HOME
[FN]+[" "]: END
[FN]+[, >]: PAGE UP
[FN]+[/ ?]: PAGE DN

3

Multi-Media function

FN+F1: My computer
FN+F2: Open browser
FN+F3: Calculator
FN+F4: Media player
FN+F5: Previous track
FN+F6: Next track
FN+F7: Play/Pause
FN+F8: Stop
FN+F9: Mute
FN+F10: Volume+
FN+F11: Volume+
FN+F12: My Email

How to recharge the keyboard

Find the USB A to USB type C cable in the packaging ,plug the keyboard and connect it with computer for charging, the LED indicator(M) of keyboard will be turn to red.
Remark: The LED indicator (M) will turn to red when keyboard is out of battery.

FAQ

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use

4

BATTERY SAFETY GUIDELINES

DO NOT replace the battery with a different model.
DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.
DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.
DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.
DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.
DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.
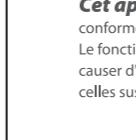
⚠ **CAUTION:**
Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.

*This device contains licence-exempt transmitter(s)/*receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

5

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

California Proposition 65

⚠ WARNING: Risk of Cancer from [Name of one or more chemicals known to cause cancer] And Reproductive Harm From [Name of one or more chemicals known to cause reproductive toxicity] Exposure - www.P65Warnings.ca.gov

6

Estimado usuario

Gracias por elegir REDRAGON Lite. Para proteger sus derechos y obtener un mejor servicio al cliente, le pedimos que preste atención a las reglas de la garantía.

1. Dentro del período de garantía, la reparación está garantizada por fallas debido a problemas en el circuito eléctrico. Los daños causados por el hombre, como desmontaje, impactos fuertes, inmersión en agua, conexión a una corriente o a un voltaje incorrecto y los daños causados por desastres naturales como incendios, inundaciones o terremotos no están incluidos.
2. Las partes consumibles (tal como un bastón) y el reemplazo de repuestos no está incluido en nuestra garantía.

7

Sistemas Operativos admitidos

WinXP / Vista / Win7 / Win8 / Win10 /Win11Mac OS

Cómo conectar el teclado a una computadora

Conexión por cable
1. Mueva el interruptor de Encendido/Apagado del lado izquierdo del teclado a la posición de Encendido.
2. Retire el cable USB A a USB tipo C del paquete y conecte el teclado a la computadora así reconocerá y configurará el teclado automáticamente.
3. Una vez que el teclado esté encendido, comenzará la carga. El LED marcado con M se encenderá en rojo. Se volverá blanco cuando el teclado esté recargado completamente.

Conexión inalámbrica de 2.4G
1. Mueva el interruptor de Encendido/Apagado del lado izquierdo del teclado a la posición de Encendido.
2. Presione [FN]+[4] durante unos 3 segundos, el LED marcado con M destellará rápidamente en verde, conecte el receptor USB a cualquier puerto USB disponible en la computadora dentro de los 20 segundos. La computadora reconocerá y configurará el teclado automáticamente.
3. El indicador destellará en rojo cuando la batería esté baja. Recargue el teclado a tiempo al conectar el cable tipo C a la computadora o pronto se apagará automáticamente. Tenga en cuenta que el LED marcado con M se iluminará en rojo durante la carga y se volverá verde cuando se complete la carga (en el modo de conexión de 2.4G)

Conexión por Bluetooth
1. Mueva el interruptor de Encendido/Apagado/BT del lado izquierdo del teclado a Encendido.
2. Presione [FN]+[1](o) [2]/[3] para otros dispositivos Bluetooth), el LED marcado con M

8

destellará en azul (o cian/magenta para los demás)
3. Active Bluetooth y busque dispositivos disponibles en la computadora o el teléfono inteligente. Encontrará el dispositivo "K643-RGB-PRO 3.0 Keyboard o K643-RGB-PRO 5.0 Keyboard". Seleccione uno de ellos para conectarse a él automáticamente.
4. El indicador destellará en rojo cuando la batería esté baja. Recargue el teclado a tiempo al conectar el cable tipo C a la computadora o pronto se apagará automáticamente. Tenga en cuenta que el LED marcado con M se iluminará en rojo durante la carga, se volverá cian/magenta cuando se complete la carga (en el modo de conexión Bluetooth)

Introducción a las funciones

1. Con conexiones estándares USB y 2.4G/BT, el teclado se puede usar en la computadora sin instalar un software o controlador.
2. Hay 20 efectos de retroiluminación.
3. Comandos de combinación de teclas con la tecla [FN]
[FN]+[N]: cambia el modo de retroiluminación. Hay 20 efectos.
[FN]+[M]: cambia el color de la retroiluminación.
[FN]+[←]: reduce la velocidad funcional de la retroiluminación.
[FN]+[→]: aumenta la velocidad funcional de la retroiluminación.
[FN]+[Win]: deshabilita o habilita la tecla [Win].
[FN]+[1]: elige el dispositivo Bluetooth uno (conexión por Bluetooth).
[FN]+[2]: elige el dispositivo Bluetooth dos (conexión por Bluetooth).
[FN]+[3]: elige el dispositivo Bluetooth tres (conexión por Bluetooth).
[FN]+[4]: cambia a conexión inalámbrica 2.4G. Mantenga presionadas [FN]+[4] durante 3 segundos para emparejar el teclado con el receptor.
[FN]+[ESC]: configura el teclado a la configuración predeterminada.
[FN]+[ImprPant]: enciende/apaga la retroiluminación.
[FN]+O: Desplazar LK
[FN]+P: Pausa
[FN]+[[[]:Insertar

9

[FN]+[ ]]:Suprimir
[FN]+[;]:Inicio
[FN]+[" "]:Fin
[FN]+[. >]:RePág
[FN]+[/ ?]: AvPág

Función multimedia

FN+F1: Mi PC
FN+F2: Abrir navegador
FN+F3: Calculadora
FN+F4: Reproductor multimedia
FN+F5: Pista anterior
FN+F6: Pista siguiente
FN+F7: Reproducir/Pausar
FN+F8: Parar
FN+F9: Silenciar
FN+F10: Bajar volumen
FN+F11: Subir volumen
FN+F12:   Mi correo electrónico

Cómo recargar el teclado

Encuentre el cable USB A a USB tipo C en el paquete, enchufe el teclado y conéctelo a la computadora para cargarlo, el indicador LED (M) del teclado se volverá rojo.
Observación: El indicador LED (M) se volverá rojo cuando el teclado se quede sin carga.

10

Preguntas frecuentes

1. Si el teclado no responde, compruebe si el cable USB del teclado está insertado correctamente en el puerto USB correspondiente en la computadora, o pruebe con otro puerto USB en la misma.
2. Si derrama líquido sobre el teclado, desconecte el cable USB del teclado de la computadora inmediatamente. Limpie el exceso de líquido y coloque el teclado en un lugar seco y ventilado. Asegúrese de que el teclado se seque naturalmente antes de su próximo uso.

11

REDRAGON

IRELIA PRO
WIRELESS 94 KEY HOT-SWAPPABLE
MECHANICAL KEYBOARD

Mechanical Gaming Keyboard
Operating Instructions