TALKING BUTTONS ™

CE

NOTES:
Batteries must be fitted with the correct polarity as below. Use Alkaline batteries and do not mix old and new batteries.

+	1.5V AAA	−
−	1.5V AAA	+
+	1.5V AAA	−

Product Code: TKT-20-xxx

Wall Mounting Holes

Red Light

REC/PLAY Switch

Talking Products ™

REC
PLAY
MIC

3 x AAA

ON
OFF

AUDIO IN

Microphone

(AUDIO-IN not included on this version)
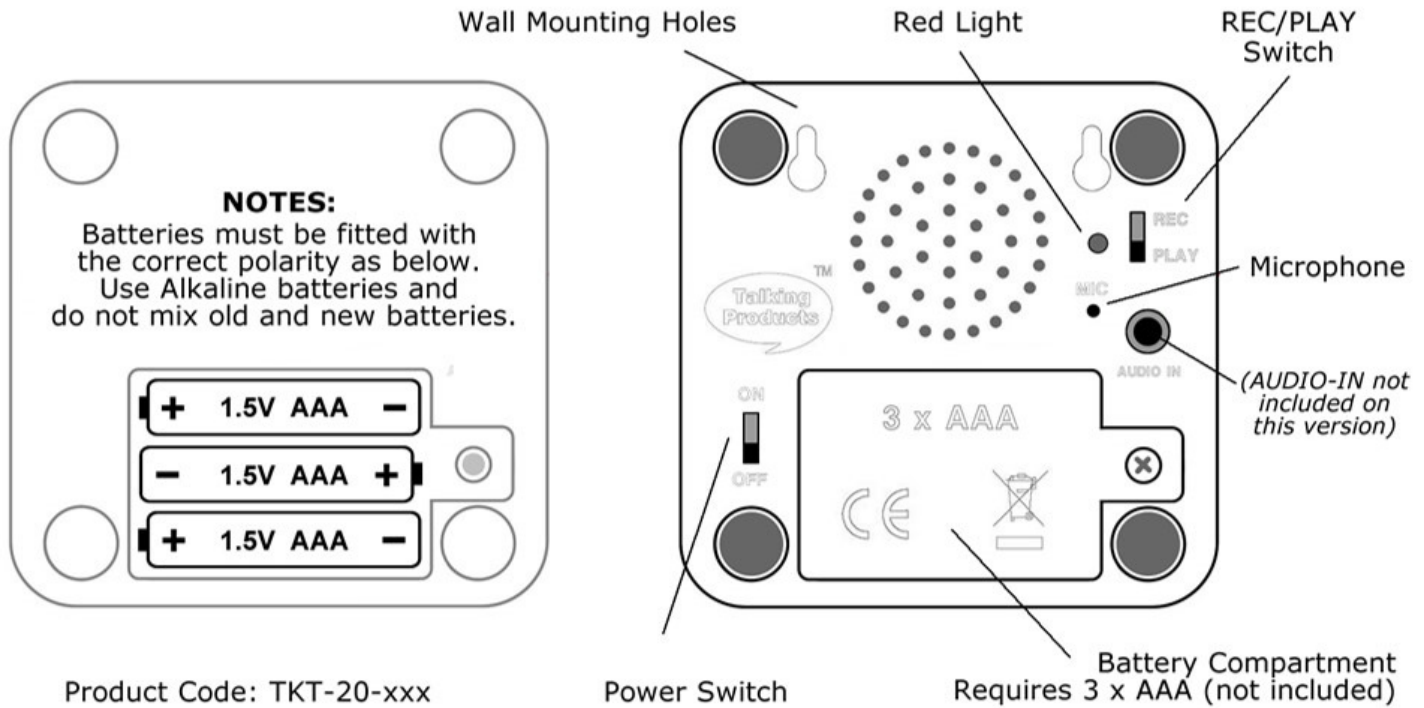
CE

Power Switch

Battery Compartment
Requires 3 x AAA (not included)

Talking Buttons are high quality voice recorders that allow you to record and playback speech, music, and sound effects. Each module has a recording time of up to 20 seconds.

Please read the following instructions carefully and keep this document for future reference.

How to record a message

Turn the button upside down, place on a flat surface and move the Power Switch to the ON position.

Move the REC/PLAY switch to the REC position. Press down on the base and the red light will illuminate to indicate that recording has begun. Speak clearly into the microphone and release when you have finished recording.

NOTE: Ensure the base is held down so that the red light remains on whilst you are recording. You will hear a 'beep' sound to indicate recording has begun and then two 'beeps' to indicate recording has finished.

NOTE: You can only record one single 20 second message. You can re-record as many times as you wish, but the new recorded message will replace the previous one.

How to playback a message

Move the REC/PLAY switch to the PLAY position and turn the button upright. Press down on the top of the button once and release. If you wish to stop the playback at any time press down again.

Volume control and sound quality

You can adjust the playback volume by changing the distance you speak from the microphone. If you are recording from a speaker, change the distance you hold the button from the speaker.

Safety information

This product not suitable for children under 3 years of age.

0-3

Talking Products ™