

尺寸 : 105 * 148 mm 材質 : 100g書紙 工艺 : 骑马釘

英語

2.4G Wireless Keyboard & Mouse Combo

User Manual

KS45-2

Thank you very much for purchasing this keyboard and mouse combo, please read this user manual carefully to ensure your new keyboard and mouse combo functions correctly.

Package Contents

- 1 x Wireless Keyboard
- 1 x Wireless Mouse
- 1 x 2.4G USB Receiver
- 1 x User Manual

Specification of Keyboard

| | |
|-------------------------|------------------------------|
| Define the name | instructions |
| Operate system | Windows 7 and above |
| Power supply | Dry cell 2*AAA |
| Sleep time | 5S after stop using keyboard |
| Key life | 3 million strokes |
| Standby time | 40 days |
| Continuous working time | 300 hours of continuous use |
| Wake up way | Click any key |
| Dimensions | 371.5*130.2*19.4 MM |
| Operating distance | Within 8 meters |
| Low voltage | 1 second 1 flash |
| Working current | Open the Caps lock ≤ 3 MA |
| Sleep current | ≤ 0.02MA |

Specification of Mouse



| | |
|-----------------|--------------------------------------|
| Connect Method | 2.4G Wireless |
| Dimensions | 110.1*60*31.4MM |
| Operating Range | < 8 meters |
| DPI | 1800 |
| Working current | ≤ 12 mA(About 30 minutes deep sleep) |

1

| | |
|-------------------------|-------------------------------|
| Sleeping current | ≤ 0.03mA |
| Wake up method | Press any keys |
| Power supply | Dry cell 1*AA |
| Keys Life | Three hundred thousand clicks |
| Uninterrupted Work Time | 100 hours |
| Stand-by time | 60 days |
| Sleep time | 3S after stop using keyboard |

Product Layout

- ① Caps Lock Indicator
- ② Number Lock indicator
- ③ Power Indicator (Low Battery Reminder)

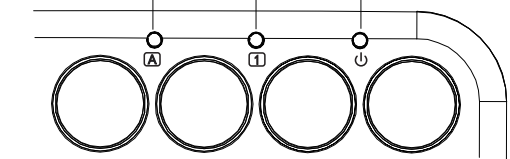

- ⑤ The battery hole
- ⑥ USB Receiver

2


Product Indicators

- Caps Lock Indicator:** Green indicator light is on when the Caps Lock is activated.
- Number Lock Indicator:** Green indicator light is on when the Number Lock is activated.
- Keyboard battery status indicator**
When keyboard is turned on, battery status indicator lights up red for 3 seconds, then turns off.
• Blinking red: Battery is low. Please replace the dry battery in time.
- Power Switch:** Slide to the right to turn on the keyboard and slide to left to turn off.
Turn the switch up and turn the mouse on, Turn the switch down and turn the mouse on.
- Power supply:** Open the battery cover and load the dry battery.
- USB Receiver:** USB Receiver slot.
Open the keyboard battery cover and see the receiver slot.

Keys and Function

| Key | Windows | Key | Windows |
|------|------------|-----|------------|
| Fn + | FN Lock | | Previous |
| | Play&Pause | | Next track |
| | Mute | | Volume - |
| | Volume + | | Brower |
| | Search | | Email |

3

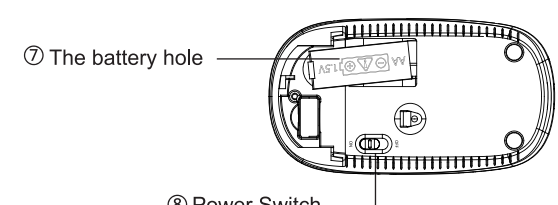

System Requirements

Windows 7 or above, Windows with USB port (for the USB receiver).

Connection Steps

- Set power switches of the keyboard and mouse to "On"
- Connect the USB receiver to the computer.

Keyboard Features

- USB nano receiver is in the battery compartment of the keyboard, under the battery cover.
- Plug and play.
- Portable.
- Enhanced scissor keys, more sensitive and durable.
- Slim spill-resistant design with low profile keys for a comfortable typing experience.

Safety Instructions

- Warning: Fire, electric shock, damage to keyboard device could occur if the following instructions are not obeyed
- Danger (high risk) x Warning (Moderate risk) x Note (Poor risk)
 - 1. Away from edge tool
 - 2. Away from microwave radiation source
 - 3. Do not place heavy objects on this product
 - 4. No shocking and bending
 - 5. Away from oil, chemical, or organic solvents

4

日语

2.4G ワイヤレス キーボード・マウスセット

取り扱い書

KS45-2




はじめに

この度は弊社 2.4G ワイヤレスキーボード・マウスセット (型番: KS45-2) をお買い上げ頂き有難うございます。

この取扱説明書では、本製品の使用方法や安全にお取扱いいただくための注意事項を記載しております。ご使用前によくご覧ください。読み終わったあともこの取扱説明書は大切に保管してください。

各部の名称とはたらき

- ① キャップスロック
- ② NumLockキーのインジケータ
- ③ 電源インジケータ (電量不足インジケータ)

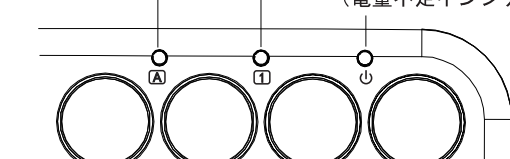

- ⑤ バッテリースロット
- ⑥ USB受信機

5

インジケータについて

キャップスロックインジケータ: キャップスロックが作動すると、緑色のインジケータライトが点灯します。

NumLockキー: NumLockキーが作動すると、緑色のインジケータライトが点灯します。

電源インジケータ: キーボードがオンになると、電源インジケータが赤に点灯し、省電力のため、3秒ぐらいで消えます。

低電力: 電池残量が少なくなると、赤くライト点滅しています。その時は電池を交換してください。

電源スイッチ: 右にスライドさせるとキーボードが点灯し、左にスライドさせると電源が切れます。

ファンクションキー

| キー | 動作 | キー | 動作 |
|------|---------|----|--------|
| Fn + | Fnロック | | 戻る |
| | 再生/一時停止 | | 進む |
| | 静音 | | ボリューム- |
| | ボリューム+ | | ブラウザ |
| | 検索 | | メール |

6

| キー | 動作 | キー | 動作 |
|----|----------|----|------|
| | お気に入り | | 電卓 |
| | 明るさ- | | 明るさ+ |
| | ロックスクリーン | | |

仕様

| ワイヤレスキーボード | |
|------------|---|
| 対応機種 | USBポートに対応したデバイス |
| システム | Windows 7以降 |
| 通信距離 | 約8m (使用環境により異なります) |
| マウスのDPI | 1600DPI |
| キー寿命 | 300万回以上に耐える |
| 給電方式 | キーボード: 単四乾電池x2本(別売り) マウス: 単三乾電池x1本(別売り) |
| 連続作業時間 | 300時間連続使用可能 |
| 睡眠モード | キーボード: 5分間で動かないと マウス: 3分間で動かないと |
| スタンバイ時間 | 40日 |
| サイズ | 371.5*130.2*19.4mm (キーボード) 110.1*60*31.4mm (マウス) |
| 付属品 | 1. キーボード 2. マウス 3. USBレシーバー 4. 取り扱い書 |

7

故障かな?と思ったら

Q、「shift+数字キー」を押して、実際に出了記号と印のはズレがあります。
A、キーボードの種類が英語キーボードとして認識されていますので、英語キーボードと認識されるため、下記「キーボードのズレについて」のステップに従ってに設定しなおしてください。システムによっては、設定方法は違うので不明なところがありましたら、弊社をご連絡お願いします。

Q、キーボードからローマ字入力ができなくなりました。
A、ローマ字とアルファベット入力の切り替えについて、この二つの組み合わせキーをご参照ください。

1、入力の選択: Winキーを押しながら、スペースキーを押して切り替えます。
2、英字入力が出来ている状態で、[Alt]を押しながら「[~] (チルダ)」を押すと日本語入力モードになります。再度「[Alt]」を押しながら「[~)」を押すと英字入力に戻ります。

Q、ファンクションキー、或いはF1~F12などのFキーが使えません。
A、ファンクションキーを使いたい時に、まずは「Fnキー」を押しながら、「Escキー」を一回押してください。その時は、ファンクションキーをロックしていますが、即ちのようなファンクションキーを使用可能です。

逆に、「Fn」などのFキーを使いたいと、もう一度「Fnキー」を押しながら、「Escキー」を一回押して切り替えてください。

キーボードのズレについて

- キーボードで「@」(アットマーク)のキーを押したときに「[」が表示される場合は、キーボードの種類が英語キーボードとして認識されていますが、英語キーボードと認識されているので日本語キーボードに設定方法は次の方法で日本語キーボードに設定しなおしてください。(Windows 10):
- 日本語キーボードに設定する手順

※ 画面デザインは異なる場合があります。
ハードウェアキーボードレイアウトを設定する

- ① 管理者権限をもつユーザーアカウントでサインインします。
- ② 起動しているアプリをすべて終了します。

8

設定手順

③ [設定]-[時刻と言語]をクリックします。



④ [言語]を選択し、「優先する言語」項目の[日本語]をクリックして、[オプション]をクリックします。




⑤ 「言語のオプション」：日本語」と表示されるので、「ハードウェア キーボードレイアウト」項目「レイアウトを変更する」をクリックします。



9

ハードウェアキーボードレイアウトの変更

⑥ 「ハードウェア キーボードレイアウトの変更」画面が表示されるので、「英語キーボード (101/102キー)」を選択してから「今すぐ再起動する」をクリックします。

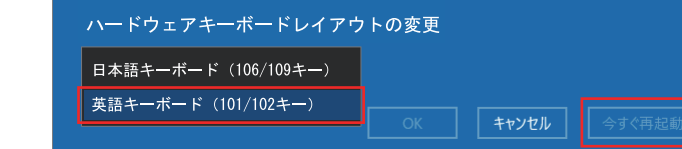

⑦ Windowsが再起動します。これで手順は完了です。

保証規定

- 本商品が1年保証付き、万が一保証期間内に正常な使用で故障した場合に無償で交換・修理させていただきます。下記の問い合わせ先までご連絡をお願いします。
- 保証期間内であっても以下の場合には保証の対象外となります。
 - 分解・改造・弊社以外での修理による故障・損傷。
 - 取り扱い上の不注意による故障・損傷。
 - 天災地災や天災、ならびに公害や異常電圧などの外部要因による故障・損傷。
- 一般用途以外での使用 (業務用途の過大な連続使用や環境など) による故障・損傷。

製品問い合わせ先

製品に関してご不明な点がございましたら、下記のメールアドレスまでご連絡ください。
E-mail: HiTech.jp@outlook.com
営業時間: 平日 10 時~19 時まで (土日祝除く)

10