ROCKERZ 301 ANC
SMART GUIDE

PACKAGE CONTENTS

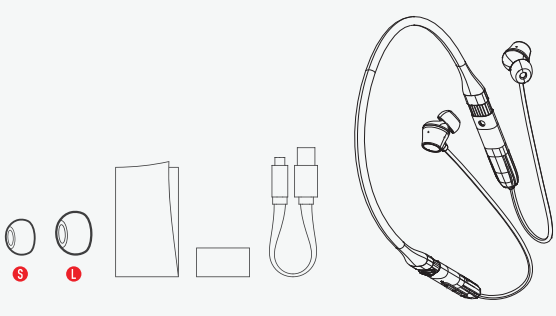

PRODUCT LABELLING

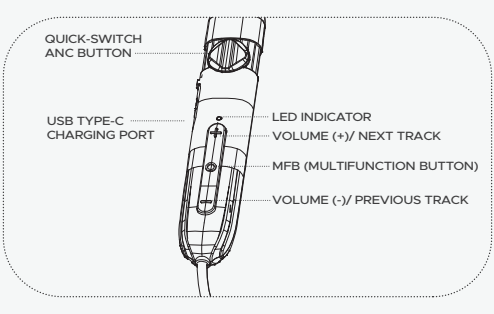

MAGNETIC POWER ON/OFF

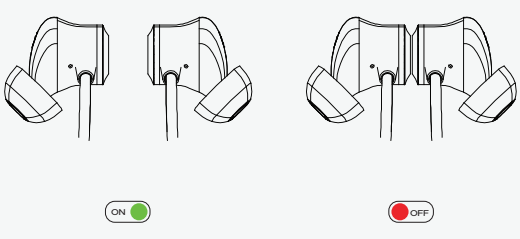

Note: To power on the earphones manually, press and hold the MFB for 3 seconds.
Press and hold the MFB for 5 seconds to manually power off the earphones.

BLUETOOTH PAIRING

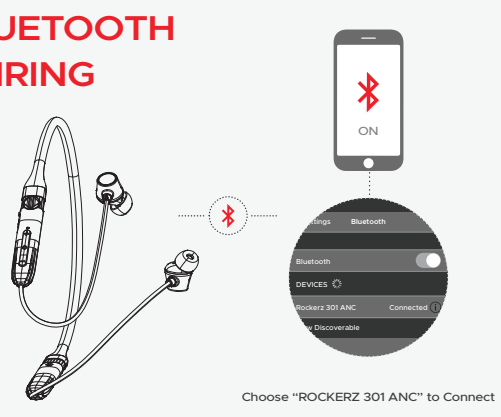

Choose "ROCKERZ 301 ANC" to Connect

MODES OF NOISE CONTROL

● Press Once

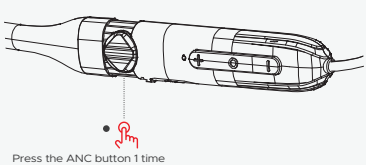

Press the ANC button 1 time to toggle between Ambient, ANC (Active Noise Cancellation), and Normal (ANC Off) audio modes.

Note: 1. By default, the Normal (ANC Off) mode is active.
2. The operational cycle is Ambient Mode ➞ ANC Mode ➞ Normal Mode (ANC OFF).
3. Your earphones will remember the mode you last used & will enable the respective noise cancellation mode when they are powered on next time.
4. When you activate ANC or Ambient modes, the earphones will consume more power which will reduce the playtime.

FUNCTIONS (CALL/MUSIC/VOLUME)

● Press Once
●● Press Twice
▬ Press & Hold (2 Sec)

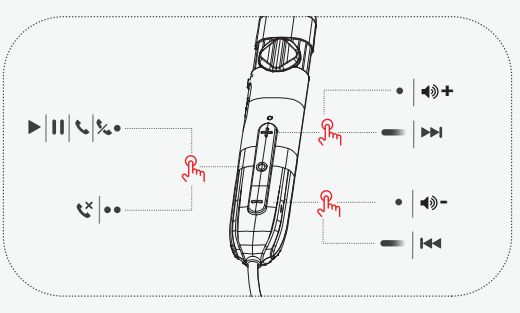

Note: The earphones may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on the neckband.

FUNCTIONS (VOICE ASSISTANT/ BEAST™ MODE /RESET)

●●● Press 3 Times
▬ Press & Hold (2 Sec)
▬ Press & Hold (5 Sec)

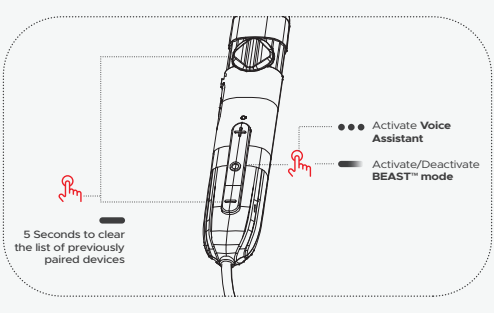

Note: The earphones may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on the neckband.

HEARABLES APP COMPATIBILITY

Discover the following features of your Rockerz 301 ANC earphones only on the boAt Hearables app:

- Toggle Noise Cancellation modes
- Button Customization
- Battery and Connectivity Status
- Smart Diagnostics Mode

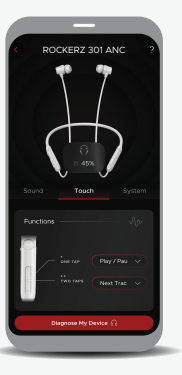

RESET ROCKERZ

FORGET DEVICE

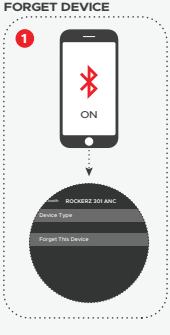

PRESS AND HOLD THE ANC BUTTON & VOLUME '–' BUTTON SIMULTANEOUSLY FOR 5 SECONDS

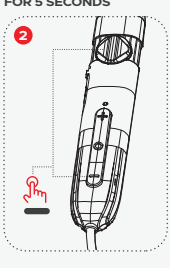

PERFORM FRESH CONNECTION

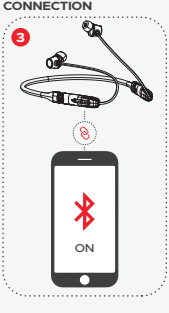

Note: Red and blue LEDs flash alternatively for 1 second to indicate successful reset

LED STATUS GUIDE

<20% : RED LED BLINKS RAPIDLY EVERY 30 SECONDS WITH TONE PROMPT	LOW BATTERY
SOLID RED LED	CHARGING
100% : LED TURNS OFF	FULLY CHARGED

SPECIFICATIONS

Headphone Type	Wireless Neckband Earphones
Bluetooth Version	5.4
Active Noise Cancellation	Up to 30 dB
Music Playtime	Up to 40 hours (Non-ANC mode);
	Up to 28 hours (ANC mode);
	(at 60% volume)
ENx™ Technology	Yes
BEAST™ Mode	Yes; 40 ms Low Latency
Transmission Range	10 m
Driver Size	13 mm*2
Frequency	20 Hz-20 kHz
Battery	280 mAh
Charging Time	Up to 50 mins
Charging Interface	USB Type-C
Water Resistance	IPX5

CHARGING GUIDELINES

Charging norms & Precautionary Guidelines: -	
1) Charger/Brick/Adapter 2) Cable/Wire	: 5V/2A : Standard Cable (35 strands @0.10mm diameter/ strand)
Any other accessory can be used to charge the product as long as the above-mentioned norms are followed.	

Note: (1) Before using the earphones for the first time, it is recommended to fully charge them.
(2) Please note that the earphones cannot be used / switched on while charging.

LEARN MORE ABOUT YOUR PRODUCT

Scan this QR Code to Access Your Product's Manual, FAQs, and Warranty Information