Airdopes 491
Twin Wireless Ear-buds
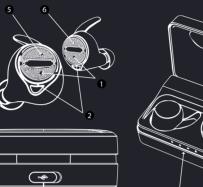
A Step Beyond Usual

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes 491. Please consider this manual as your guiding map towards the shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual; also, you may refer to the same at times when you face any sort of difficulty in future.

In the box

1 1x pair of Ear-Buds
2 1x Charging Case
3 2x Pairs of Ear Caps
4 2x Pairs of Ear Caps
5 User Manual
6 1x Charging Cable

Product Overview

1 MFB (Multi Function Button) / Power Button
2 Indicator Lights
3 Charging Case Indicator
4 USB Type-C Charging Port
5 Next Track
6 Previous Track

Power On (First Time User)

Step 1: To automatically switch the earbuds on (Smart Power On) simply take them out from the charging case
OR
To manually switch the earbuds on (Manual Power On), long press the Multifunction Button (*MFB) for 3 seconds on both Left and Right earbuds for switching them on until the LED light begins to flash in blue

Step 2: Both the earbuds will automatically pair with each other. The earbuds will enter into the Connection Mode, indicated by alternate green and blue LED flashes

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan

Step 4: Search for 'boAt Airdopes 491' and pair accordingly. Enter '0000' as the passkey if asked.

Congratulations! Your earbuds are now connected successfully via Bluetooth

Notes:
• Pairing mode lasts for 5 minutes. If the pairing time is missed then you will need to reconnect the ear-buds and follow the above mentioned procedure
• Airdopes 491 remembers previously connected devices; once switched on, the ear-buds automatically reconnect to the previously connected devices

Bluetooth
Bluetooth ON
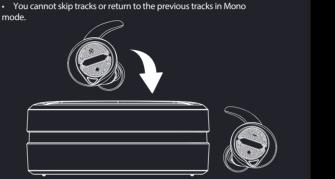Device
boAt Airdopes 491

Single Earbud Usage

Step 1: Please note that both the earbuds can be used in mono mode. Use either of the two options; Smart Power On or Manual Power On for switching on the desired earbud
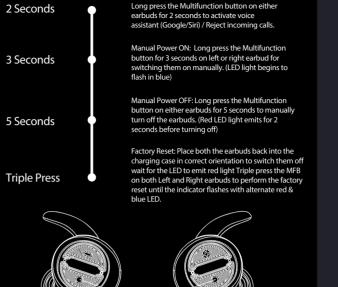
Step 2: The selected earbud will automatically enter the connection mode indicated by alternating green and blue LED flashes

Step 3: Turn on Bluetooth on your phone/media device and search for 'boAt Airdopes 491' to connect

Notes:

• To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage.
• You cannot skip tracks or return to the previous tracks in Mono mode.

LED Indicators / Functionalities

2 Seconds — Long press the Multifunction button on either earbuds for 2 seconds to activate voice assistant (Google/Siri) / Reject incoming calls.

3 Seconds — Manual Power ON: Long press the Multifunction button for 3 seconds on left or right earbud for switching them on manually. (LED light begins to flash in blue)

5 Seconds — Manual Power OFF: Long press the Multifunction button on either earbuds for 5 seconds to manually turn off the earbuds. (Red LED light emits for 2 seconds before turning off)

Triple Press — Factory Reset: Place both the earbuds back into the charging case in correct orientation to switch them off wait for the LED to emit red light Triple press the MFB on both Left and Right earbuds to perform the factory reset until the indicator flashes with alternate red & blue LED.
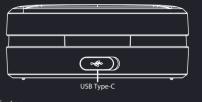
MFB
(Multi Function Button)

Charging The Case

Step 1: To charge the case, plug one end of the Type-C cable into the case and connect the other end to a computer or a wall adapter.

Step 2: The LED lights located on the charging case indicate the battery status of the case. The indicator in the case blinks red in colour during charge. When the case has been charged fully the red light gets steady.

Note: The LED lights located on the charging case indicate the battery status of the case.

USB Type-C

Battery Indicator

0%-25%	One LED stays solid
25%-50%	Two LEDs stay solid
50%-75%	Three LEDs stay solid
75%-100%	Four LEDs stay solid

Battery Indicator (When Charging)

0%-25%	The first light flashes slowly
25%-50%	The second light flashes slowly
50%-75%	The third light flashes slowly
75%-100%	The fourth light flashes slowly

Charging The Earbuds

Step 1: Please insert the earbuds back inside the charging case in correct orientation.

Step 2: A red LED will indicate that the earbuds are being charged. Once fully charged the LED turns off.

Step 3: Once the earbuds are fully charged, the charging case automatically switches off to save power.

Note:
• Before using the ear-buds for the first time, it is recommended to fully charge the ear-buds. Also, please keep the lid of the charging case closed while charging and use a 5V/2A adaptor
• When the earbuds are in low power, flashing green LED indicates the same

Basic Functions

• **Voice Assistant:** Long press the Multifunction Button on either earbud for 2 seconds to activate the voice assistant
• **Answer/Hang Up Call:** Single press the Multifunction Button on either earbud to answer an incoming call and once again to hang up an ongoing call
• **Reject Call:** Long press the Multifunction Button for 2 seconds to reject incoming calls
• **Play/Pause Music:** Single press the left/right Multifunction Button once to play or pause a song
• **Next Track:** When playing music, double press the '+' button on right earbud to skip to the next song
• **Previous Track:** When playing music, double press the '-' button on left earbud to return to the previous song
• **Power Bank function:** In case of emergency, for instance when your phone runs out of battery, you may utilize the 2600mAh Case for charging your device for some time.

Note: Volume cannot be controlled via earbuds and can only be adjusted via phone/media device

Voice Assistant

Step 1: Long press the Multifunction Button on either earbud for 2 seconds to activate the voice assistant

Step 2: The respective voice assistant screen pops up and you may place your commands at ease

Tips: You may try the following commands,

• What is the weather?
• Play a song
• Where are The Pyramids located?

"What is the weather?"
"Play a song"
"Where are The Pyramids located?"

Smart Power Off

Step 1: After usage, remove both the earbuds from your ears

Step 2: Place the earbuds back into the charging case in correct orientation

Step 3: The earbuds will automatically switch off (and enter into charging mode)

Manual Power Off

Step 1: Long press the MFB on either earbud for 5 seconds until the red indicator light blinks before earbuds getting turned off, in order to manually switch off the earbuds. Please note that this powers off both the earbuds

Step 2: Please keep the earbuds back into the charging case to charge the earbuds

Factory Reset

Perform the Factory Reset in case you face any difficulty while operating your Airdopes 491

Step 1: Place both the earbuds back into the charging case in correct orientation to switch them off wait for the LED to emit red light

Step 2: Triple press the MFB on both Left and Right earbuds to perform the factory reset until the indicator flashes with alternate red & blue LED

Step 3: Shut the lid of the charging case and then re-open it again

Step 4: Once you take the earbuds out from the charging case, they automatically restart
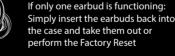
Congratulations! Your Airdopes 491 has been Reset

Common Problems with Solutions

If only one earbud is functioning:

If only one earbud is functioning: Simply insert the earbuds back into the case and take them out or perform the Factory Reset

If earbuds are not in scan mode (No alternating blue and red LED flashes on the earbuds):

If Earbuds not in Scan mode (No alternating blue and red LED flashes on the earbuds) Simply put back both the earbuds in case and take out again or perform "Factory Reset".

Specifications

Bluetooth Version	V5.0
Water Resistance	IP67
Music Playtime	5.5 Hours
Transmission Range	10m
Driver Size	6mm
Bluetooth Profile	HFP/ HSP/ A2DP/ AVRCP
Frequency	20Hz-20kHz
Battery Earbuds	43mAh x2
Battery Charging Case	3350mAh
Charging Time	2 Hours
Earbuds' Weight	11g
Charging Case Weight	117g

Troubleshooting

Potential Problem	Solution
If one earbud is not working	Perform the Factory Reset
If earbuds are not in connection/ scan mode	Perform the Factory Reset
If earbuds disconnect during phone call	Charge the earbuds or perform the Factory Reset
If there are other exceptions in usage	Place the earbuds back into the charging case and try using them gain or perform the Factory Reset

Warning

• Please follow the instructions to operate
• Please charge the ear-buds according to the charging norms mentioned on the packaging & manual
• Please don't use the ear-buds in extreme temperatures
• Please don't use the product near water
• Please keep the product away from heat sources, as the heat may damage it
• Don't jam the ports such as charger port, LED port, etc.
• It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life.

Advisable: The earbuds start at a 100% volume and it may need to be reduced when the earbuds are switched on at first. This can be done by using the volume control on the phone/ media device.

Charging norms & Precautionary Guidelines:

1) Charger/Brick/Adapter : 5V/2A
1) Cable/Wire : Standard Cable (35 Strands @0.10mm diameter/strand)

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

A Step Beyond Usual