




USAGE INSTRUCTIONS

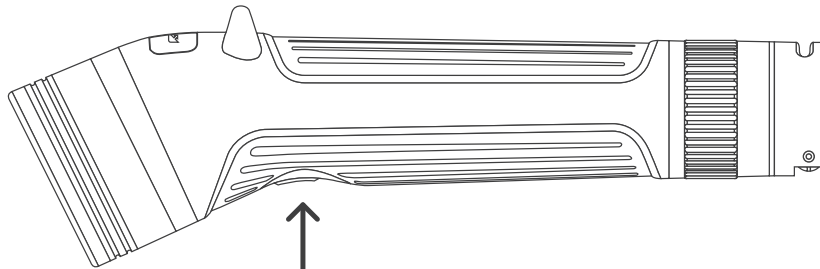

Light / Lumière

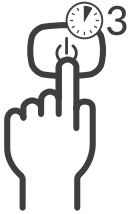

Hold: On / Off
 Maintenir : Activé/Désactivé

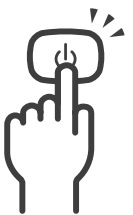

Click: Cycle modes
 Low, Medium, High, Sprint
 Cliquez sur : Modes de cycle
 Faible, Moyen, Fort, Sprint



Double-Click: Strobe
 Click: Back to Low
 Double-clic : stroboscope
 Clic : retour au niveau faible

Clean with a damp cloth. Air dry. Do not leave in direct sunlight for long periods. IPX 4 weather resistant. Do not submerge. Not for use by children 5 years and younger. Do not shine light directly into eyes.

Nettoyer avec un linge humide. Sécher à l'air. Ne pas laisser exposée à la lumière directe du soleil pendant de longues périodes. IPX 4 résistant aux intempéries. Ne pas immerger. Ne doit pas être utilisée par des enfants âgés de 5 ans et moins. Ne pas pointer la lumière directement sur les yeux.

TO REPLACE BATTERY:

