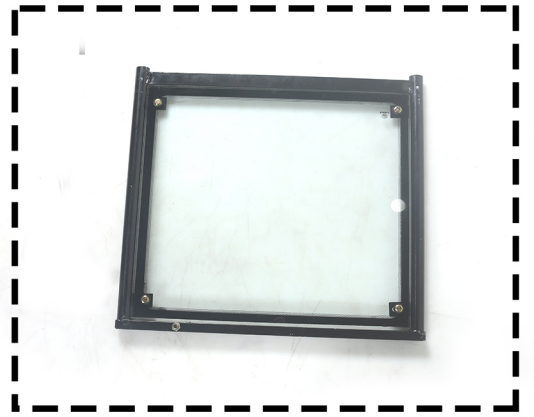# Operation Instruction
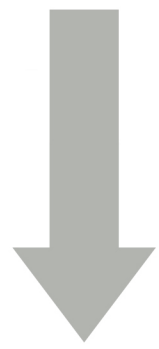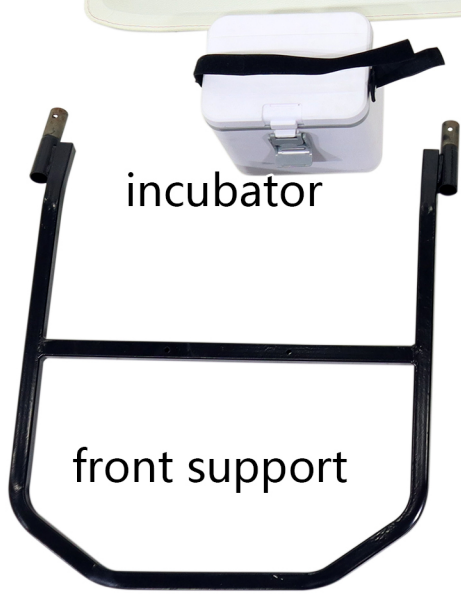
scooter

front windshield

roof with bracket

incubator

rear support

front support

incubator support

screw

Golf rack

Fastening Classification Diagram

M8*40 cylinder hexagon screw
M8 cap nut
M8 flat pad
*2 sets

install the faucet handle

M10*40
cylinder hexagon
screw
*2 sets

install under the front support

M10*40 cylinder hexagon screw*2
M10*80 cylinder hexagon screw*2
M10 self locking nut*4
M10 flat pad*4

install under
the rear support

install the glass

M6*40 half round hexagon screw
M6 cap nut
M6 flat pad
*2 sets

install the rear roof bracket
M8*45 cylinder
hexagon screw
M8 cap nut
M8 flat pad
*4 sets

M8*65 cylinder hexagon screw
M8 cap nut
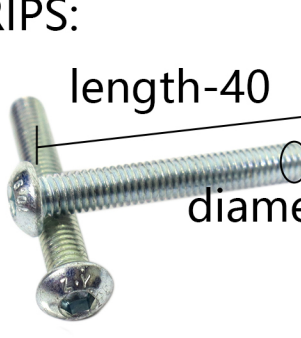M8 flat pad
*2 sets
install the front roof bracket

M8*40 cylinder hexagon screw
M8 cap nut
M8 flat pad
install the Golf rack

M6*40 countersunk head
hexagon socket screw
M6 cap nut
M6 flat pad
*2 sets
install the incubator support

TRIPS:

length-40

diameter-6

diameter-6

diameter-6

cylinder hexagon screw

half round hexagon screw
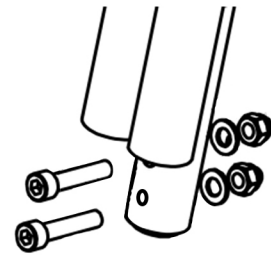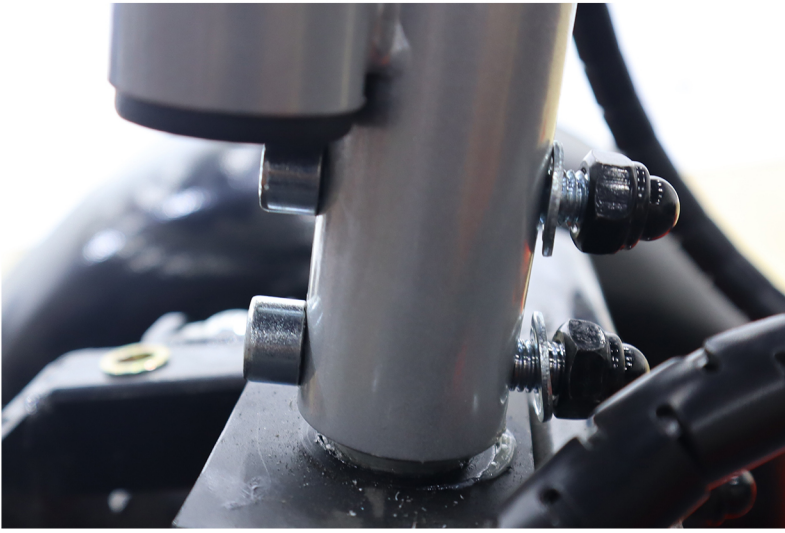
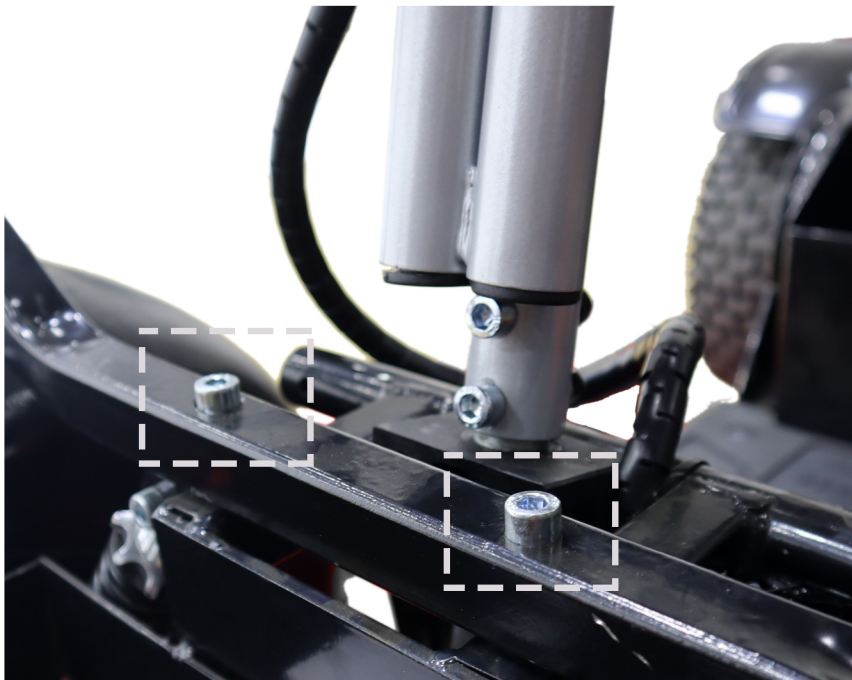countersunk head
hexagon socket screw

seat

charger

battery

Insert the faucet tube.

⬆ Grasp the faucet handle and move out of the scooter slowly.

Install the screw of the faucet handle.
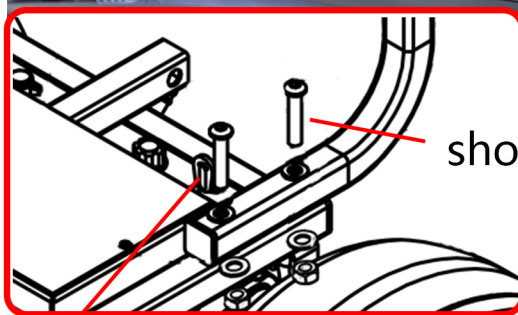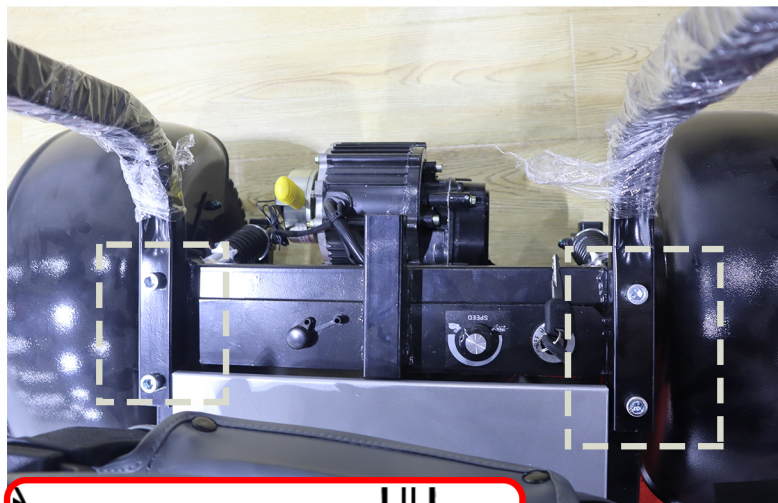

Install front support. Tighten the screws.

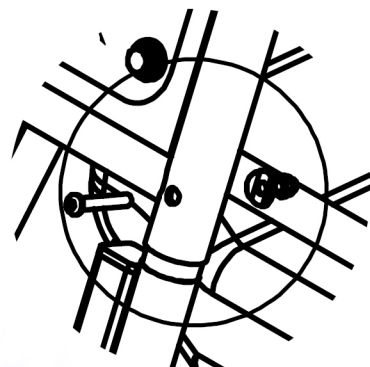Pull the push rod under the seat to fix the seat.

Install rear bracket

short screw

long screw

Install glass.
Tighten the screws.

Pay attention to the front and rear of the roof.
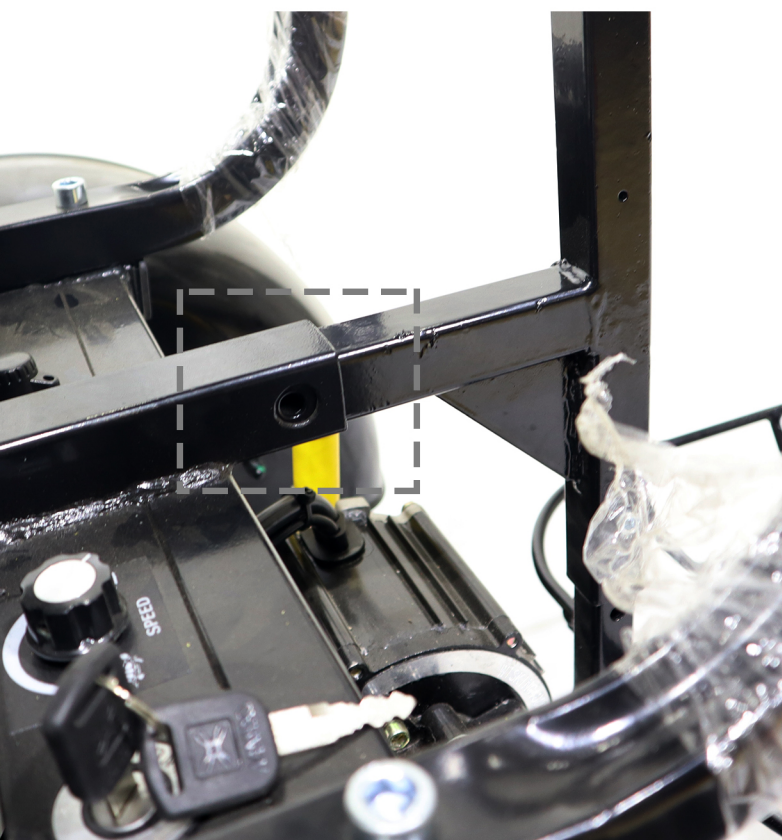Install two parts as shown in the figure.
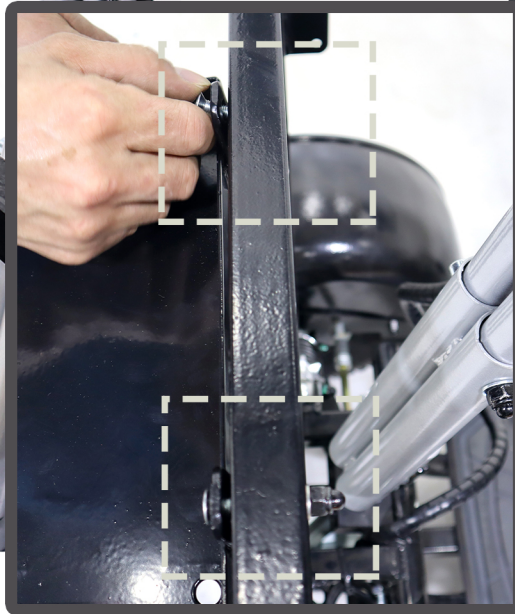Tighten the screws.

front

rear

step1:
Install the screws
from bottom to top

step2:
Install the screws
from the outside to the inside

Install the Golf Stand.

➡ Install the incubator support
Install the incubator

➡ Put the battery into the battery compartment.

➡ Fixed battery.

➡ Connect the battery cable.