


XRocker®

2.0 Bluetooth with Battery

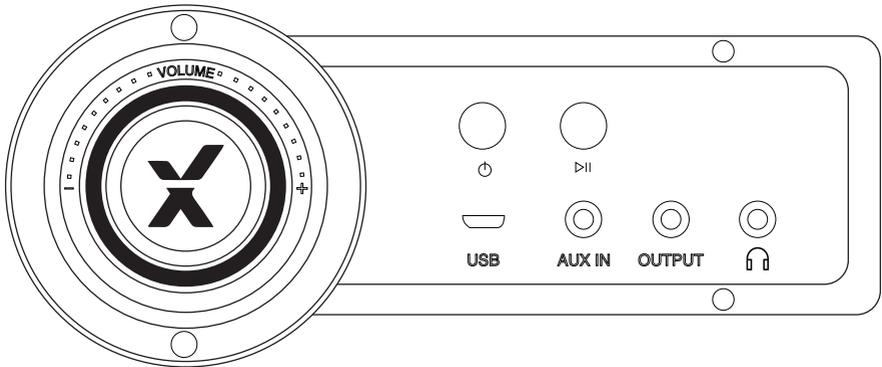

Need Help? Email: service@acecasual.com

Phone: 866-969-2603 www.xrockernation.com

IMPORTANT: You must keep your original retail receipt as proof of purchase.

Welcome to X Rocker!

ENGLISH 3

FRENCH 10


Welcome to X Rocker!

Thank you for purchasing this X Rocker gaming chair. You are now close to enhancing your favorite games with **audio!**

To get started, please assemble the chair using the assembly instructions on the separate leaflet and then follow the instructions in this manual to **get rocking!**

Table of contents

- 4 Box contents and control panel overview
- 5 Wired Connection guide: TV
(Xbox One and PS4 audio)
- 6 Connect by controller (PS4 systems only)
- 7 Bluetooth connection guide
(Mobile phones/tablet devices)
- 8 Troubleshooting tips
- 9 Health and safety information

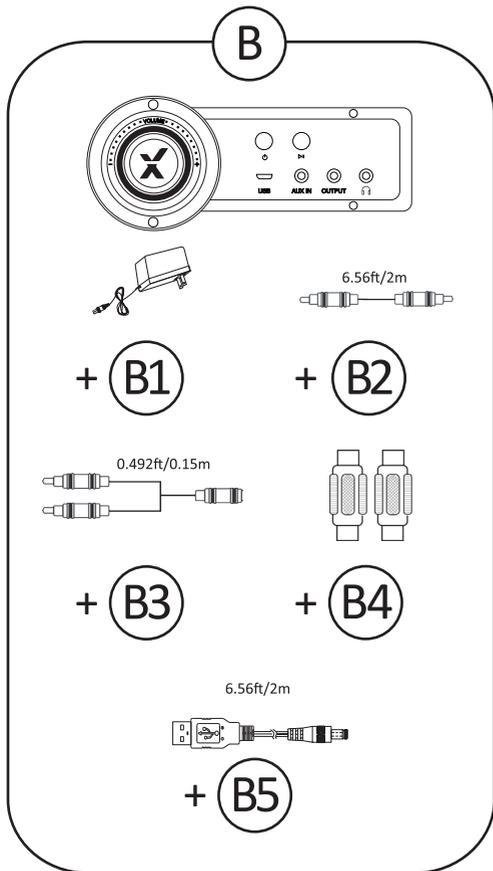

B1 - USB Power supply adapter


B2 - 2m 3.5mm to 3.5mm audio cable

B3 - 15cm RCA to 3.5mm(F) audio cable


B4 - RCA female to female adapters

B5 - USB Power cable

Control panel overview

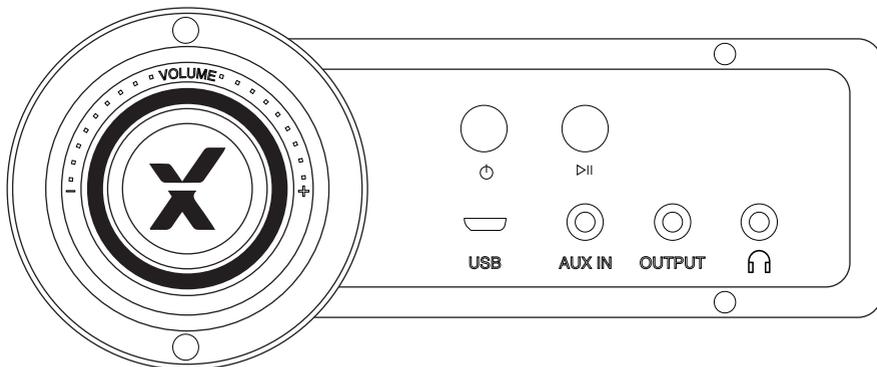

Wired connection guide: TV (Xbox One and PS4 audio)

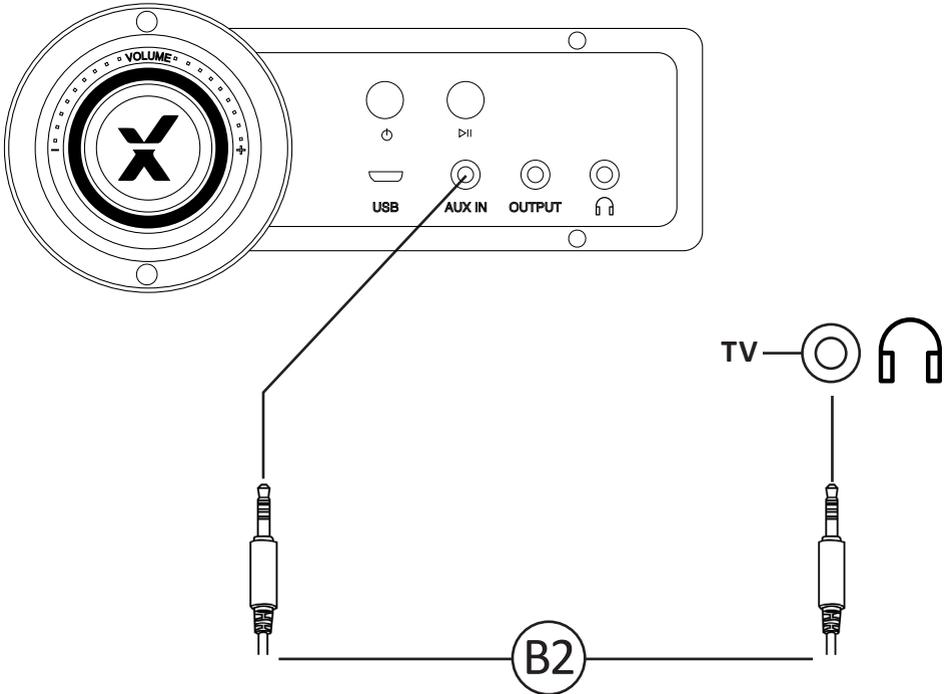


1. Connect **B2** cable to X Rocker control panel 3.5mm INPUT socket.
2. Connect other end of **B2** cable to the TV headphone socket.
3. Once connected to your TV, increase volume to 50% of the maximum for the best sound level.**

***NOTE:** If your TV does not feature a headphone socket then you may need to purchase an additional TOSlink adapter to get connected directly to a console for audio.

******Depending on your TV you may need to Increase the headphone volume separately in the TV sound settings.

Connect by controller: (PS4 systems only)

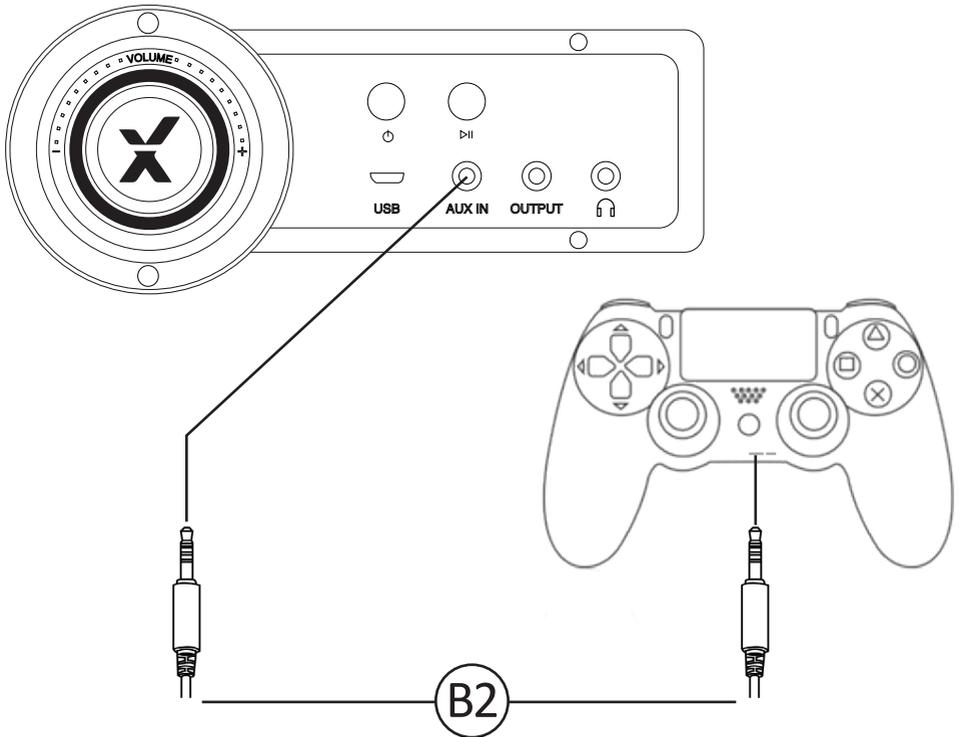


1. Connect the **B2** cable to the bottom of the PS4 controller via the headset socket.
2. Connect the other end of the **B2** cable to the chair via the green port.
3. With the PS4 turned on and in the main menu, press and hold the black PS button until the quick menu appears.
4. In this menu select **[Adjust sound and devices]**
5. Then select **[output to headphones]**
6. Change the setting from **[Chat Only]** to **[All audio]**
7. Make sure the volume in the previous menu is set to the maximum.

Bluetooth connection guide: (Mobile phones/tablet devices)

Setup:

On the Audio output device go into its Bluetooth settings, turn Bluetooth on if it is not on already and search for **XROCKER**. Upon finding this, select the **XROCKER** option. If a passcode is required the four digit code will be '0000'.

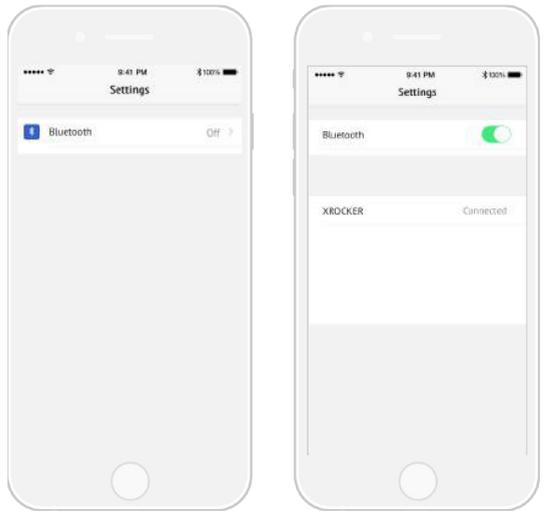

Troubleshooting tips

Issue	Troubleshooting steps
No power going to control panel	<ul style="list-style-type: none">• Make sure that the power cable is connected correctly.• Make sure that the power supply at the power source is working correctly.• With the chair turned to the ON position, give the power cable a slight wiggle in the port. If any lights flicker (or not) then please contact support (details below).
No sound	<ul style="list-style-type: none">• Review the connection methods on the previous page and try alternative connection methods if possible.• Confirm that the device/system is correctly configured as per previous connection guide.
Bluetooth mode cuts out during gameplay/No vibration or subwoofer sound via analogue connection	<ul style="list-style-type: none">• Please make sure that the volume of the source device is at a higher level to strengthen the audio signal.
The cables connected to my X Rocker have been broken accidentally	<ul style="list-style-type: none">• Please contact X Rocker support (service@acecasual.com) regarding this issue.
Interference over wireless connection	<ul style="list-style-type: none">• In this case, try another of the three wireless bands to isolate the signal.

Health and safety information

- Avoid immersing or allowing the X Rocker to come into contact with liquids.
- Please consult X Rocker Support before unscrewing any of the electrical components on the chair.
- Please be mindful of any cabling laid out between the X Rocker and power source/audio device.
- Please be mindful of cabling attached when moving/swivelling the X Rocker.
- If the cables or electrical equipment are broken then this may present a choking risk, please contact Support for replacements and dispose of these parts safely.
- Do not stand on the X Rocker or exceed the 250lbs weight limit via other means.
- If your X Rocker comes with a pedestal, do not lean back on the chair to the point in which the pedestal would lift off the ground.
- If your X Rocker comes with armrests, X Rocker armrests are designed for support and comfort during gameplay, please do not use these as support for getting in/out of the chair.
- Playing audio for long periods at loud volumes may contribute to difficulties in hearing.
- Please be considerate to others when playing audio through the X Rocker speakers at higher volumes.


Bienvenue sur X Rocker!

Merci d'avoir acheté cette chaise de jeu X Rocker. Vous êtes maintenant sur le point d'améliorer vos jeux préférés avec l'audio.!

Pour commencer, veuillez assembler la chaise en suivant les instructions de montage figurant sur la notice séparée, puis suivez les instructions ainsi le manuel pour basculer!

Table des matières

- 11** Contenu de la boîte et vue d'ensemble du panneau de commande
- 12** Guide de connexion filaire: TV (audio Xbox One et PS4)
- 13** Connexion par contrôleur (systèmes PS4 uniquement)
- 14** Guide de connexion Bluetooth (téléphones mobiles / tablettes)
- 15** Des conseils de dépannage
- 16** Informations sur la santé et la sécurité

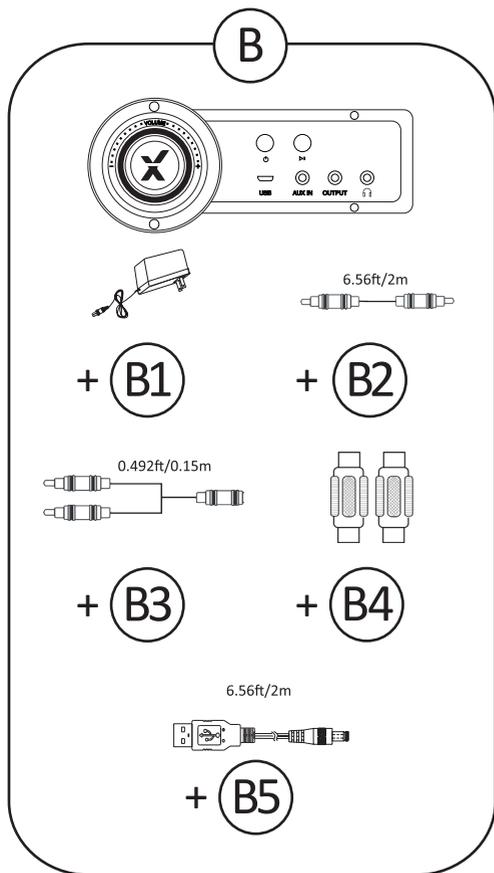

B1 - Adaptateur d'alimentation USB


B2 - Câble audio de 2m de 3,5 mm à 3,5 mm

B3 - Câble audio RCA de 15 cm à 3,5 mm (F)


B4 - Adaptateurs RCA femelle à femelle

B5 - Câble d'alimentation USB

Vue d'ensemble du panneau de commande

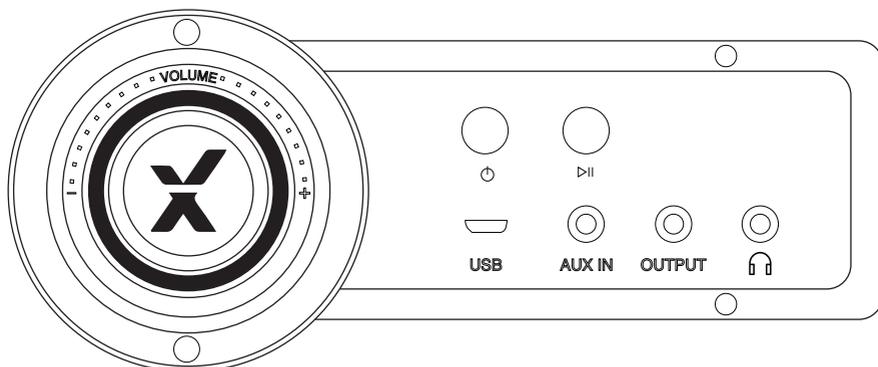

Guide de connexion filaire: TV (audio Xbox One et PS4)

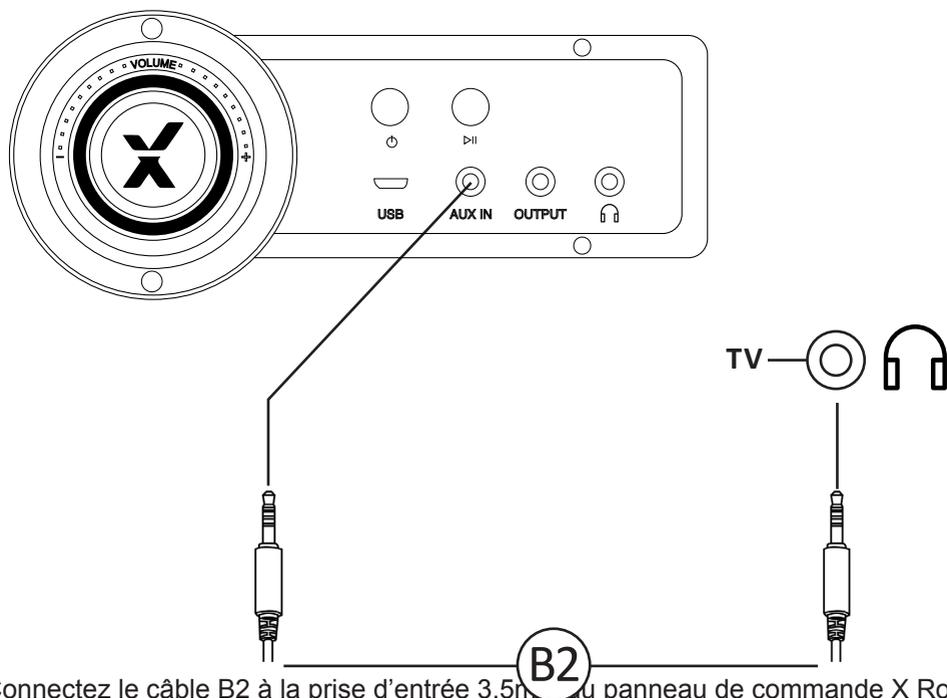


1. Connectez le câble B2 à la prise d'entrée 3.5mm du panneau de commande X Rocker
2. Connectez l'autre extrémité du câble B2 à la prise casque du téléviseur
3. Une fois connecté à votre téléviseur, augmentez le volume à 50% du maximum pour le meilleur niveau sonore **

F9A5FEI 9: Si votre téléviseur ne dispose pas de prise casque, vous devrez peut-être acheter un adaptateur TOSlink supplémentaire pour pouvoir vous connecter directement à une console pour l'audio.

** Selon votre téléviseur, vous devrez peut-être augmenter le volume du casque séparément dans les paramètres de son du téléviseur.




Connexion par contrôleur (systèmes PS4 uniquement)

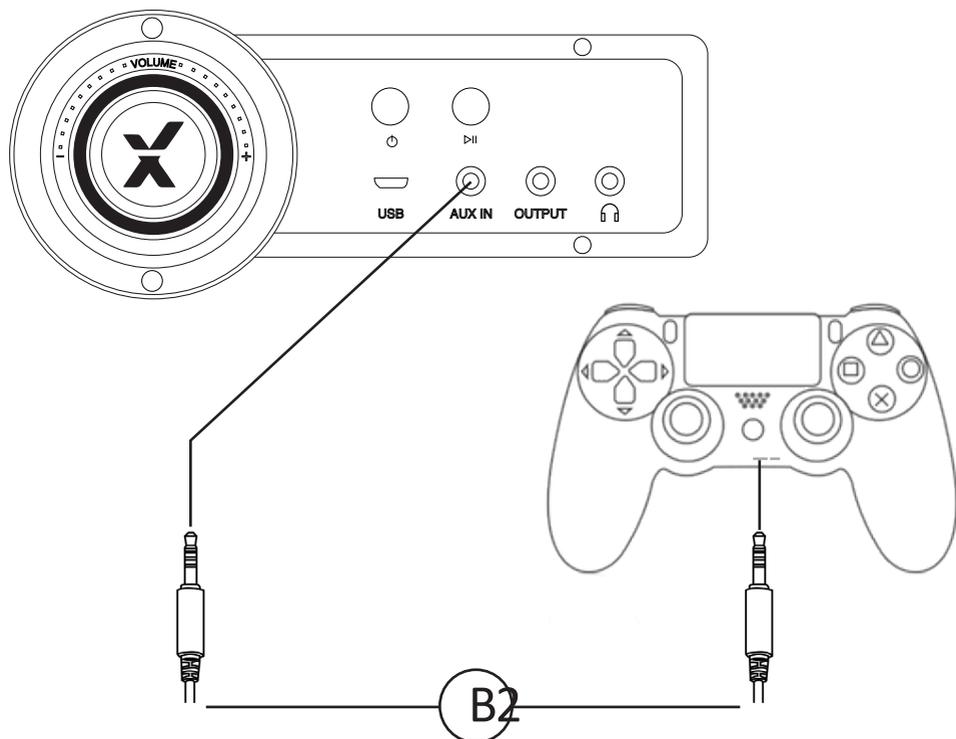

1. Connectez le câble B2 à la prise d'entrée 3.5mm du panneau de commande XRocker
2. Connectez l'autre extrémité du câble B2 au fauteuil via le port vert
3. Avec la PS4 allumée et dans le menu principal, maintenez le bouton noir enfoncé jusqu'à ce que le menu rapide apparaisse.
4. Dans ce menu, sélectionnez **[Ajuster le son et les périphériques]**.
5. Puis sélectionnez **[sortie au casque]**
6. Changez le réglage de **[Chat Only]** à **[All audio]**
7. Assurez-vous que le volume du menu précédent est réglé au maximum.

Guide de connexion Bluetooth: (téléphones mobiles / tablettes)

Configuration: sur le périphérique de sortie audio, entrez les paramètres Bluetooth, activez Bluetooth si ce n'est pas déjà fait et recherchez XROCKER. Après avoir trouvé cela, sélectionnez l'option XROCKER. Si un code d'accès est requis, le code à quatre chiffres sera '0000'.

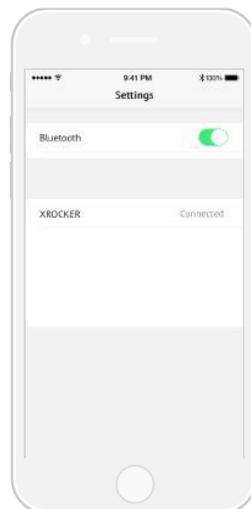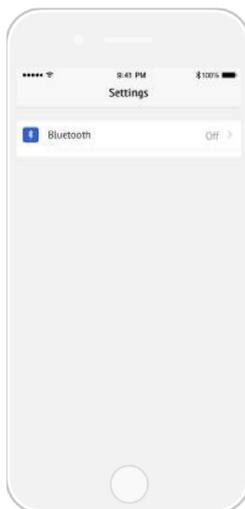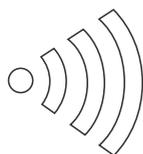

Des conseils de dépannage

Problème

étapes de dépannage

Aucune alimentation allant au panneau de contrôle

- Assurez-vous que le câble d'alimentation est correctement branché
 - Assurez-vous que l'alimentation à la source fonctionne correctement
 - Avec le fauteuil en position ON, faites légèrement bouger le câble d'alimentation dans le port. Si une lumière clignote (ou non), contactez le support (détails cidessous)
-

Pas de son

- Passez en revue les méthodes de connexion de la page précédente et essayez si possible d'autres méthodes de connexion
 - Vérifiez que le périphérique / système est correctement configuré conformément au guide de connexion précédent
-

Le mode Bluetooth est désactivé pendant le jeu / Aucune vibration ni son de subwoofer via une connexion analogique

- Assurez-vous que le volume du périphérique source est à un niveau supérieur pour renforcer la qualité audio.
-

Les câbles connectés à mon X Rocker ont été cassés accidentellement

- Veuillez contacter l'assistance X Rocker (service@acecasual.com) concernant ce problème.
-

Interférence sur la connexion sans fil

- Dans ce cas, essayez une autre des trois bandes sans fil pour isoler le signal.

Informations sur la santé et la sécurité

- Évitez d'immerger ou de laisser le X Rocker entrer en contact avec des liquides
- Veuillez consulter le support X Rocker avant de dévisser l'un des composants électriques.
- S'il vous plaît soyez conscient de tout câblage établi entre le X Rocker et la source d'alimentation / périphérique audio
- Veuillez faire attention au câblage attaché lors du déplacement / pivotement du X Rocker
- Si les câbles ou le matériel électrique sont cassés, cela peut présenter un risque d'étouffement. Veuillez contacter le support technique pour le remplacement et mettre ces pièces au rebut en toute sécurité.
- Ne vous tenez pas sur le X Rocker et ne dépassez pas la limite de poids de 250lbs par tout autre moyen.
- Si votre X Rocker est pourvu d'un pied, ne vous penchez pas en arrière sur le fauteuil jusqu'au point où le pied se soulèverait du sol.
- Si votre X Rocker est pourvu d'accoudoirs, les accoudoirs X Rocker sont conçus pour le soutien et le confort pendant le jeu.; veuillez ne pas les utiliser comme support pour vous asseoir ou vous lever.
- Écouter de la musique pendant de longues périodes à des volumes sonores élevés peut entraîner des difficultés d'audition
- S'il vous plaît soyez attentif aux autres lorsque vous lisez de l'audio via les haut-parleurs à volume élevé

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IC

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas causer d'interférences, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC Radiation Exposure Statement:

This equipment complies with Canada radiation exposure limits set forth for uncontrolled environments.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Déclaration d'IC sur l'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux radiations définies par le Canada pour des environnements non contrôlés.

Cet émetteur ne doit pas être installé au même endroit ni utilisé avec une autre antenne ou un autre émetteur.

Need Help? Email: service@acecasual.com

Phone: 866-969-2603

www.xrockernation.com

IMPORTANT: You must keep your original retail receipt as proof of purchase.