BLAST™ PORTABLE BLENDER

BC100ANZ Series | Owner's Guide

1 Read all instructions prior to using the appliance and its accessories.

2 Use only a power supply with an extra low voltage corresponding to the marking on the bottom of the motor base.

3 **ALWAYS** exercise care when handling the BlastBlade™ Assembly. The blad

PARTS

A Sip Lid
B Carry Handle
C Blending Vessel
D Vessel Cap*
E Blade Cover*
F Motor Base with BlastBlade™ Assembly
G USB-C Charging Cord
H Charging Port

*Accessories and unit color may vary by model.

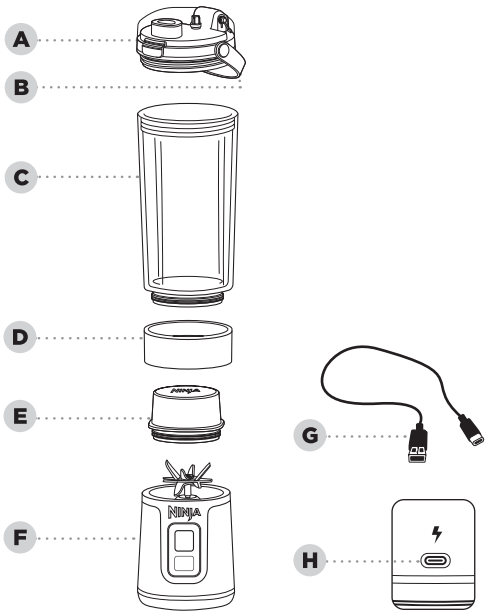

Motor Base Back

CHARGING

Charge the unit using the provided charging cord and a 5V 3A power supply until the LEDs illuminate solid green. Charging port is located at the back of the motor base.

BEFORE FIRST USE

IMPORTANT: Review all warnings at the beginning of this Owner's Guide before proceeding.

NOTES:
- Handle the BlastBlade™ Assembly by grasping around the motor base.
- All attachments are BPA free. All attachments **EXCEPT** the motor base are top-rack dishwasher safe. **DO NOT** use a heated dry cycle. Ensure lid and vessel are removed from motor base before placing in the dishwasher. Exercise care when handling BlastBlade™ Assembly.

Remove all packaging materials from the unit. Exercise care when unpacking BlastBlade™ Assembly, as the blade are sharp.

Wash vessel, lid, and BlastBlade™ Assembly in warm, soapy water using a dishwashing utensil with a handle to avoid direct contact with the blades. **DO NOT** submerge the motor base in water when cleaning. Exercise care when handling BlastBlade™ Assembly, as the blades are sharp.

Thoroughly rinse and air-dry all appropriate parts.

USING THE CONTROL PANEL

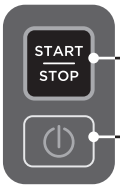

PROGRAMS:

START/STOP BUTTON
Press Start/Stop button once to activate the 30-second blend cycle.

POWER BUTTON
Press Power button to turn unit **ON** and **OFF**.

TROUBLESHOOTING	LED Shows	Solutions
Vessel and Base are Not Aligned	Flashing WHITE	Ensure vessel and motor base are aligned using the arrows on the back of motor base and vessel.
Blades are Blocked	Flashing ORANGE	Move lodged ingredients from blade and restart blend program.
Needs Charge	Solid RED	Charge unit.
Abnormal charger	Flashing RED and BLUE	Defective charger, unplug and find correct 5V 3A charger.
Unit Cool Down Time Out	Clockwise-moving ORANGE LEDs	Let unit sit at room temp for 15 minutes before using again.
While Charging	Flashing WHITE and RED	Call Customer Service at AUS +61 2 8801 7666 | NZ +64 800 112 660.
While Blending	Flashing RED in the bottom left and top right	Call Customer Service at AUS +61 2 8801 7666 | NZ +64 800 112 660.

USING THE BLENDING VESSEL

IMPORTANT: Review all warnings at the beginning of this Owner's Guide before proceeding.

1 Ensure the motor base is fully charged and the vessel is properly installed by aligning vessel arrow with motor base arrow located on the back of the motor base.

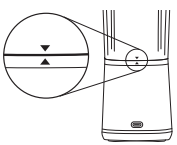

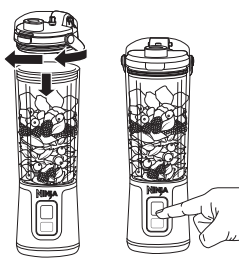

2 Turn unit **ON** by pressing the ⏻ button until Start/Stop button lights illuminate.

3 Add ingredients, starting with liquids to the **MIN LIQUID** line then solid ingredients. If using ice, always add last. **DO NOT** fill ingredients past the **MAX FILL** line. Secure lid onto the vessel, twisting clockwise to tighten.

4 Blend for a 30-second blend cycle by pressing the Start/Stop button.

5 Open the sip lid to sip, or remove the lid to pour out blender outputs into another container. **DO NOT** remove vessel from motor base when filled. Empty vessel prior to removing from motor base.

6 After blending, power **OFF** the unit by pressing the ⏻ button. Motor base should be turned **OFF** when drinking from the sip lid and when blender is no longer in use.

7 Refer to the Care & Maintenance section for cleaning and storage instructions.

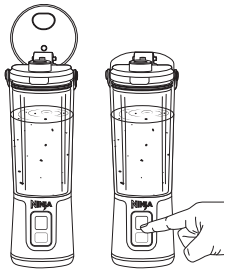

CARE & MAINTENANCE

CLEANING

Blades can still operate when the lid is removed. Always turn the unit OFF when cleaning without the lid on or when the BlastBlade™ Assembly is exposed.

Hand-Washing

Wash vessel, lid, and BlastBlade™ Assembly with warm, soapy water. Use a dishwashing utensil or cloth to clean the BlastBlade™ Assembly on the motor base. Exercise care when handling the BlastBlade™ Assembly on the motor base as the blades are sharp. Wipe the motor base with a clean, damp cloth. **DO NOT** submerge the motor base in water. Thoroughly rinse and air-dry all appropriate parts.

Motor Base

The USB-C port is water resistant, which means the motor base can get rinsed in the sink; **HOWEVER DO NOT** put the motor base in the dishwasher or submerge it in water. Ensure the USB-C charger is not inserted before cleaning. After cleaning, let the USB-C charging port air-dry for 30 minutes before charging the unit.

DEEPER CLEAN

Dishwasher

Vessel and sip lid are top-rack dishwasher safe. **DO NOT** use a heated dry cycle. Ensure the vessel and sip lid are removed from the motor base before being placed in the dishwasher.

STORING

Store the unit upright and with the lid, vessel, and motor base fully assembled.

DO NOT store blended or unblended ingredients in the vessel with the BlastBlade™ Assembly for prolonged periods of time.

DO NOT stack items on top of the vessel. Store any remaining attachments alongside the unit or in a cabinet where they will not be damaged or create a hazard.

ORDERING REPLACEMENT PARTS

To order additional parts and attachments, visit **ninjakitchen.com.au | ninjakitchen.co.nz**.

TROUBLESHOOTING GUIDE

⚠WARNING: To reduce the risk of shock and unintended operation, turn OFF unit before troubleshooting.

Ensure the unit is not charging when troubleshooting. Ensure the unit is fully charged and vessel is properly aligned.

Control panel doesn't turn off.
- Press the ⏻ button to turn the unit **ON** and **OFF**.

Doesn't mix well; ingredients get stuck.
- When filling the vessel, start with liquid to the **MIN LIQUID** line, then fresh fruit or veggies, followed by leafy greens or herbs. Add your seeds, powders, or nut butters. Finish with ice or frozen ingredients.
- If ingredients are routinely getting stuck, adding some liquid will usually help. Ensure you have filled the vessel to or above the **MIN LIQUID** line. You can also shake the blender while blending or turn the blender upside down, start a blend cycle, and turn it right side up to move ingredients while blending.

Sip lid is hard to assemble on the vessel.
- Set the assembled motor base and vessel on a level surface. Place the sip lid on the top of the vessel and align the threads so the sip lid sits flat. Turn clockwise until you have a tight seal.

Vessel is hard to assemble on the motor base.
- Set the motor base on a level surface. Place the vessel on the top of the motor base and align the threads so the vessel sits flat. Turn clockwise until you have a tight seal. The LEDs on the display will be solid purple when the vessel is properly installed.

Mann&Noble

ONE (1) YEAR LIMITED WARRANTY

For warranty claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase. This warranty does not replace but is in addition to your statutory rights.

If your product becomes defective due to faulty material or workmanship within a period of one (1) year from the date of purchase, we warrant to do the following:

- **For New Zealand Consumers:** We will replace the defective/faulty part with a new product, free of charge, or if the unit is deemed defective/faulty we replace the unit with an equivalent or upgraded model, at our discretion.
- **For Australian Consumers:** Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase.

Your warranty is subject to the following conditions

- DO NOT operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water.
- To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.
- The item has not sustained damage through foreign objects, substances or accident

Customer costs within warranty

The customer is responsible for any inwards freight charge to return a product for warranty if requested, and outward freight charge for warranty parts and or replacement unit.

Who is covered?

This warranty applies only to the original purchaser, who bought the product from an authorised retailer and may not be transferred. Proof of purchase is required.

What is not covered?

- Accessories supplied with the item.
- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.

REGISTER YOUR PURCHASE

AU ninjakitchen.com.au/apps/product-registration
NZ ninjakitchen.co.nz/apps/product-registration

Scan QR code using mobile device

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage:	5V⎓, 0.5A–3A

Proudly distributed by
Mann & Noble Pty Ltd
Building D, 33 Quarry Road
Erskine Park NSW, Australia, 2759
AU 02 8801 7666 | NZ 0800 112 660
AU ninjakitchen.com.au | NZ ninjakitchen.co.nz

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

BLASTBLADE and NINJA BLAST are trademarks of SharkNinja Operating LLC.

© 2023 SharkNinja Operating LLC

BC100ANZSeries_IB_MP_Mv7_231002