# cooking collection

## Instructions for use and warranty details

To register your warranty or make a warranty claim, scan this QR code:

## Fixed Undermount Rangehood

Model: RHUC92

kleenmaid

# Contents


01 Contents.....1

02 Warnings.....2

03 Safety Warning.....3

04 Measurement.....4

05 Installation.....6

06 Use.....9

07 Maintenance.....10

08 Trouble Shooting.....13

09 Main Parameters.....14

10 Disposal.....14


Before using this appliance please study this entire User Manual carefully. Keep this manual in a safe place for future reference. Ensure that other people using the product are familiar with these instructions as well. The latest version of this manual is available on our website. (See back cover for details.)

- This appliance is not intended for use by persons (including children) with reduced physical,sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
-
-
-
-
-
-
-
-
-

- Screw the stainless steel frame back into place using the screws removed as described above.

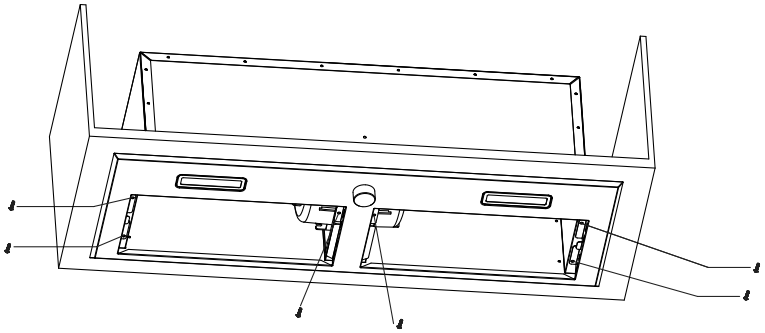

- Reconnect the wires to the commands and light.

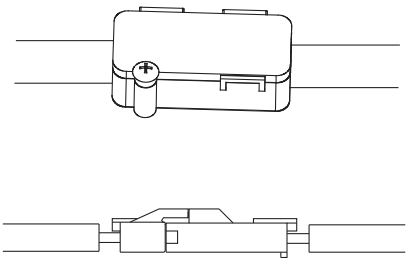

- Replace the metal filter.

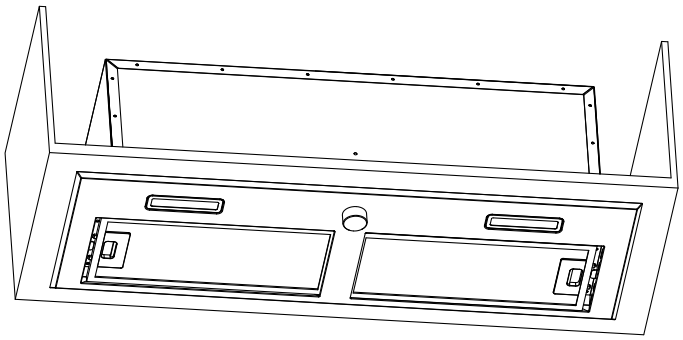

- Install the air outlet ducting (optional).
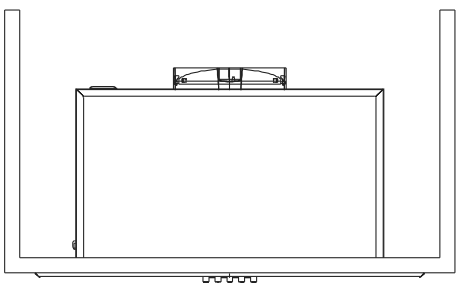
NOTE: When installing in the ducted mode, connect the rangehood using rigid smooth surface ducting of 150mm diameter (not supplied). The maximum recommended overall ducting path to the outside of the building (for 150mm diameter smooth-walled, rigid pipe only) is 10m, reduced by 2.5m for each 90’ bend in the ducting path.